


## AEROSTAR AIRSPACE ECHO

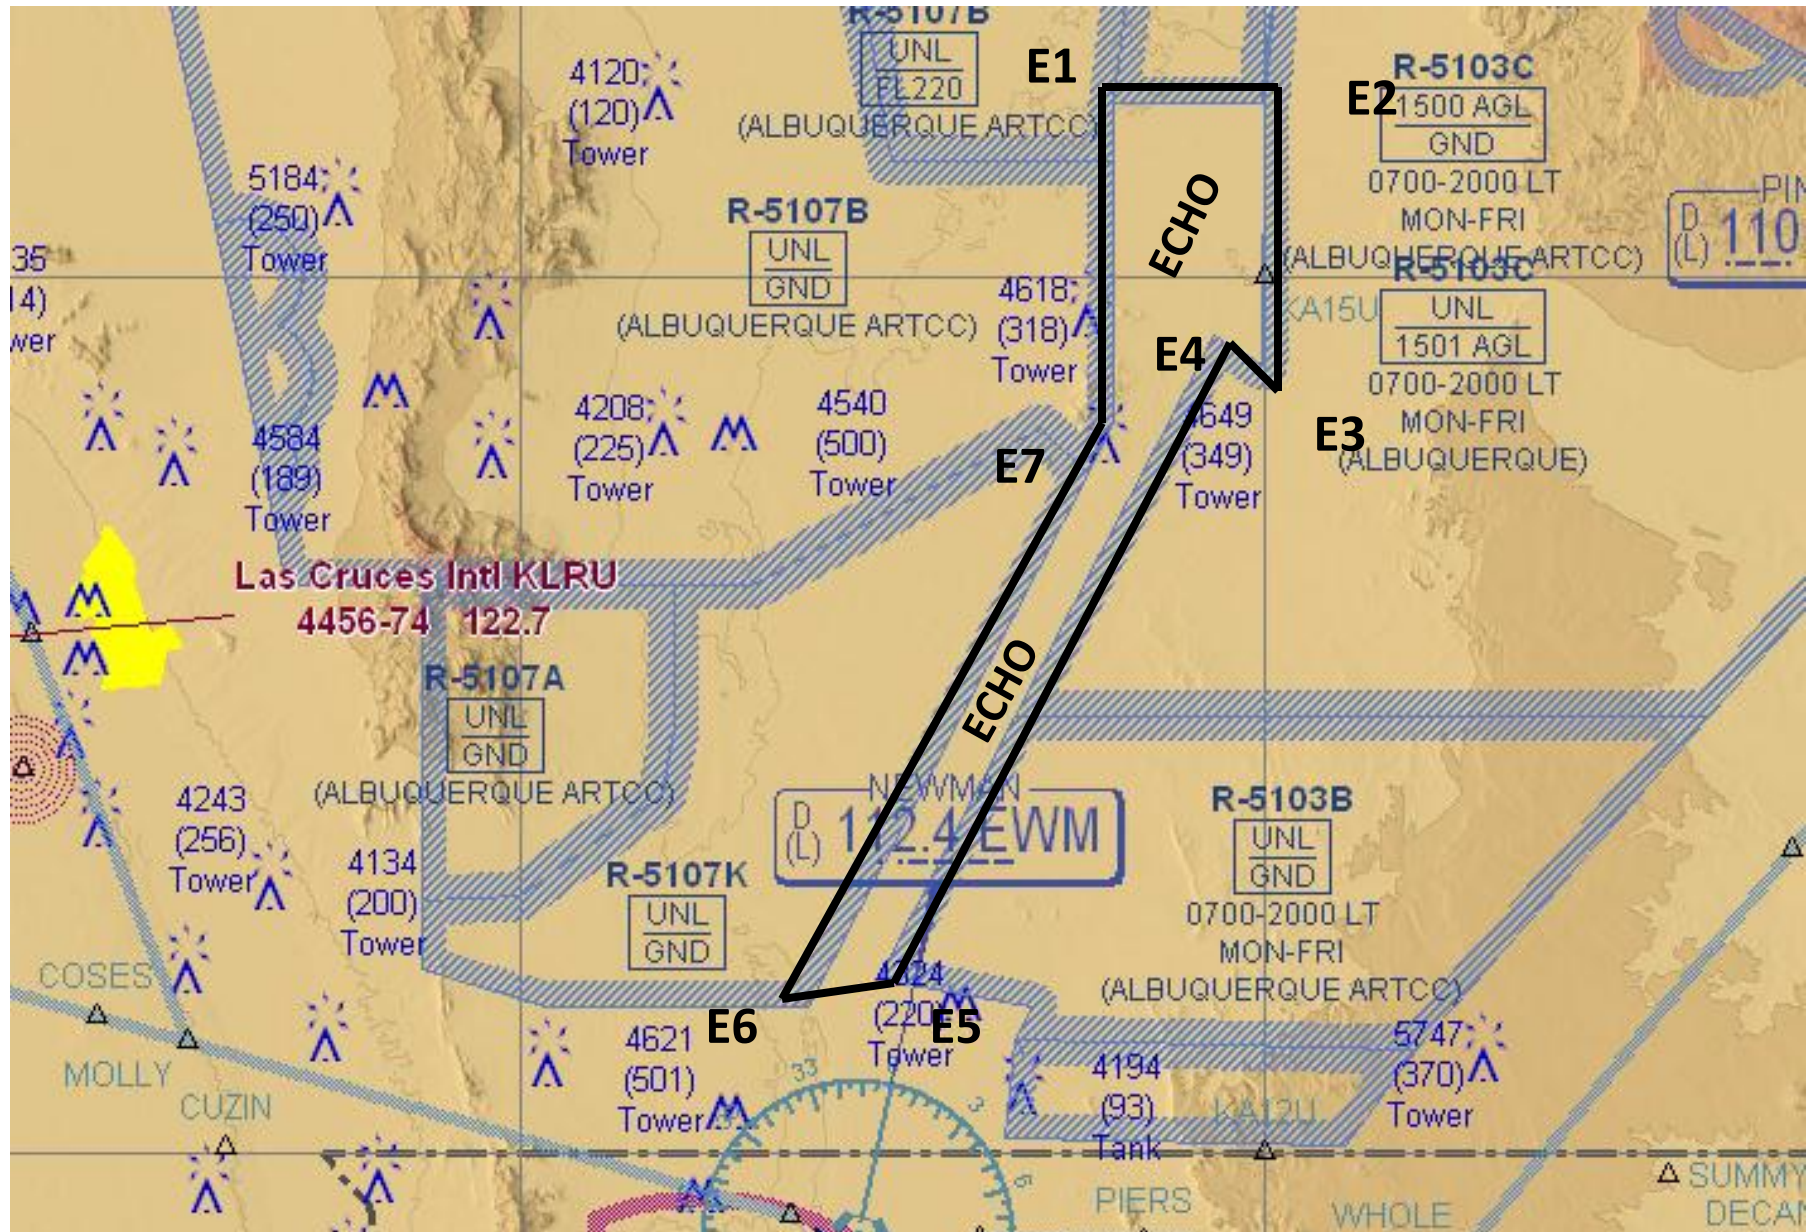

## AEROSTAR AIRSPACE ECHO

Beginning at 32-36-00N / 106-06-02W (E1) to  
32-36-00N / 106-00-02W (E2) to  
32-27-40N / 106-00-02W (E3) to  
32-28-00N / 106-02-02W (E4) to  
32-06-00N / 106-15-32W (E5) to  
32-05-00N / 106-18-22W (E6) to  
32-25-00N / 106-06-02W (E7) to  
point of beginning

Surface to 17,500 MSL