


VOR/DME PVD	APP CRS	Rwy Ldg	N/A
115.6	188°	TDZE	N/A
Chan 103		Apt Elev	18

VOR-A
QUONSET STATE (OQU)

⚠ Circling Rwy 5 NA at night. When local altimeter setting not received, use PVD altimeter setting and increase all MDAs 40 feet and visibility Cat D ¼ SM.

MISSED APPROACH: Climb to 700 then climbing left turn to 2000 on heading 120° and PVD VOR/DME R-165 to FALMA INT/MVY 25.3 DME and hold.

ATIS	PROVIDENCE APP CON*	QUONSET TOWER*	GND CON	UNICOM
118.6	123.675 244.875	126.35(CTAF) 252.9	134.5 226.675	122.95

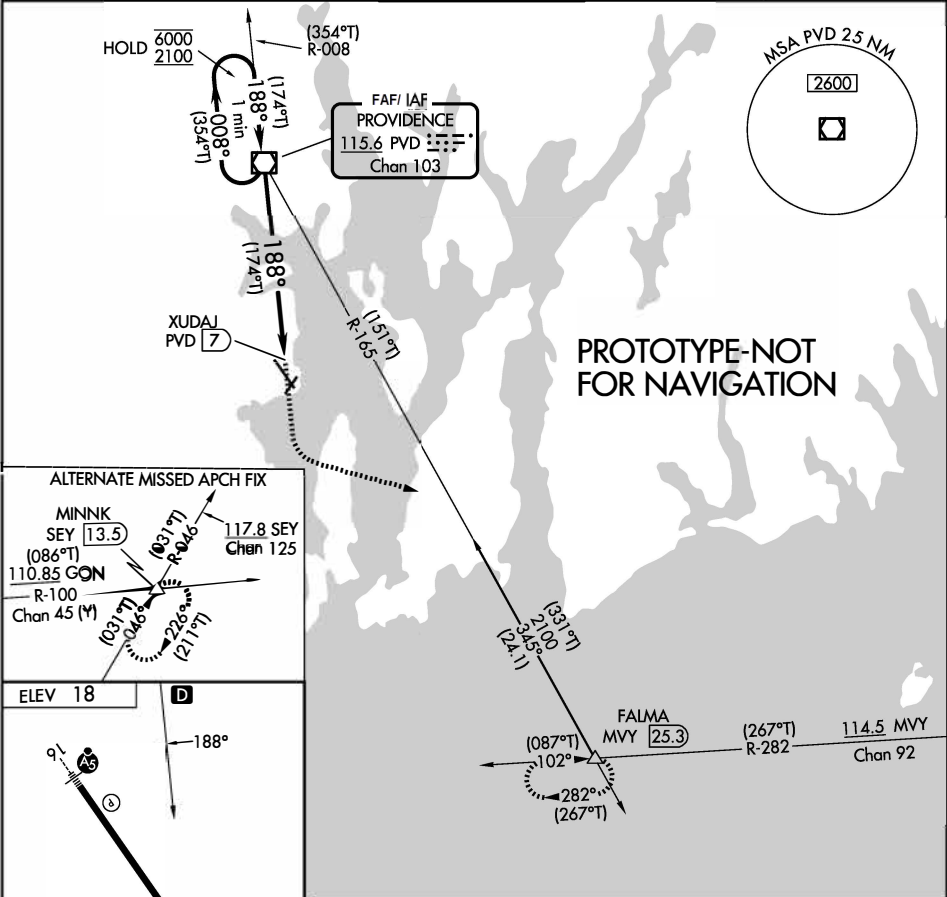

One Minute Holding Pattern	PVD VOR/DME	700	2000	PVD R-165	FALMA
6000 2100	(354°T) 008° 188° (174°T)	↑	hdg 120°	△	
TWR	XUDAJ PVD 7				
HIRL Rwy 16-34 1					
MIRL Rwy 5-23 1					
REIL Rwy 5 and 23 1					
FAF to MAP 7 NM					
Knots	60	90	120	150	180
Min:Sec	7:00	4:40	3:30	2:48	2:20