


VORTAC FWA 117.8 Chan 125	APP CRS 224°	Rwy Ldg 11981 TDZE 799 Apt Elev 815
---	------------------------	--

VOR or TACAN RWY 23



FORT WAYNE INTL (FWA)

DME required.		MISSED APPROACH: Climbing left turn to 3000 on FWA VORTAC R-134 to OSBER/FWA 22 DME and hold.	
ASR			

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6
-------------------------------	--	--	-------------------------------


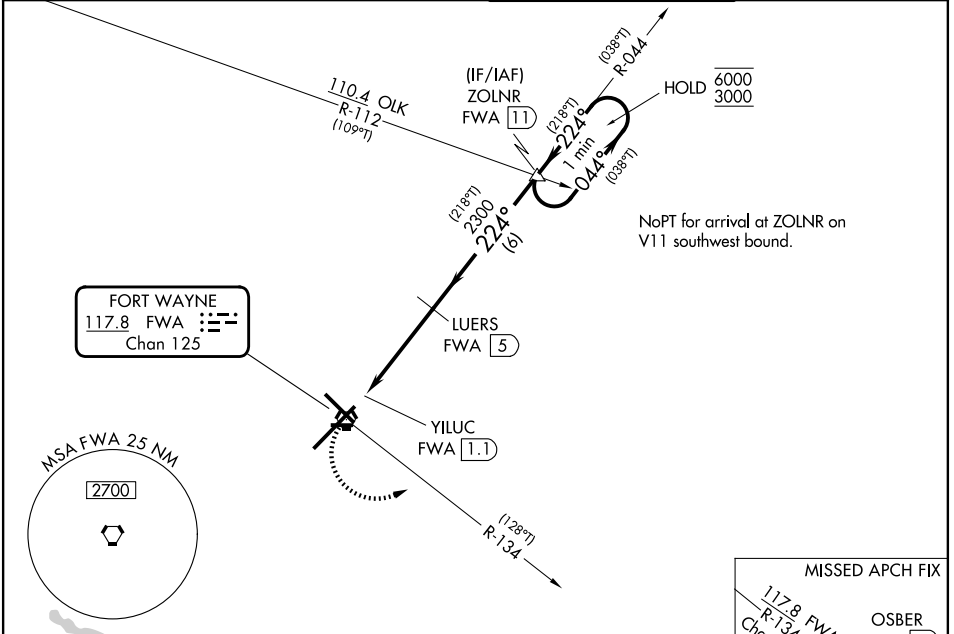


FORT WAYNE
117.8 FWA
Chan 125

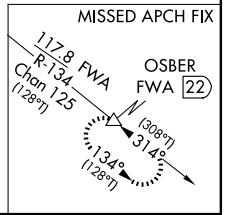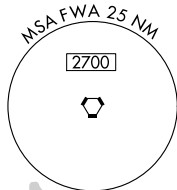

ELEV 815	D	TDZE 799
----------	----------	----------

PROTOTYPE-
NOT FOR NAVIGATION

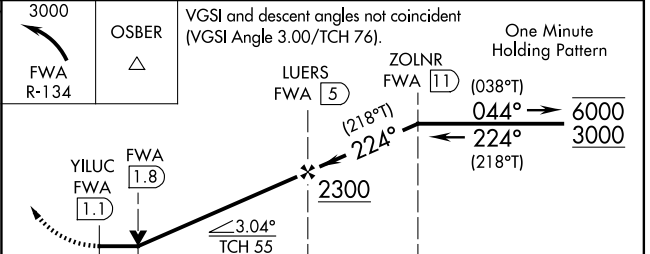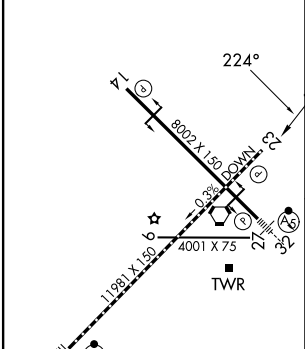

CATEGORY	A	B	C	D	E
S-23	1300/55	501 (500-1)	1300-1½	501 (500-1½)	
CIRCLING	1300-1	485 (500-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)