


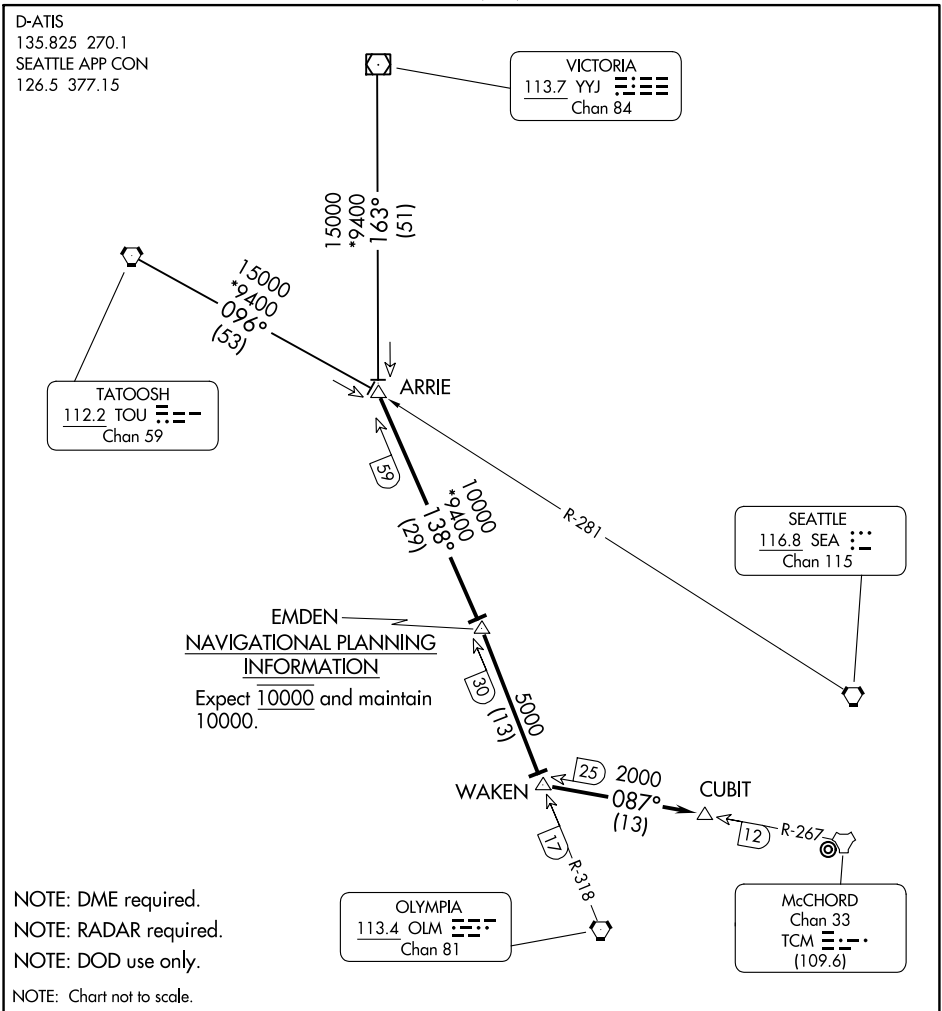

ARRIVAL ROUTE DESCRIPTION

TATOOSH TRANSITION (TOU.ARRIE8): From over TOU VORTAC on TOU R-096 to ARRIE. Thence. . . .

VICTORIA TRANSITION (YYJ.ARRIE8): From over YYJ VOR/DME on YYJ R-163 to ARRIE. Thence. . . .

. . . .From over ARRIE on OLM R-318 and TCM R-267 to CUBIT, expect RADAR vectors to final approach course.

LOST COMMUNICATIONS: Proceed direct to TCM TACAN.