

Flight Procedures Cover Page	Task Action: FLIGHT CHECK	Task Type: IAP	Estimated Chart Date: 11/27/2025	APWS Task ID: AE7BF080934449AAB1F42106A0BF6777	APWS Project ID: 00E4F66CDF7549BD9C053CB487A8B84F
Procedure: RNAV (GPS) RWY 35 AMDT 1		Enroute: NO	Specialist: Bristow, Travis		Agreement Number:
Airport ID: E30			Airport City: BALLINGER		State: TX
Facility ID:	Facility Type:	Flight Inspection Remark Type: New FC Slot			
Procedure Comments: ACTIVE AIRPORT AND RUNWAY DATA USED. CLEARS NOTAM: FDC 4/9700. CONTACT DAVID DANNER, AJV-A421, 405-905-5077. QUALITY 38 CHECKED QUALITY 34 CHECKED					

BALLINGER, TEXAS

AL-6881 (FAA)

FIG

WAAS CH 86228 W35A	APP CRS 352°	Rwy Ldg 3909 TDZE 1739 Apt Elev 1739
--	------------------------	---

RNAV (GPS) RWY 35

BRUCE FLD (E30)

RNP APCH - GPS.



Rwy 35 helicopter visibility reduction below 1 SM NA. Straight-in Rwy 35 NA at night, Circling Rwy 35 NA at night. Use SJT altimeter setting; when not received, use BBD altimeter setting and increase all MDAs 20 feet and LNAV visibility Cat C and LP visibility Cat C $\frac{1}{8}$ SM.


MISSED APPROACH: Climb to 3500 direct RIREE and hold.

SJT ASOS
128.45


SAN ANGELO APP CON ★
125.35 354.1

CTAF
122.90

MISSED APCH FIX


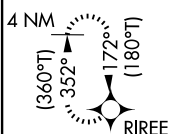


PROTOTYPE-NOT
FOR NAVIGATION

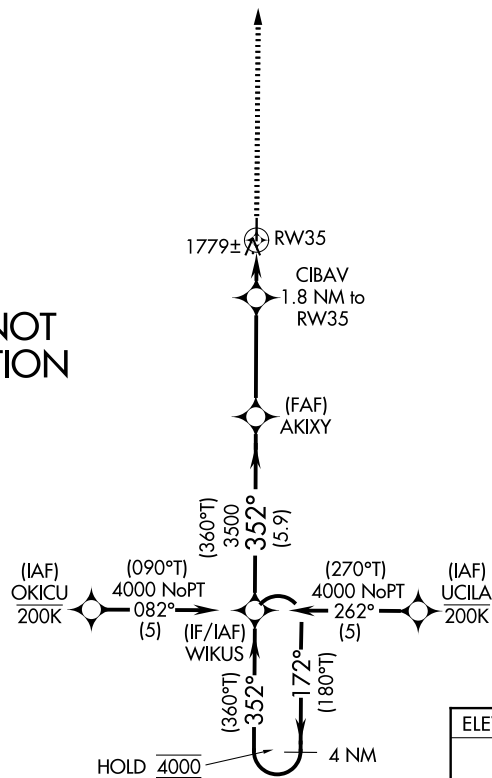

ELEV 1739

TDZE 1739

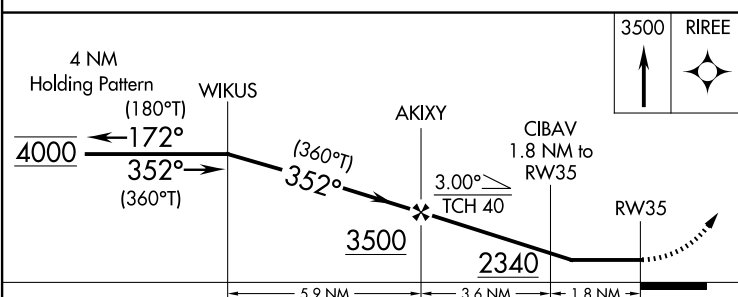

CATEGORY	A	B	C	D
LP MDA	2140-1	401 (500-1)	2140-1 $\frac{1}{8}$ 401 (500-1 $\frac{1}{8}$)	NA
LNAV MDA	2160-1	421 (500-1)	2160-1 $\frac{1}{4}$ 421 (500-1 $\frac{1}{4}$)	NA
CIRCLING	2220-1	481 (500-1)	2480-2 $\frac{1}{4}$ 741 (800-2 $\frac{1}{4}$)	NA

BALLINGER, TEXAS

BRUCE FLD (E30)

Amdt 1 FIG

31°40'N-99°59'W

RNAV (GPS) RWY 35

AUTOMATED AL-6881 RNAV (GPS) RWY 35

SC-3
06/09/2025
COMPILER: JNE
REVIEWER:
DBL CHKR:
EFF DATE: FIG

WAAS CH 86228 W35A	APP CRS 352°	Rwy Idg TDZE Apt Elev	3909 1738 1738
--	------------------------	-----------------------------	---

OLD

RNAV (GPS) RWY 35

BRUCE FLD (E30)






DME/DME RNP-0.3 NA. Use San Angelo Rgnl/Mathis Fld altimeter setting, if not received use Curtis Field altimeter setting and increase all DA/MDAs 20 feet.

MISSED APPROACH: Climb to 3500 direct RIREE and hold.


SAN ANGELO APP CON★
125.35 354.1

CTAF
122.90

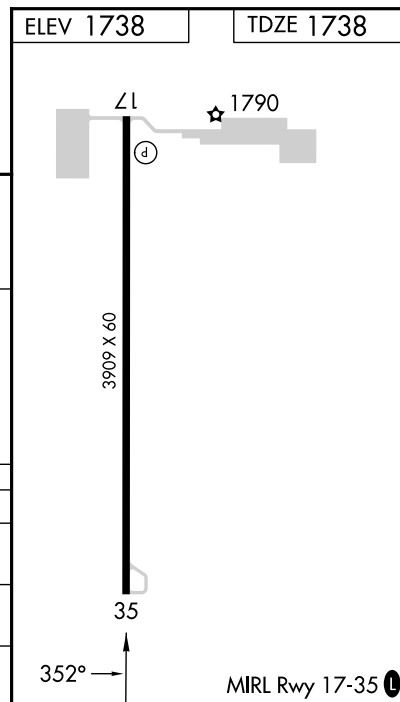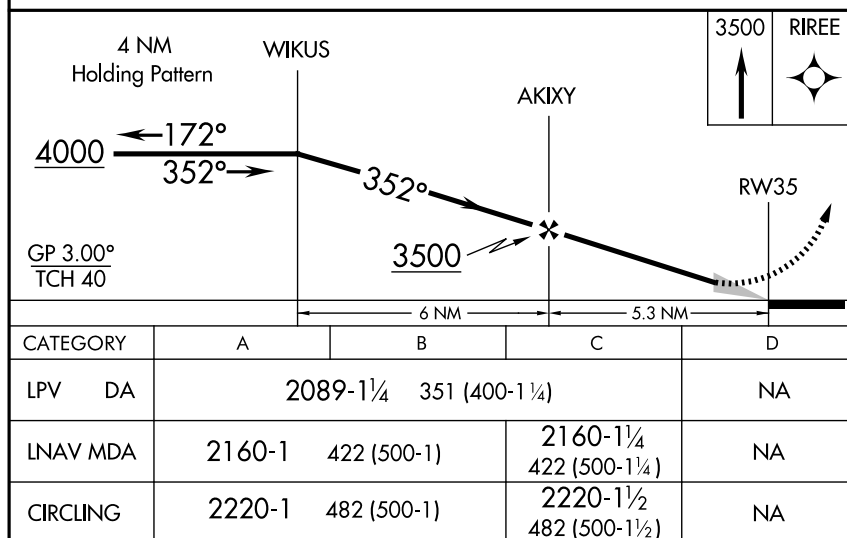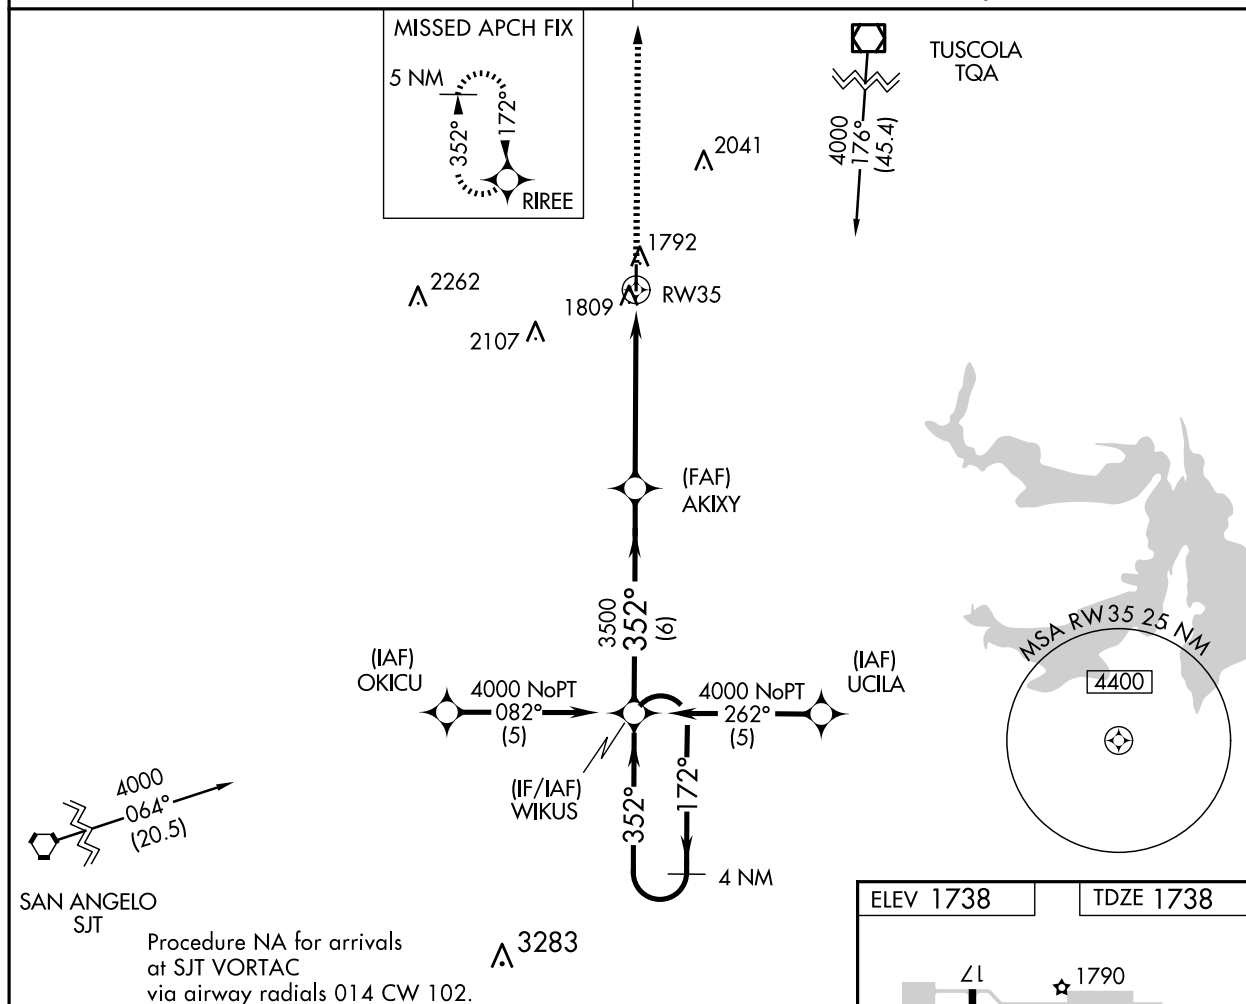



KE30
BRUCE FLD
BALLINGER, TX
RNAV (GPS) RWY 31
AMDT 1
1:100,000 CIRCLE

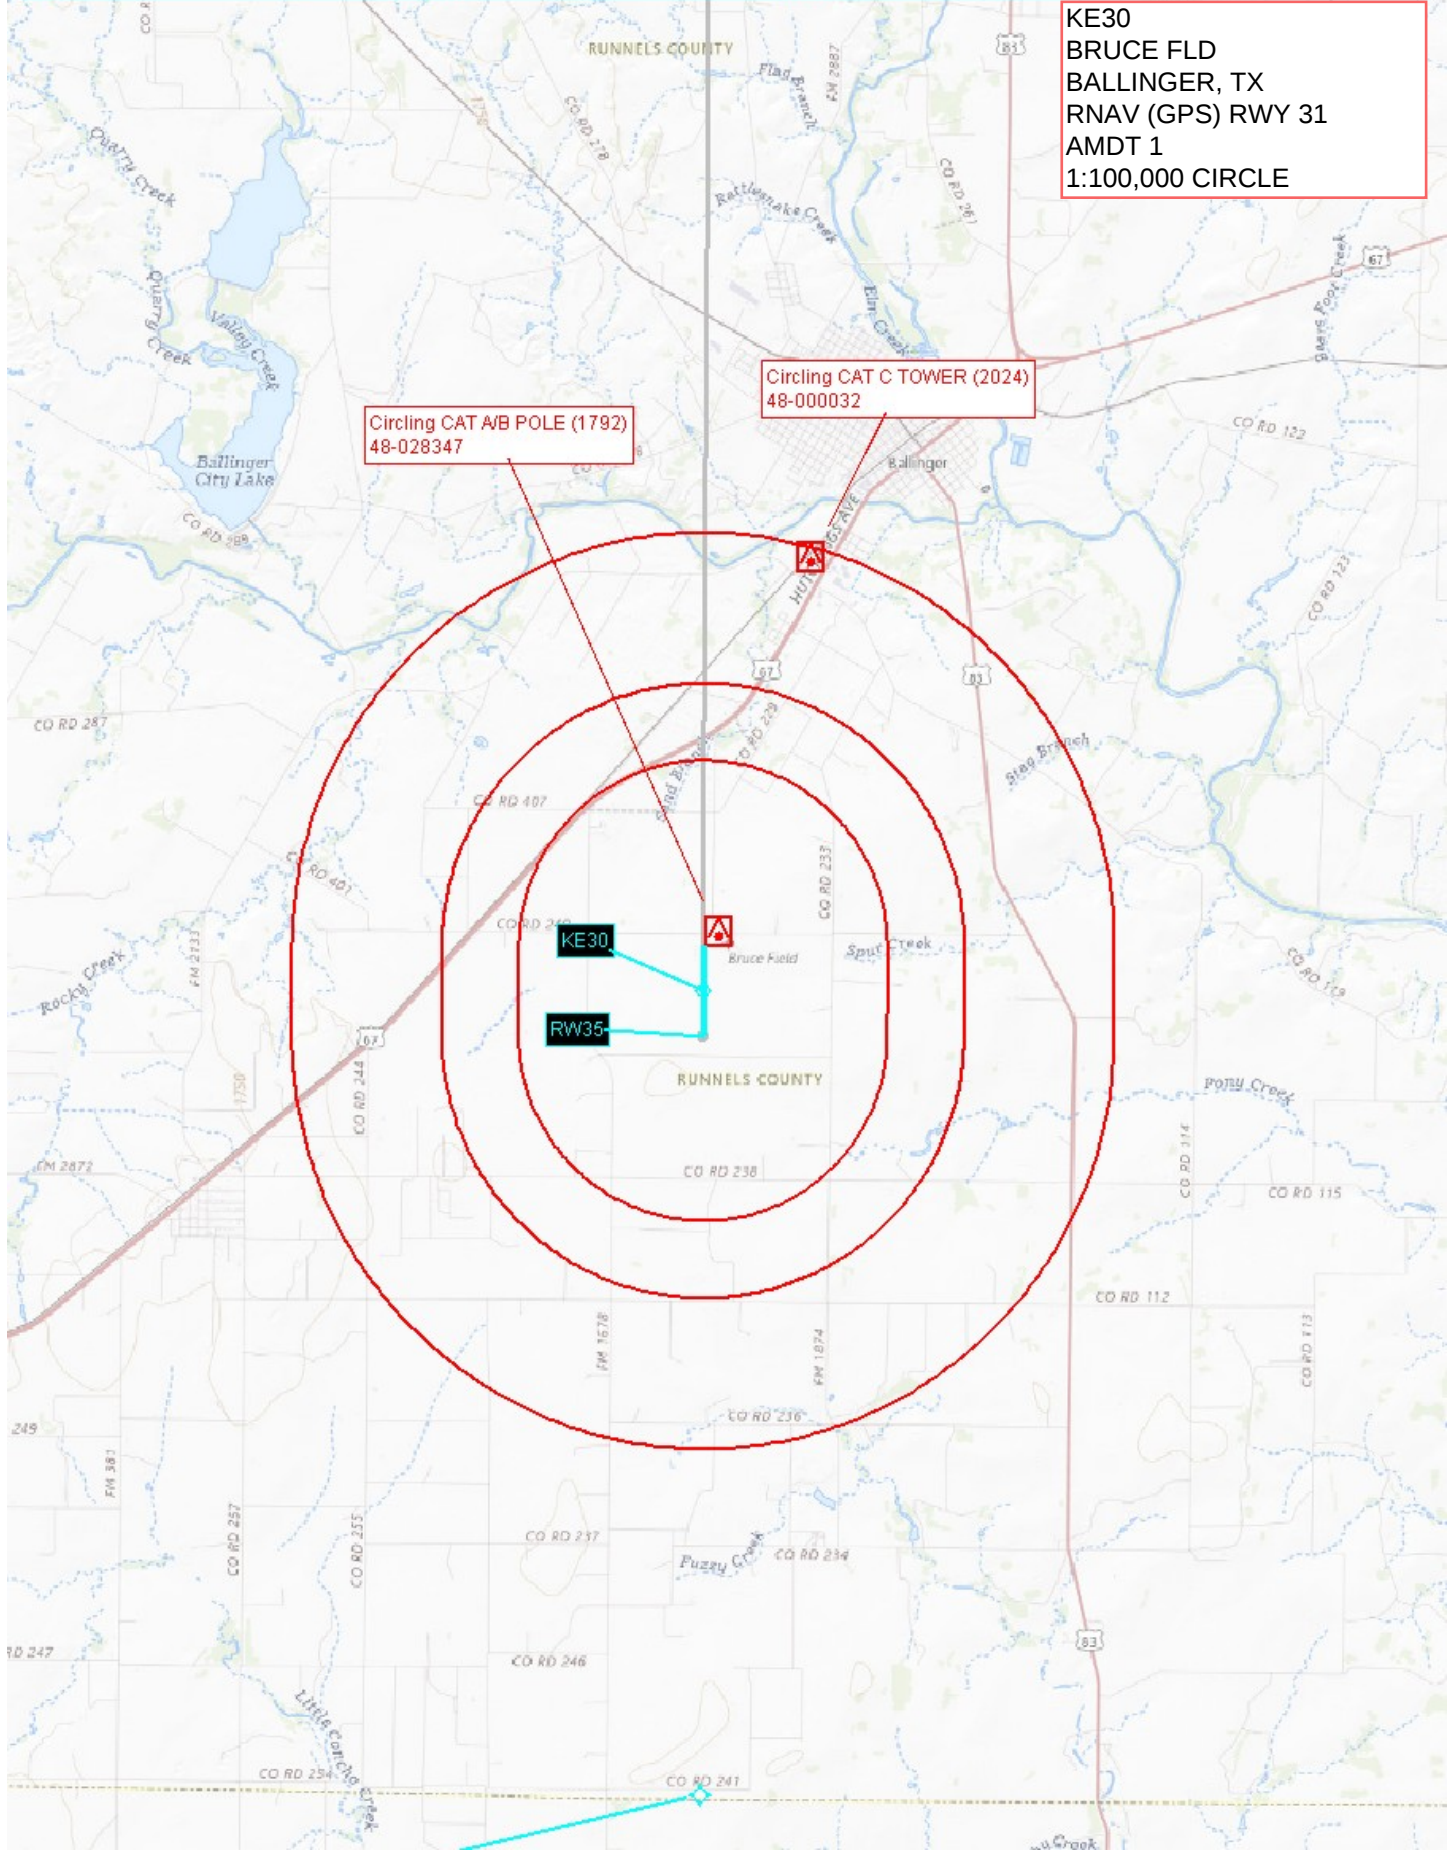

Circling CAT A/B POLE (1792)
48-028347



Circling CAT C TOWER (2024)
48-000032

KE30

RW35

RUNNELS COUNTY



Bruce Field

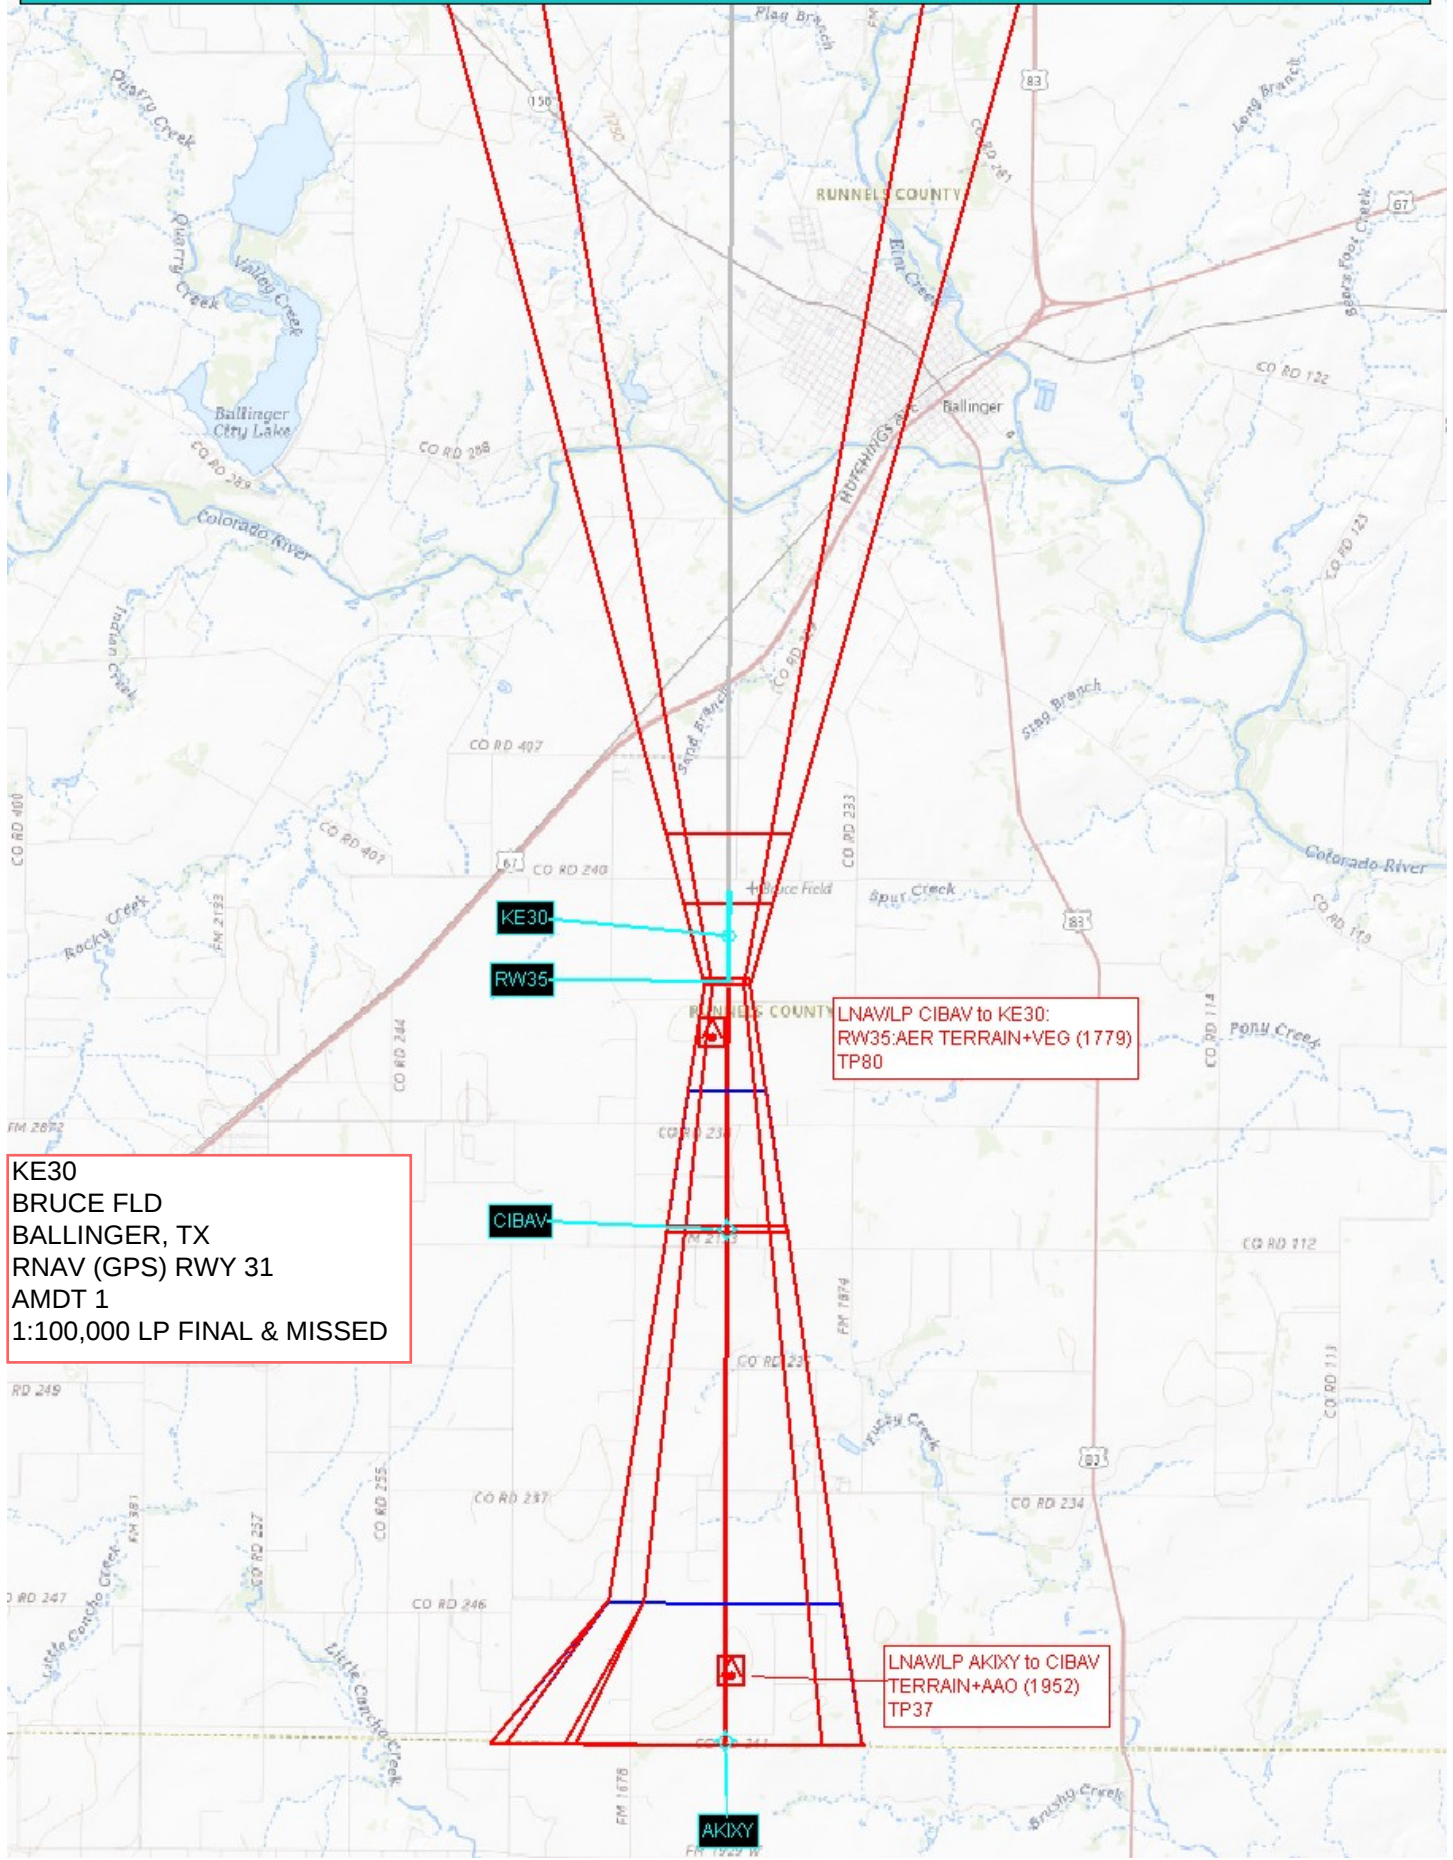

KE30
BRUCE FLD
BALLINGER, TX
RNAV (GPS) RWY 31
AMDT 1
1:100,000 LP FINAL & MISSED

LNAV/LP CIBAV to KE30:
RW35:AER TERRAIN+VEG (1779)
TP80

LNAV/LP AKDY to CIBAV
TERRAIN+AAO (1952)
TP37

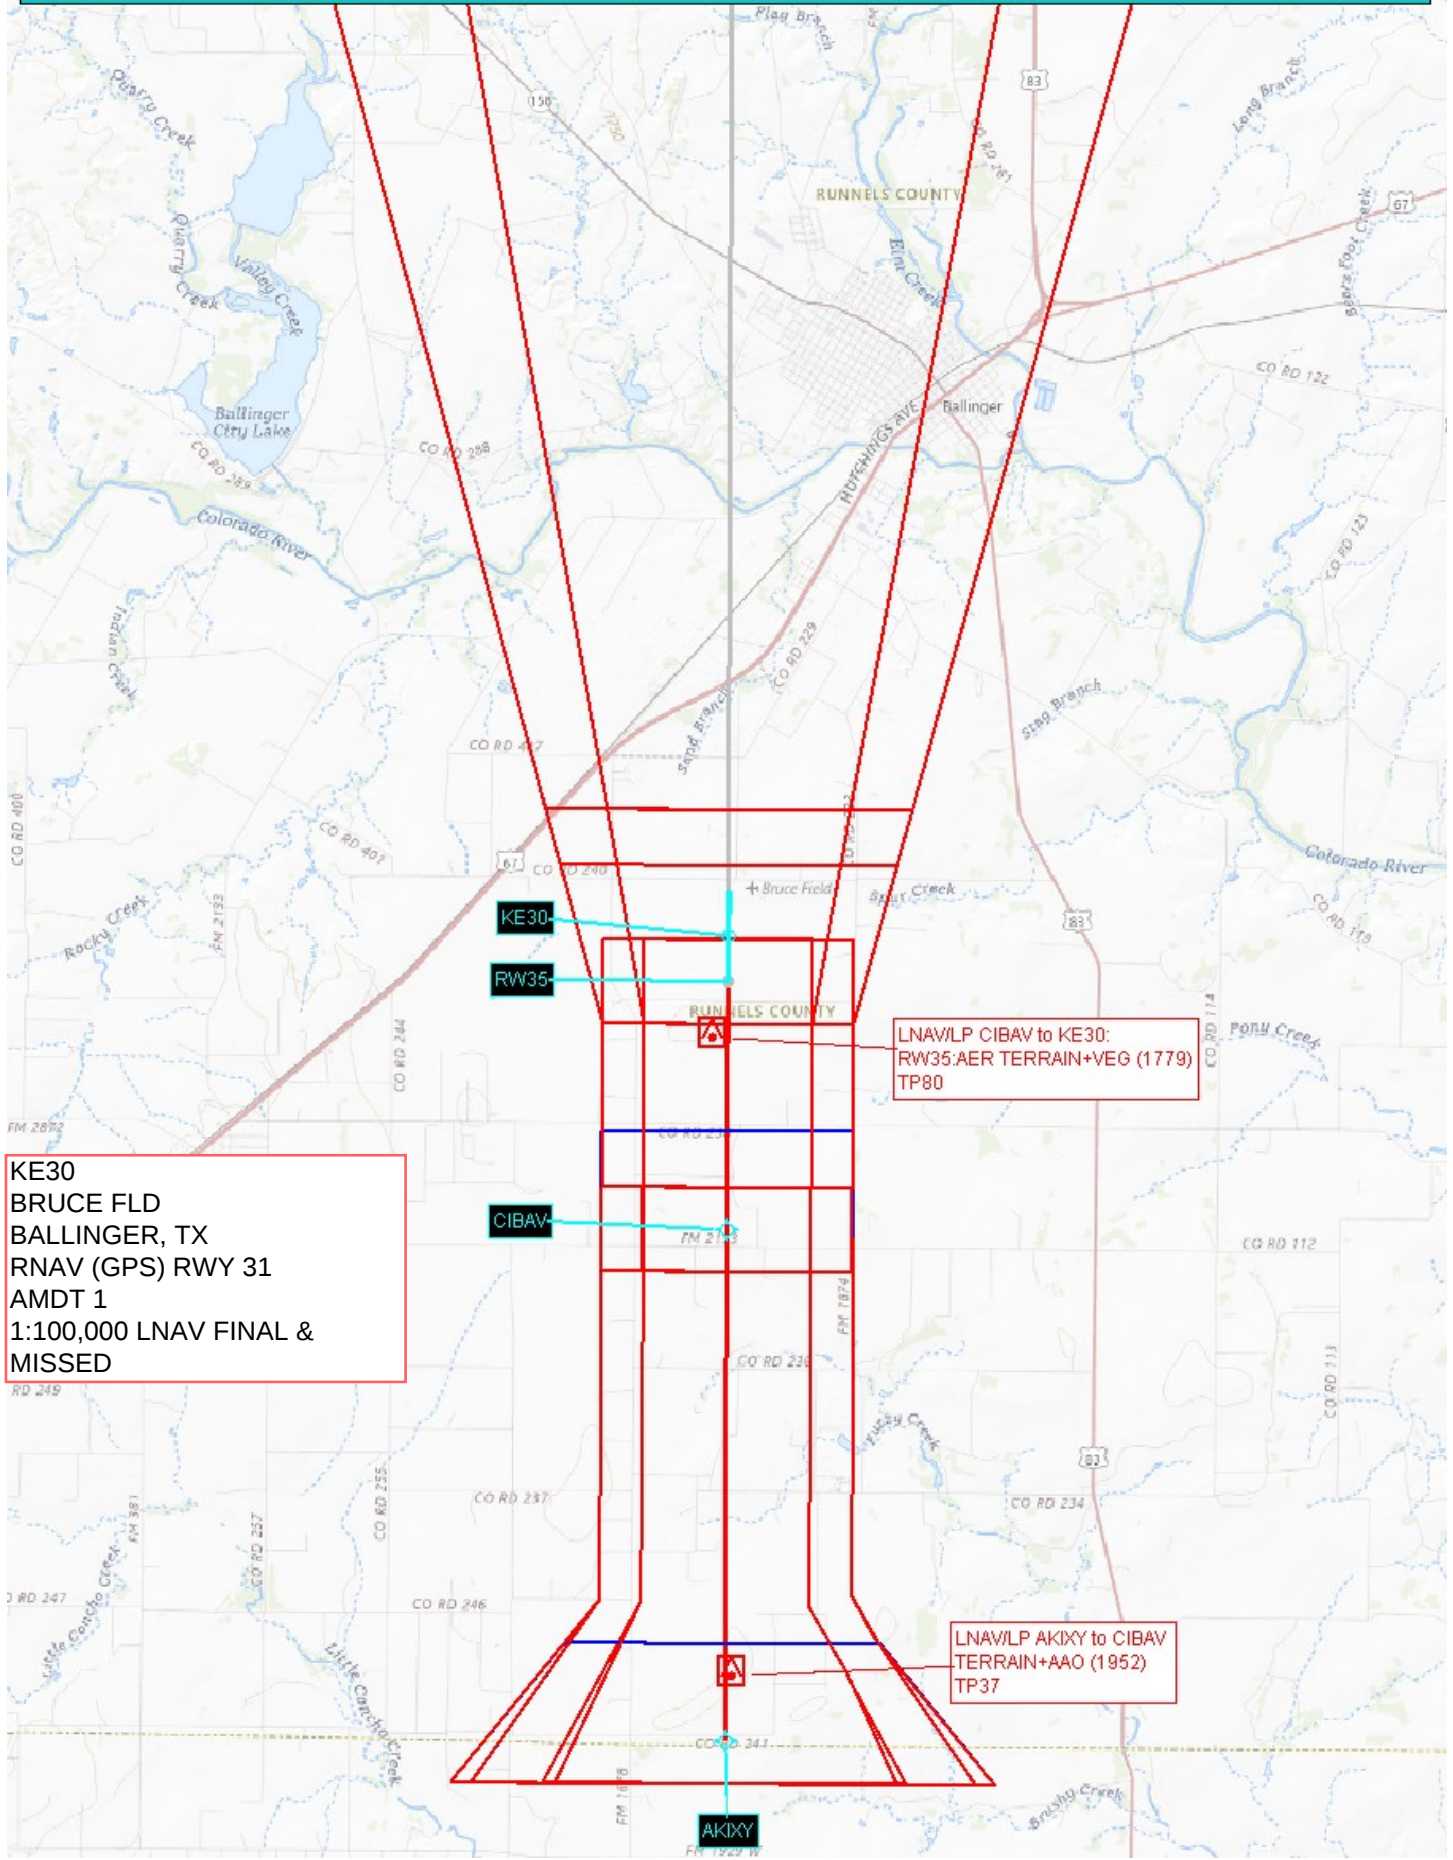

KE30
BRUCE FLD
BALLINGER, TX
RNAV (GPS) RWY 31
AMDT 1
1:100,000 LNAV FINAL &
MISSED

LNAV/LP CIBAV to KE30:
RW35:AER TERRAIN+VEG (1779)
TP80

LNAV/LP AKDY to CIBAV
TERRAIN+AAO (1952)
TP37