



LOC/DME I-CVN <b>108.9</b> Chan <b>26</b>	APP CRS <b>037°</b>	Rwy Ldg TDZE Apt Elev <b>7200</b> <b>4205</b> <b>4216</b>
---	------------------------	--

# ILS or LOC RWY 4

CLOVIS RGNL (CVN)

DME required.		MALSR 	MISSED APPROACH: Climb to 4700 then climbing right turn to 6000 direct TXO VORTAC and hold.
NA Circling NA to Rws 8 and 26. For inop ALS, increase S-LOC 4 Cats C/D visibility to 1 SM.			
AWOS-3PT <b>135.375</b>	CANNON APP CON <b>118.425 352.1</b>	UNICOM <b>122.8 (CTAF) 0</b>	

## PROTOTYPE-NOT FOR NAVIGATION

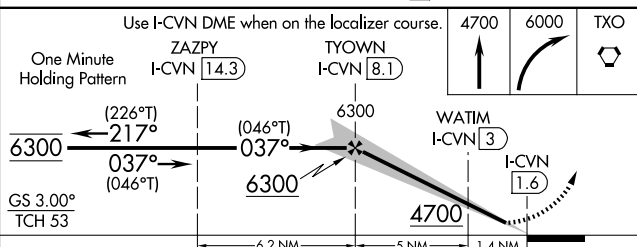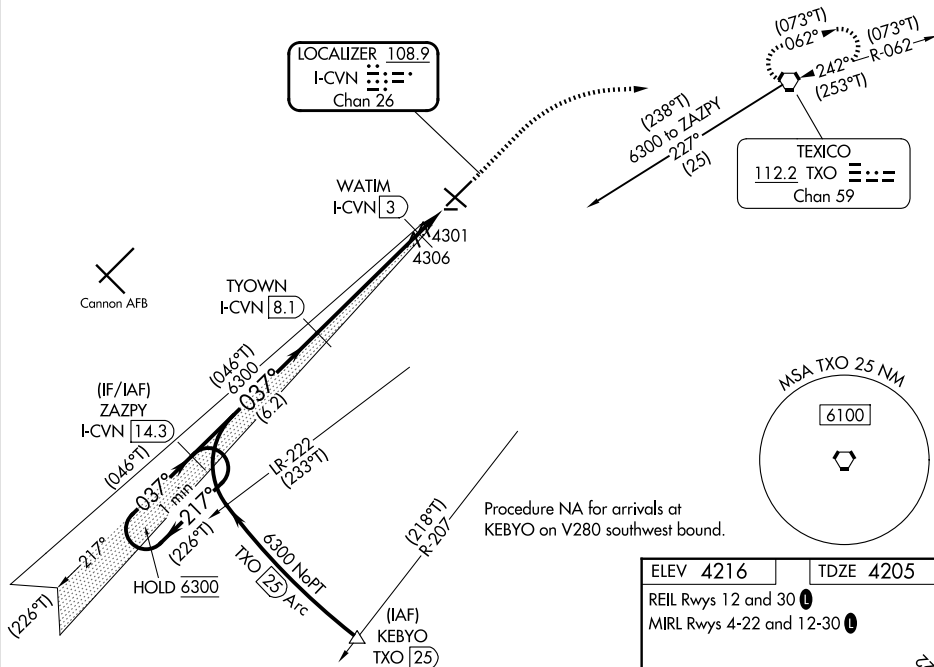

ELEV 4216	TDZE 4205
REIL Rws 12 and 30	MIRL Rws 4-22 and 12-30
FAF to MAP 6.4 NM	
Knots	60 90 120 150 180
Min:Sec	6:24 4:16 3:12 2:34 2:08