



APP CRS	Rwy Idg	<b>3000</b>
<b>256°</b>	TDZE	<b>7</b>
	Apt Elev	<b>7</b>

# RNAV (GPS) RWY 28

MIAMI HOMESTEAD GENERAL AVIATION (X51)

<p><b>▼</b> When local altimeter setting not received, use Miami Executive altimeter setting and increase all MDAs 40 feet. DME/DME RNP-0.3 NA.</p> <p><b>▲ NA</b></p>	<p><b>MISSED APPROACH:</b> Climb to 500, then climbing right turn to 2000 direct HOLMU and hold.</p>
--	--

<p>AWOS-3 <b>118.375</b></p>	<p>MIAMI APP CON <b>125.5 354.1</b></p>	<p>UNICOM <b>122.8 (CTAF)</b></p>
----------------------------------	---	---------------------------------------

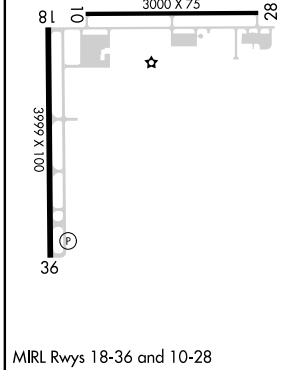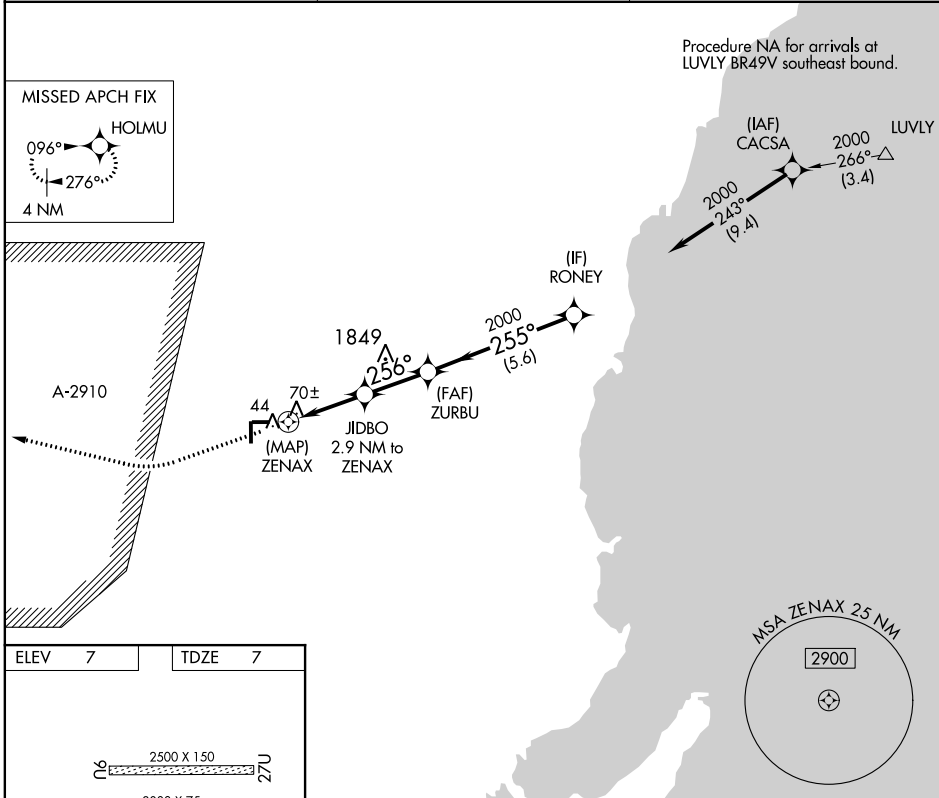

ELEV 7	TDZE 7				
500	2000	HOLMU	Procedure Turn NA		
ZENAX		ZURBU	RONEY		
JIDBO 2.9 NM to ZENAX		TCH 40	2000		
ZENAX		256°	255°		
0.7		2.9 NM	2.4 NM	5.6 NM	
CATEGORY	A	B	C	D	
LNAV MDA	320-1	313 (400-1)	NA		
CIRCLING	380-1 373 (400-1)	460-1 453 (500-1)	NA		

SE-3, 10 SEP 2020 to 08 OCT 2020

SE-3, 10 SEP 2020 to 08 OCT 2020