
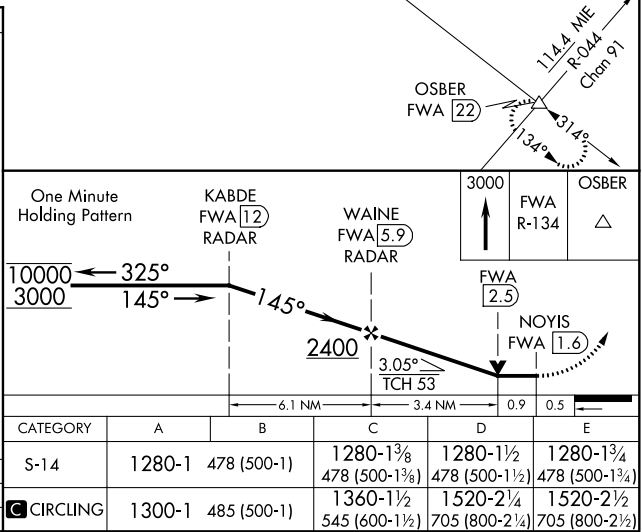
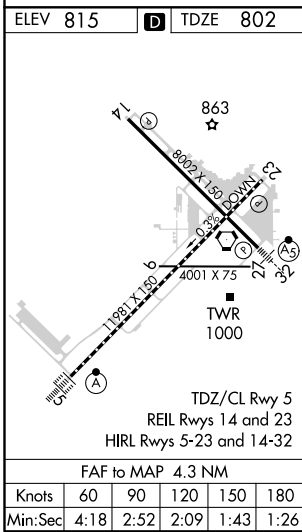


VORTAC FWA <b>117.8</b> Chan <b>125</b>	APP CRS <b>145°</b>	Rwy Idg TDZE Apt Elev	<b>8001</b> <b>802</b> <b>815</b>
---	------------------------	-----------------------------	---

# VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS <b>121.25 360.825</b>	FORT WAYNE APP CON <b>127.2 284.6</b>	FORT WAYNE TOWER <b>119.1 269.325</b>	GND CON <b>121.9 348.6</b>	CLNC DEL <b>124.75</b>

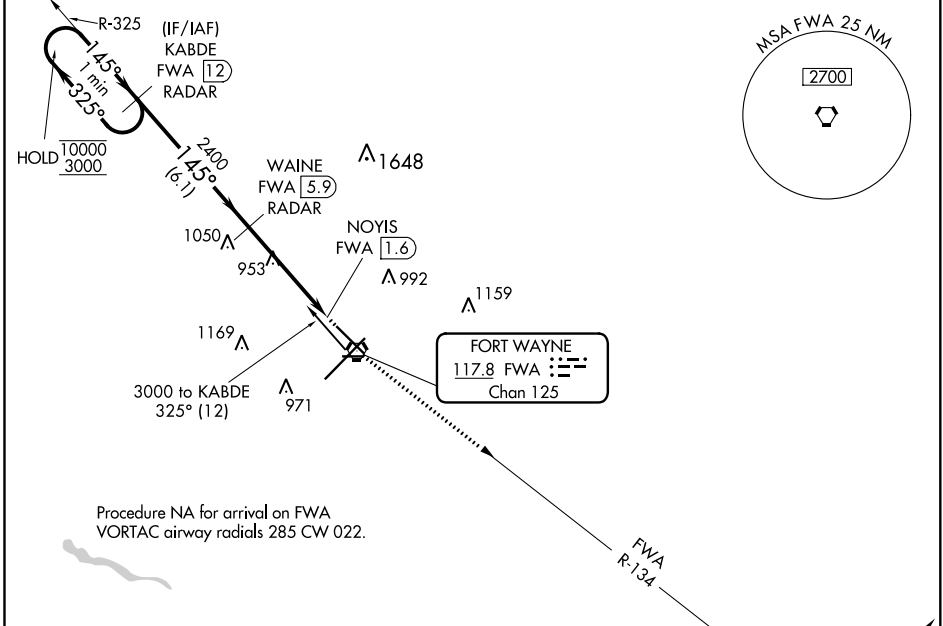

EC-2, 08 OCT 2020 to 05 NOV 2020

EC-2, 08 OCT 2020 to 05 NOV 2020