


ATIS ★285.45
CLNC DEL
134.675 271.6
GND CON
134.675 360.2
TOWER ★
128.775 340.2
SOCAL DEP CON
127.3 323.0

AL-5985 [USN]

Rwy	Knots	60	120	180	240	300	360
3	Ⓢ V/V(fpm)	486	972	1458	1944	2430	2916
21	Ⓢ V/V(fpm)	442	884	1326	1768	2210	2652

Minimum Climb Rate
Ⓢ to 800
Ⓢ to 1300

NOT FOR CIVIL USE

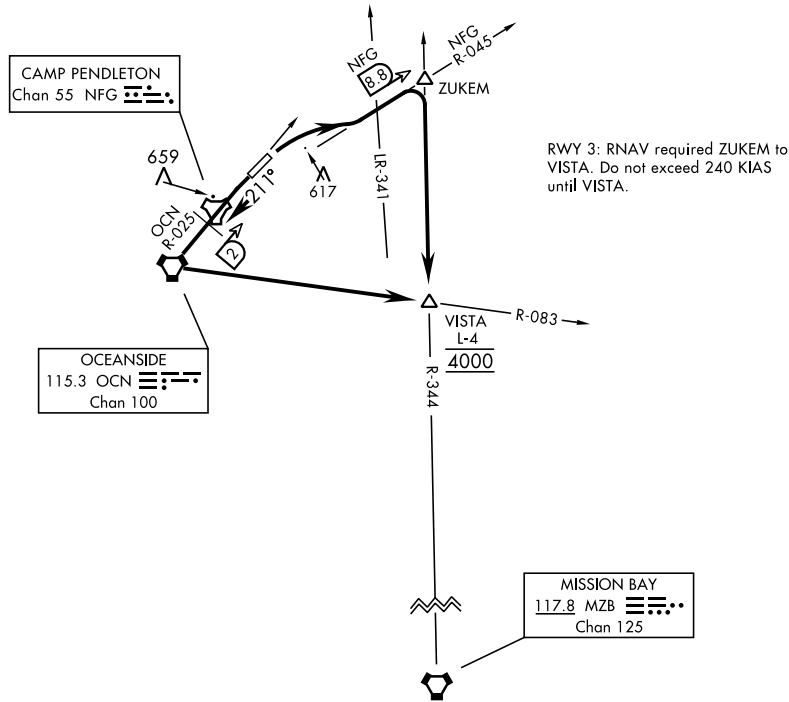

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF RWY 3: Climbing right turn to intercept NFG TACAN R-045 to ZUKEM then right turn direct VISTA. Cross VISTA at 4000 or assigned altitude.

TAKE-OFF RWY 21: Climb on heading 211° to intercept OCN VORTAC R-025 then direct OCN then left turn to intercept OCN R-083 direct VISTA. Cross VISTA at 4000 or assigned altitude.