

VOR/DME or TACAN RWY 35L


VORTAC END 115.4 Chan 101	APCH CRS 003°	Rwy Idg 9217 TDZE 1307 Arprt Elev 1307
---	-------------------------	---

AL-135 [USAF]


VANCE AFB (KEND)

V * When ALS inop, increase vis to 1 mile.	SALS (A2)	MISSED APPROACH: Climb to 4000, intercept END VORTAC R-356 to FILIE and hold.
--	--------------	--

ATIS ★ 115.4 263.15	APP CON 125.45 388.2 EAST 126.75 346.325 WEST	TOWER ★ 124.05 259.1	GND CON 121.675 289.4	CLNC DEL 225.4
-------------------------------	---	--------------------------------	---------------------------------	--------------------------

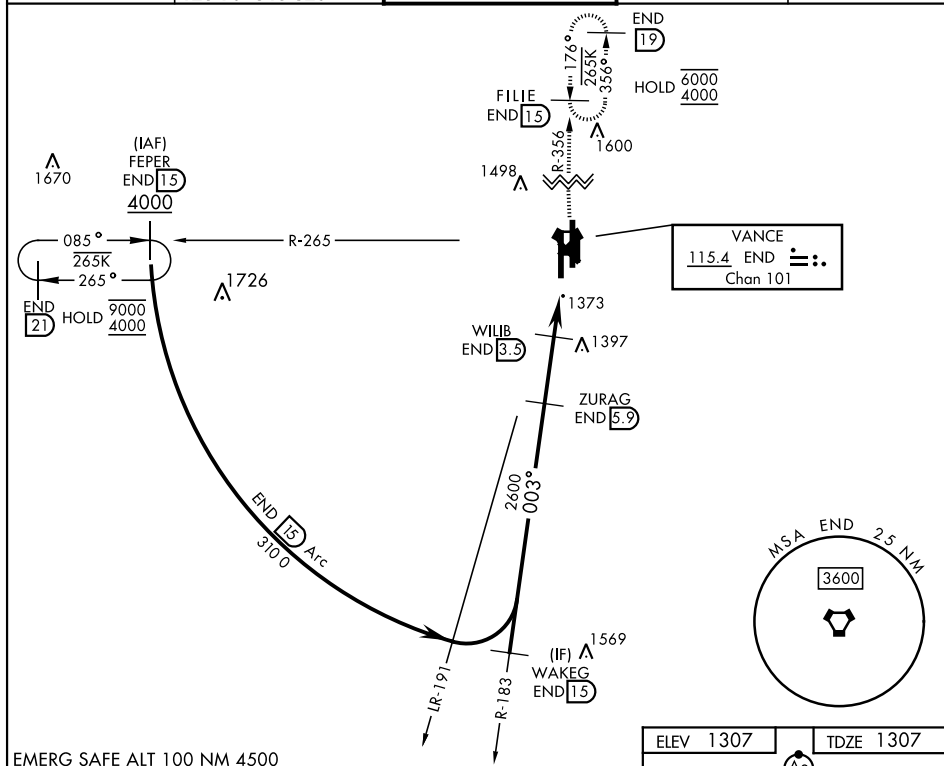

EMERG SAFE ALT 100 NM 4500

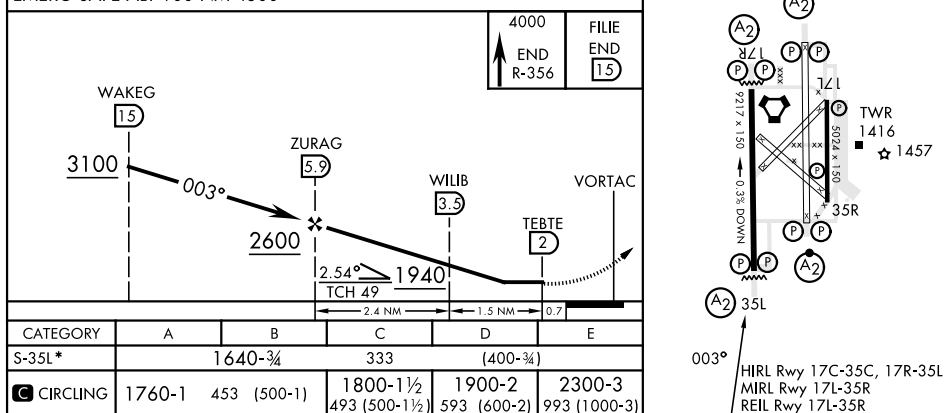

VOR/DME or TACAN RWY 35L