
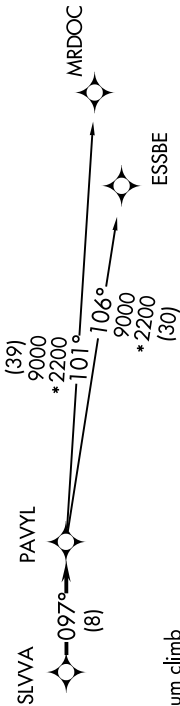


ATIS  
125.325 270.1  
CLNC DEL  
128.3 275.8  
GND CON  
128.3 275.8  
SELFRIIDGE TOWER ★  
120.15 225.4  
SELFRIIDGE DEP CON ★  
119.6 391.9

NOTE: Jet departures at/above 10000,  
maintain 280K until advised by ATC.

TOP ALTITUDE:  
ASSIGNED BY ATC

RNAV 1 - DME/DME/IRU or GPS.  
RADAR required.

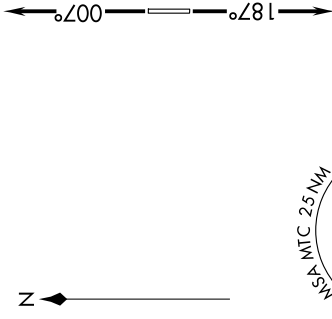

TAKEOFF MINIMUMS:  
Rwy 1: Standard.  
Rwy 19: Standard with minimum climb  
of 235' per NM to 1500.

NOTE: Chart not to scale.

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 1: Climb on heading 007° or as assigned by ATC, thence....  
TAKEOFF RUNWAY 19: Climb on heading 187° or as assigned by ATC, thence....

....for RADAR vectors to SLWA, then on track 097° to PAVYL, then on (transition). Maintain 17000 or as assigned by ATC, expect filed altitude 10 minutes after departure.

ESSBE TRANSITION (PAVYL3.ESSBE):  
MRDOC TRANSITION (PAVYL3.MRDOC):