

VOR/DME HOT

110.0

Chan 37

APP CRS

058°

Rwy Idg

6595

TDZE

516

Apt Elev

540

VOR RWY 5

MEML FLD (HOT)

ADF or DME required for procedure entry.  
ADF or DME required.

MALSR


MISSED APPROACH: Climbing right turn to 3000 on HOT R-123 to SOCKS INT/HOT 10.3 DME and hold.

⚠

⚠

Circling NA northwest of Rwys 5 and 23.  
Circling Rwy 31 NA at night.

|                 |                                  |                          |
|-----------------|----------------------------------|--------------------------|
| ASOS<br>119.925 | MEMPHIS CENTER<br>128.475 377.15 | UNICOM<br>123.0 (CTAF) 0 |
|-----------------|----------------------------------|--------------------------|

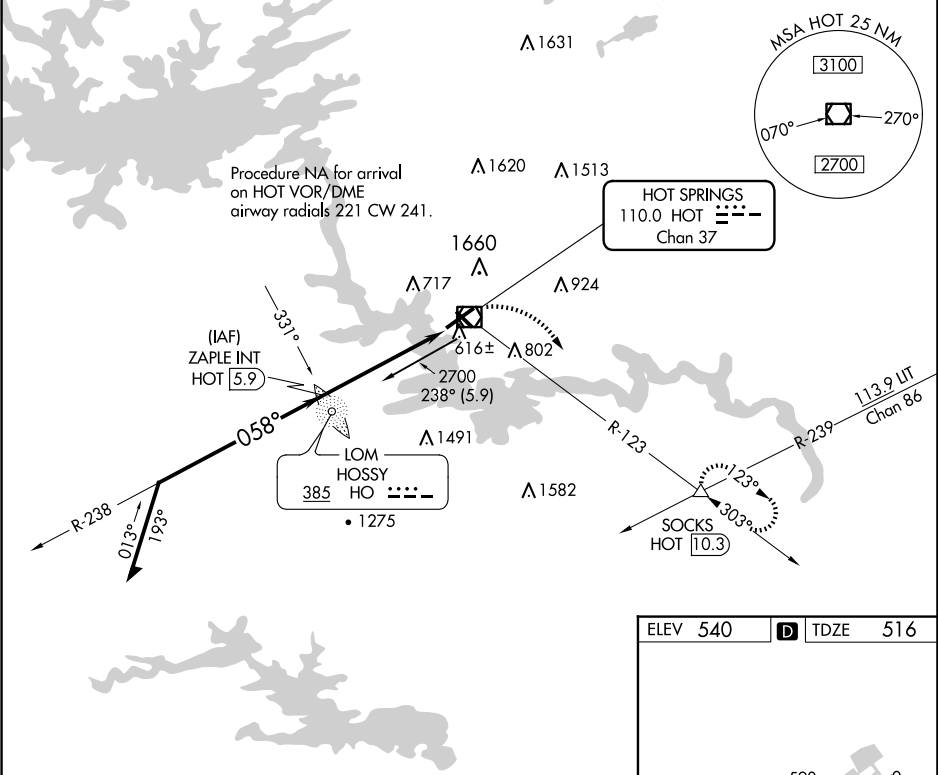

Remain within 10 NM

2700

238°

058°

2200

3.07° TCH 45

3.8 NM

1.3

0.8

3000

HOT R-123

SOCKS

HOT 2.1

HOT VOR/DME

ELEV 540

TDZE 516

590

0.6% UP

6595 X 150

4098 X 100

0.4% UP

058° to HOT VOR/DME

HIRL Rwy 5-23

MIRL Rwy 13-31

REIL Rwy 13

| CATEGORY | A       | B             | C                             | D                       |
|----------|---------|---------------|-------------------------------|-------------------------|
| S-5      | 960-1/2 | 444 (500-1/2) | 960-7/8                       | 444 (500-7/8)           |
| CIRCLING | 1080-1  | 540 (600-1)   | 1380-2 1/2<br>840 (900-2 1/2) | 1620-3<br>1080 (1100-3) |