


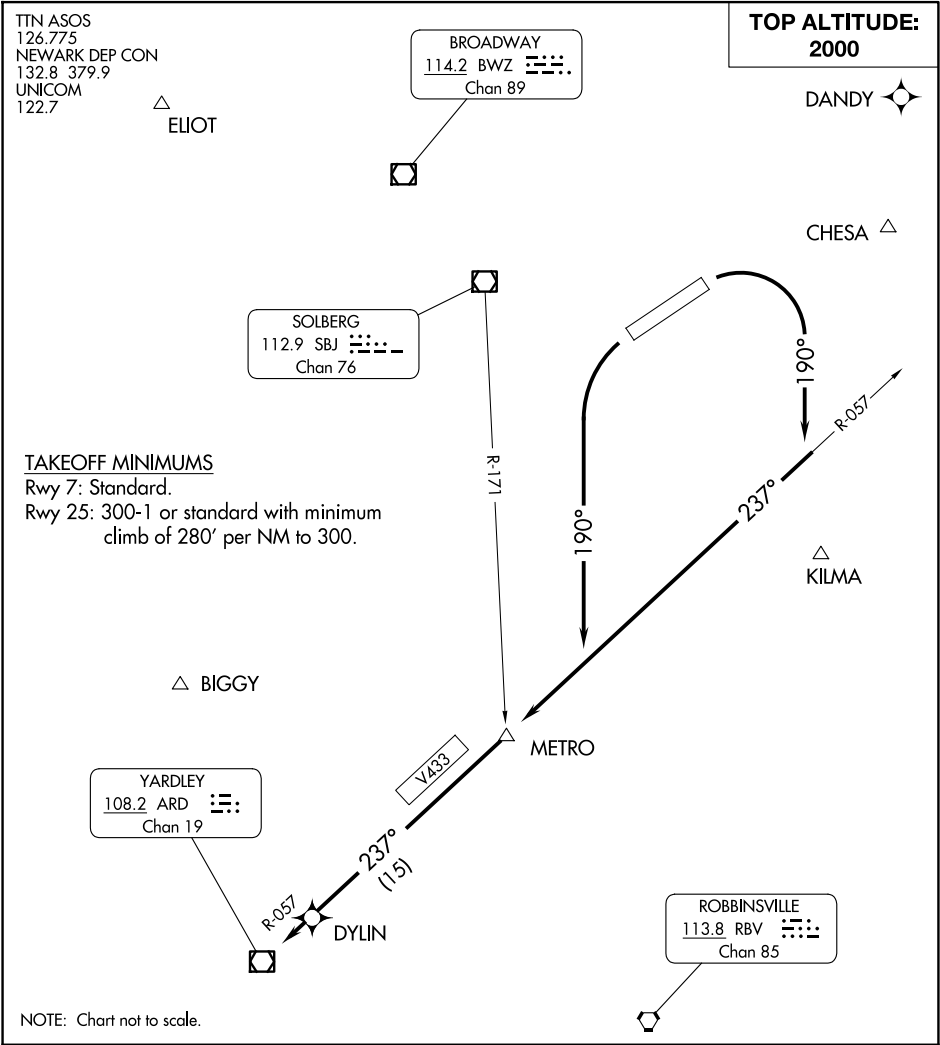

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 7: Climbing right turn to heading 190° to intercept ARD VOR/DME R-057 to METRO INT, thence

TAKEOFF RUNWAY 25: Climbing left turn to heading 190° to intercept ARD VOR/DME R-057 to METRO INT, thence

. . . . on ARD VOR/DME R-057 to ARD VOR/DME. Maintain 2000.

Expect clearance to filed altitude/flight level ten minutes after departure.