


LOC/DME	I-DAL	APP CRS	Rwy Idg	7352
111.5		133°	TDZE	485
Chan 52			Apt Elev	487

ILS or LOC RWY 13L

DALLAS LOVE FLD (DAL)

RADAR required for procedure entry.		MALSR 	MISSED APPROACH: Climb to 1000 then climbing left turn to 3000 on heading 060° and CVE VOR/DME R-087 to SOLDO INT/CVE 28.9 DME and hold.
	Simultaneous approach authorized.		

D-ATIS	LONE STAR APP CON	LOVE TOWER	GND CON	CLNC DEL	CPDLC
120.15	NORTH 124.3 282.275 SOUTH 125.2 343.65	123.7 239.3	121.75 348.6	127.9	

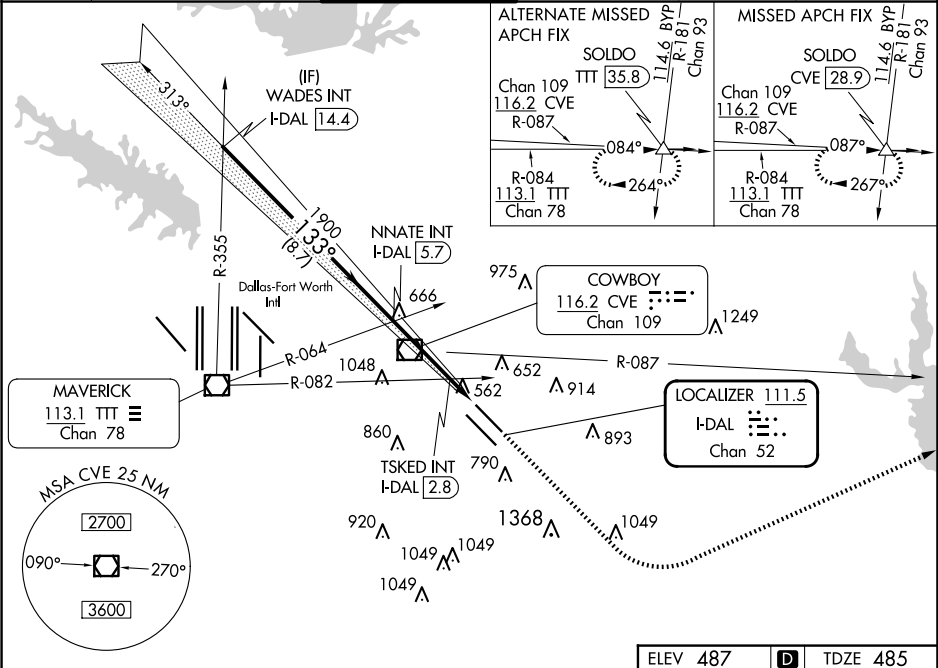

WADES INT I-DAL 14.4		NNATE INT I-DAL 5.7		TSKED INT I-DAL 2.8		SOLDO CVE R-087 △	
2500		1900		920		1000 3000	
GS 3.00° TCH 55		133°		I-DAL 2.3		hdg 060°	
8.7 NM		2.9 NM		0.5		0.9	
CATEGORY	A	B	C	D			
S-ILS 13L	685/18			200 (200-½)			
S-LOC 13L	920/24	435 (500-½)	920/40	435 (500-¾)			
CIRCLING	1000-1	1140-1	1220-2	1520-3			
	513 (600-1)	653 (700-1)	733 (800-2)	1033 (1100-3)			
TSKED FIX MINIMUMS (DUAL VOR RECEIVERS OR DME REQUIRED)							
S-LOC 13L	820/24	335 (400-½)	820/26	335 (400-½)			
CIRCLING	1000-1	1140-1	1220-2	1520-3			
	513 (600-1)	653 (700-1)	733 (800-2)	1033 (1100-3)			

