


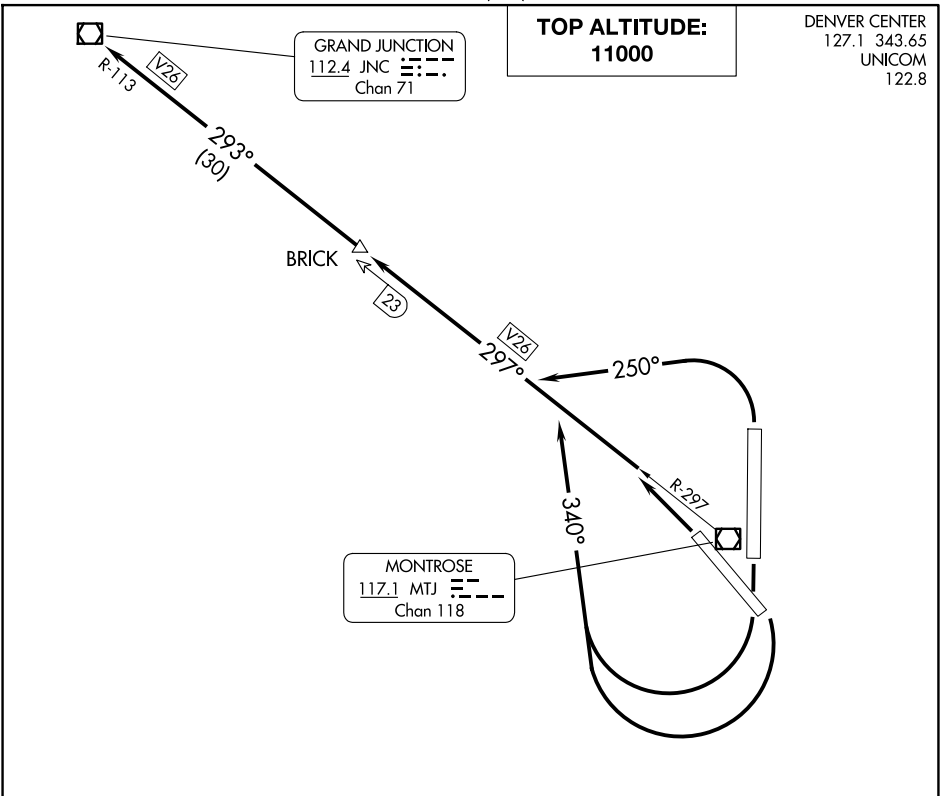

NOTE: Chart not to scale.
DEPARTURE ROUTE DESCRIPTION TAKEOFF RUNWAYS 13, 17: Climbing right turn to 11000 on heading 340° and MTJ R-297 to BRICK/MTJ 23 DME, thence . . . TAKEOFF RUNWAY 31: Climbing left turn to 11000 on MTJ R-297 to BRICK/MTJ 23 DME, thence . . . TAKEOFF RUNWAY 35: Climbing left turn to 11000 on heading 250° and MTJ R-297 to BRICK/MTJ 23 DME, thence on V26 to JNC VOR/DME.