
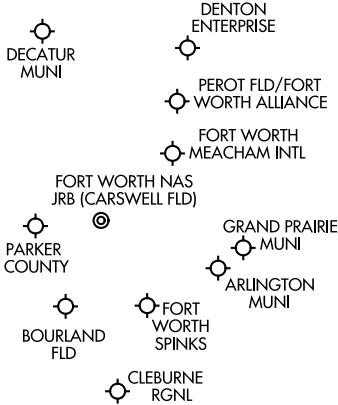


LONE STAR APP CON
124.3 282.275
AFW ATIS
126.925
DTO ATIS
119.325
FTW ATIS
120.7
FWS ATIS
120.025
KNFW ATIS ★
351.675

NOTE: RADAR required.
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.

SASIE
VERTICAL NAVIGATION
PLANNING INFORMATION
TURBOJETS NORTH FLOW:
Expect 10000
TURBOJETS SOUTH FLOW:
Expect 11000
PROPS:
Expect 5000 or 6000

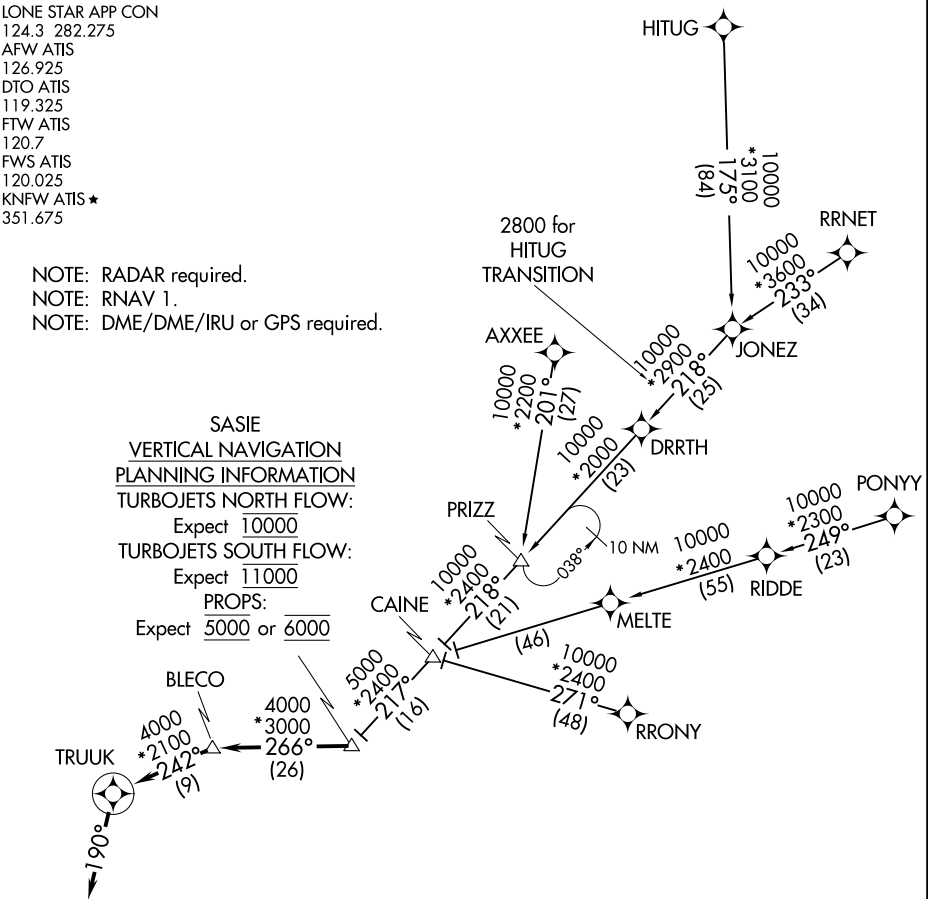

NOTE: Chart not to scale.

ARRIVAL ROUTE DESCRIPTION

AXXEE TRANSITION (AXXEE.TRUUK2): (For aircraft filing FL230 and below).

HITUG TRANSITION (HITUG.TRUUK2)

PONYY TRANSITION (PONYY.TRUUK2)

RRNET TRANSITION (RRNET.TRUUK2)

RRONY TRANSITION (RRONY.TRUUK2): (For aircraft filing FL230 and below).

From SASIE on track 266° to BLECO, then on track 242° to TRUUK, then on track 190°. Expect RADAR vectors to final approach course.