

LONE STAR DEP CON	
118.55 290.35	
D-ATIS	
120.15	
CLNC DEL	NO
127.9	
CPDLC	
GND CON	NO
121.75 348.6	
LOVE TOWER	NO
123.7 239.3	

TOP ALTITUDE:
5000


DME and RADAR required.

NOTE: This DP is to be used only upon assignment by Love Tower normally between 2100-0600 LCL time.

NOTE: WILL ROGERS Transition: For all aircraft inbound to the Oklahoma City area or overflying IRW VORTAC.

NOTE: TULSA Transition: For all aircraft overflying
TUL VORTAC.

NOTE: OKMULGEE Transition: For all aircraft overflying
OKM VOR/DME proceeding on J181 BDF
VORTAC proceeding to destinations in the
Chicago Terminal area and north.

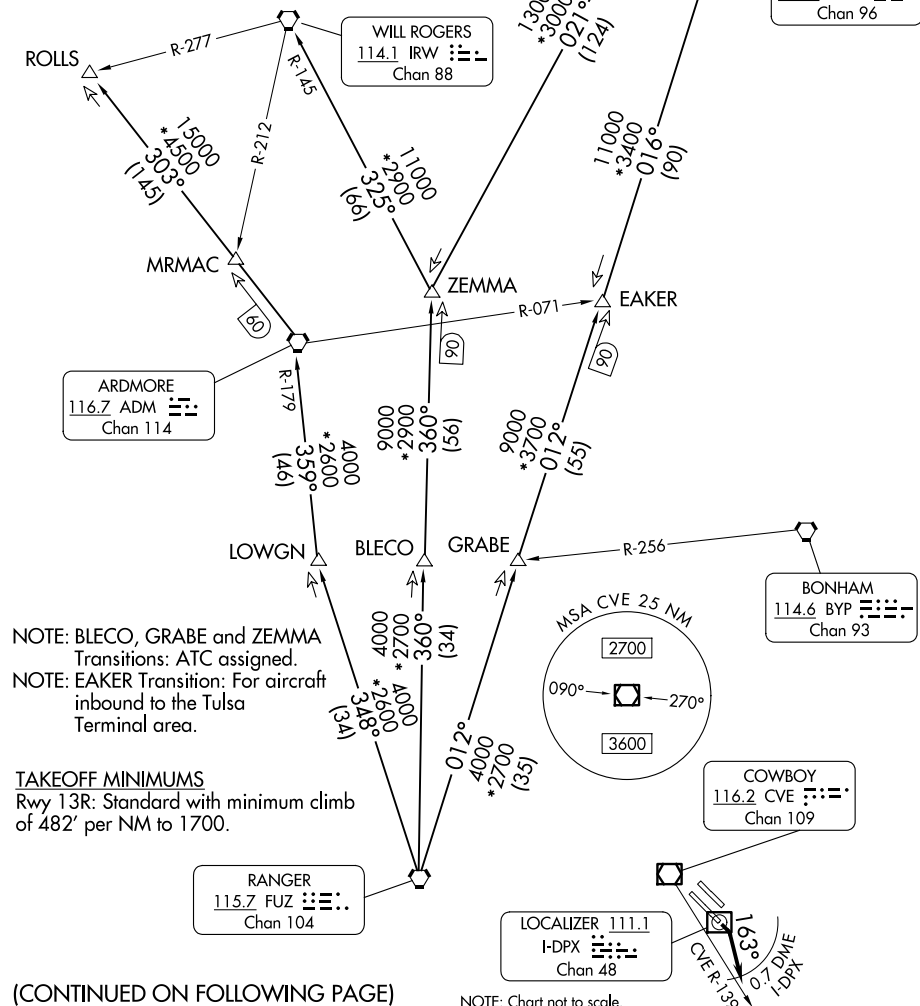

(CONTINUED ON FOLLOWING PAGE)

NOTE: Chart not to scale.

(KRUMM1.FUZ) 08SEP22