

LOC/DME I-FWA 109.9 Chan 36	APP CRS 321°	Rwy Ldg 8001 TDZE 800 Apt Elev 815
---	------------------------	---

ILS or LOC RWY 32
FORT WAYNE INTL (FWA)

DME required for LOC only. DME or RADAR required for procedure entry.




For inop ALS, increase S-ILS 32 visibility Cat E to RVR 4000 and increase S-LOC 32 visibility Cats C, D, and E to RVR 5500.
* RVR 1800 authorized with use of FD or AP or HUD to DA.




MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
------------------------	-----------------------------------	-----------------------------------	------------------------	--------------------

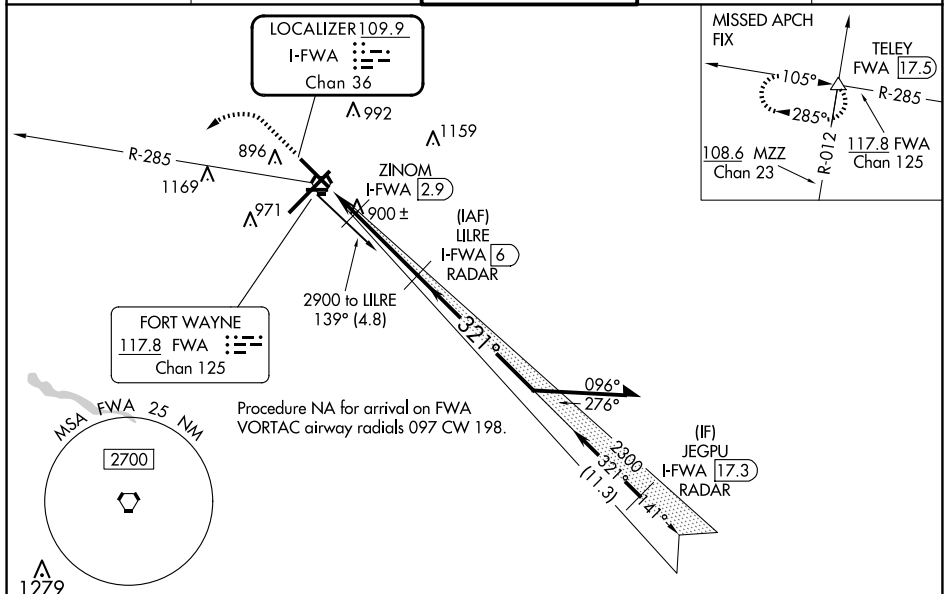

ELEV	815	D	TDZE	800
------	-----	----------	------	-----

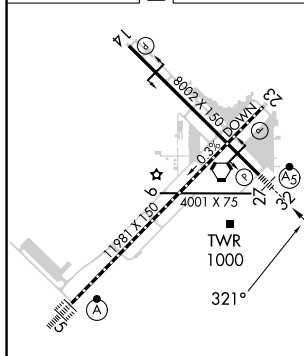

TDZ/CL Rwy 5
REIL Rwys 14 and 23
HIRL Rwys 5-23 and 14-32


FAF to MAP 4.6 NM					
Knots	60	90	120	150	180
Min:Sec	4:36	3:04	2:18	1:50	1:32

FORT WAYNE, INDIANA

Amdt 31B 12JUN25

40°59'N-85°12'W

Cat E Procedure Turn NA.

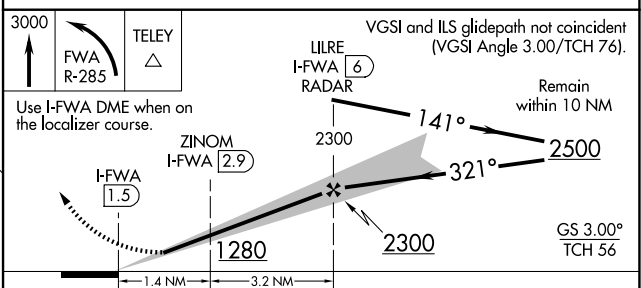

CATEGORY	A	B	C	D	E
S-ILS 32*	1000/24 200 (200-½)				
S-LOC 32	1160/24 360 (400-½)		1160/30 360 (400-⅔)		
C CIRCLING	1300-1 485 (500-1)		1420-1¾ 605 (700-1¼)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

FORT WAYNE INTL (FWA)

ILS or LOC RWY 32