



VORTAC FWA	APP CRS	Rwy Idg	8001
117.8	145°	TDZE	802
Chan 125		Apt Elev	815

VOR or TACAN RWY 14
FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825		FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6
				CLNC DEL 124.75

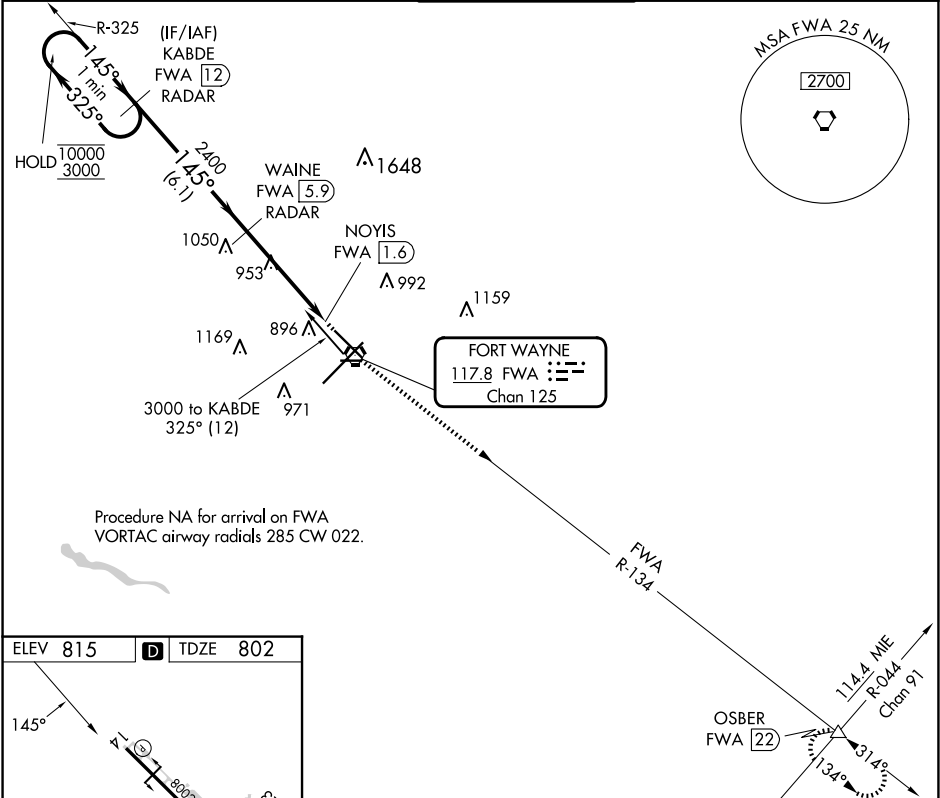

Procedure NA for arrival on FWA
VORTAC airway radials 285 CW 022.

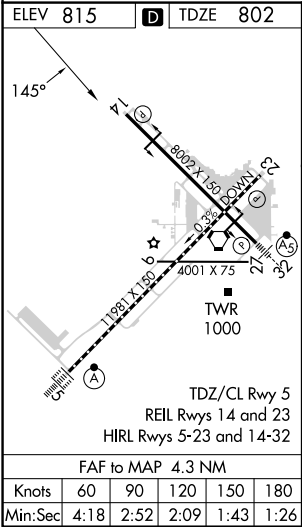

One Minute Holding Pattern		KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	FWA R-134	OSBER FWA 22
10000/3000		325°	145°	2400	3000
		145°	145°	3.05°	3.05°
		6.1 NM	3.4 NM	0.9	0.5
		TCH 53			
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1 3/8 478 (500-1 3/8)	1280-1 1/2 478 (500-1 1/2)	1280-1 3/4 478 (500-1 3/4)
CIRCLING	1300-1	485 (500-1)	1360-1 1/2 545 (600-1 1/2)	1520-2 1/4 705 (800-2 1/4)	1520-2 1/2 705 (800-2 1/2)