


VOR or TACAN RWY 5
FORT WAYNE INTL (FWA)


MISSED APPROACH: Climbing right turn to 3000 on FWA
VORTAC R-134 to OSBER INT/FWA 22 DME and hold.




ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
------------------------	-----------------------------------	-----------------------------------	------------------------	--------------------

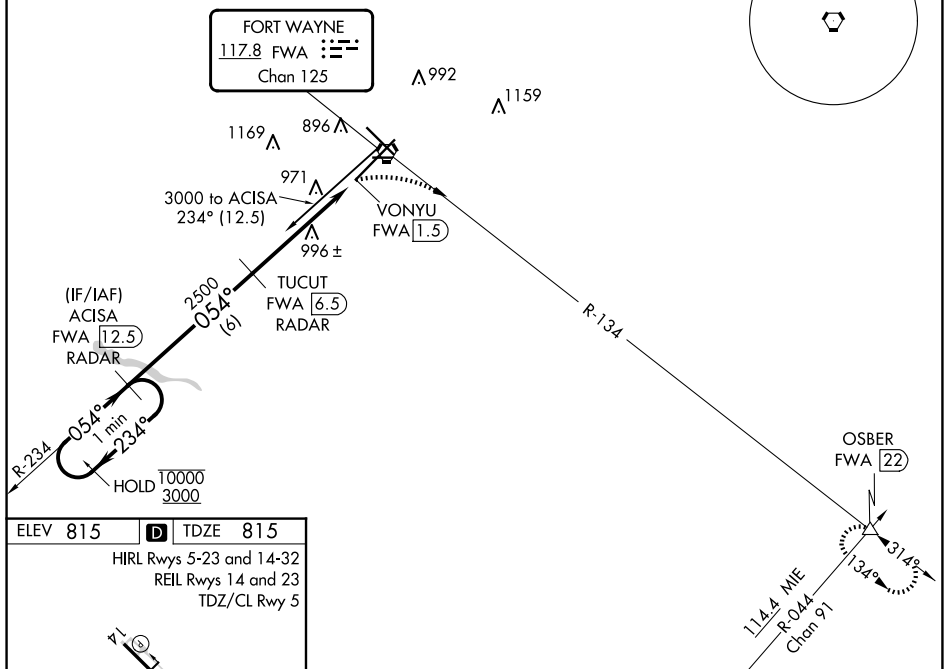

ELEV 815	D	TDZE 815
HIRL Rwy 5-23 and 14-32 REIL Rwy 14 and 23 TDZ/CL Rwy 5		

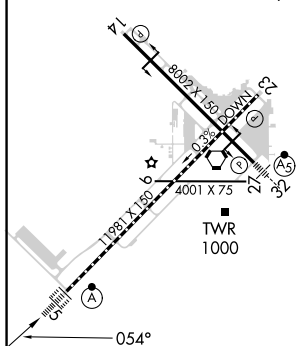

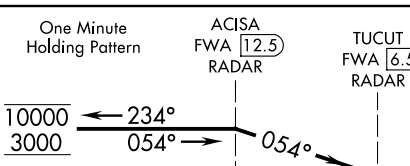One Minute Holding Pattern 			3000 FWA R-134	OSBER △	
10000 3000 ← 234° 054° → 054° 2500 3.07° TCH 55 6 NM 3.6 NM 1.4 FWA 2.9 VONYU FWA 1.5					
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1¼)
 CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)