


LOC/DME I-GEM 108.9 Chan 26	APP CRS 124°	Rwy Idg TDZE Apt Elev	8579 9 9
---	------------------------	-----------------------------	-------------------------------------

ILS or LOC RWY 12
MIAMI INTL (MIA)

DME or RADAR required.




MALSR



MISSED APPROACH: Climb to 800 then climbing left turn to 3000 direct VKZ VOR/DME and hold, continue climb-in-hold to 3000.

D-ATIS		MIAMI APP CON		MIAMI TOWER		GND CON		CLNC DEL	CPDLC
ARR DEP	119.15 133.675	124.85	322.3	118.3	256.9	121.8 127.5	(8L/8R/12/26L/26R) (9/27/30)	348.6 135.35	

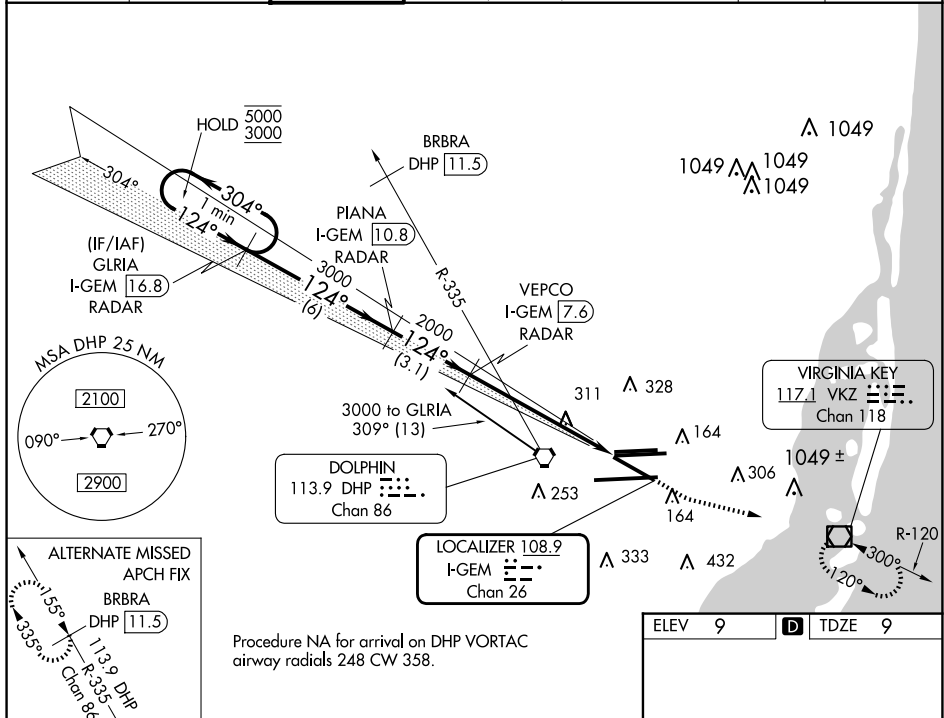

Procedure NA for arrival on DHP VORTAC
airway radials 248 CW 358.

FAF to MAP 6 NM

Knots	60	90	120	150	180
Min:Sec	6:00	4:00	3:00	2:24	2:00

MIAMI, FLORIDA
Amdt 5B 23MAR23

25°48'N-80°17'W

MIAMI INTL (MIA)

ILS or LOC RWY 12