


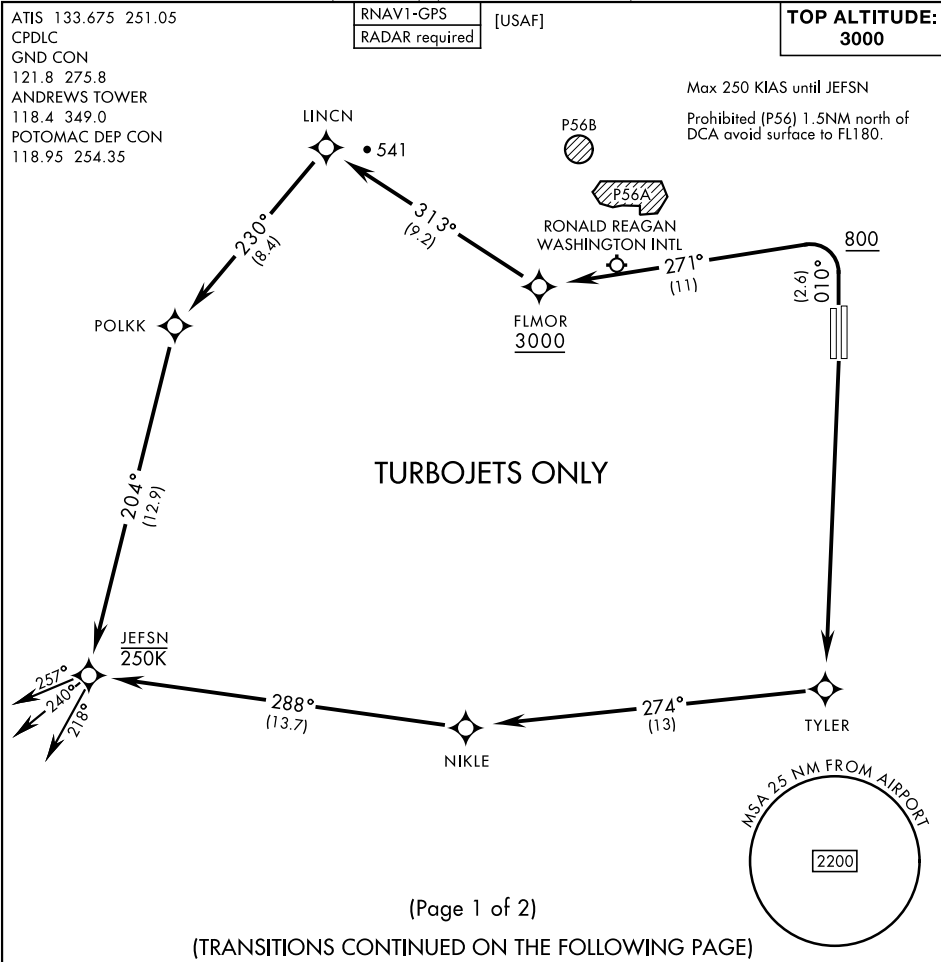

(Page 1 of 2)

(TRANSITIONS CONTINUED ON THE FOLLOWING PAGE)

T

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 1L/R: Climb on heading 010° to 800, then climbing left turn to 3000 direct FLMOR. Then via depicted route to JEFSN, thence...

TAKEOFF RWY 19L/R: Climb direct TYLER then via depicted route to JEFSN, thence...

... on assigned transition. Maintain 3000, expect further clearance to filed alt within ten (10) minutes after departure.

FLASK TRANSITION (JEFSN2.FLASK)

GLANC TRANSITION (JEFSN2.GLANC)

MAULS TRANSITION (JEFSN2.MAULS)

MELTN TRANSITION (JEFSN2.MELTN)

RRSIN TRANSITION (JEFSN2.RRSIN)