

LOC/DME I-PVO	APP CRS	Rwy Idg	10001
109.1	128°	TDZE	75
Chan 28		Apt Elev	75



ILS Z or LOC Z RWY 13
ATLANTIC CITY INTL (ACY)

⚠ For inop ALS, increase S-ILS 13 Cat E visibility to RVR 4000 and S-LOC 13 Cat E visibility to 1 3/8 SM.

MALSR

MISSED APPROACH: Climb to 600 then climbing left turn to 2000 on ACY VORTAC R-090 to SMITS INT/ACY 11 DME and hold.

ATIS 125.725 316.15	ATLANTIC CITY APP CON 124.6 327.125	ATLANTIC CITY TOWER 120.3 239.0	GND CON 121.9 284.6	CLNC DEL 127.85 353.775
-------------------------------	---	---	-------------------------------	-----------------------------------

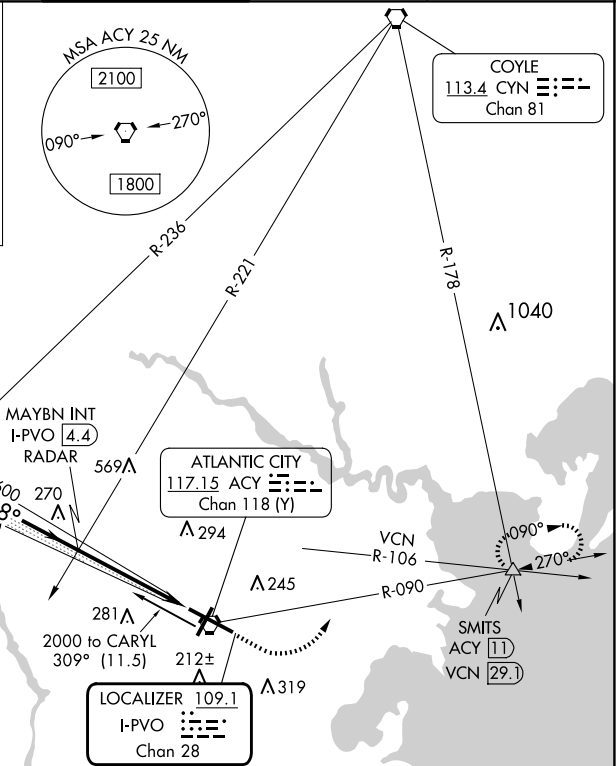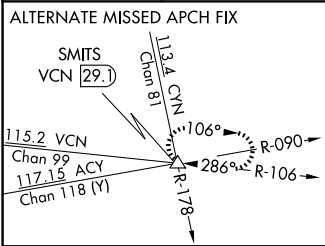

ELEV 75	D	TDZE 75
---------	----------	---------

TDZ/CL Rwy 13
HIRL Rwys 4-22 and 13-31
REIL Rwy 31

FAF to MAP 4.6 NM

Knots	60	90	120	150	180
Min:Sec	4:36	3:04	2:18	1:50	1:32

Use I-PVO DME when on the localizer course.

One Minute Holding Pattern	CARYL INT I-PVO 10.5	MAYBN INT I-PVO 4.4	600	2000	ACY R-090	SMITS
----------------------------	----------------------	---------------------	-----	------	-----------	-------

GS 3.00° TCH 58

CATEGORY	A	B	C	D	E
S-ILS 13	275/18 200 (200-1/2)				
S-LOC 13	520/24 445 (500-1/2)	520/45 445 (500-2/3)	520/45 445 (500-2/3)	520/45 445 (500-2/3)	520/45 445 (500-2/3)
CIRCLING	540-1 465 (500-1)	600-1 525 (600-1)	620-1 545 (600-1 1/2)	640-2 565 (600-2)	760-2 1/2 685 (700-2 1/2)

NE-2, 12 JUN 2025 to 10 JUL 2025

NE-2, 12 JUN 2025 to 10 JUL 2025