

LOC/DME I-OWD

108.3

Chan 20

APP CRS

350°

Rwy Idg

4007

TDZE

49

Apt Elev

49

LOC RWY 35


NORWOOD MEML (OWD)

ADF or DME required.

MALSF

MISSED APPROACH: Climbing left turn to 3000 and BOS VOR/DME R-240 to MILIS INT/20.9 DME and hold, continue climb-in-hold to 3000.

ATIS	BOSTON APP CON	NORWOOD TOWER ★	GND CON	CLNC DEL
119.95	124.1 263.1	126.0 (CTAF) 0	121.8	121.8

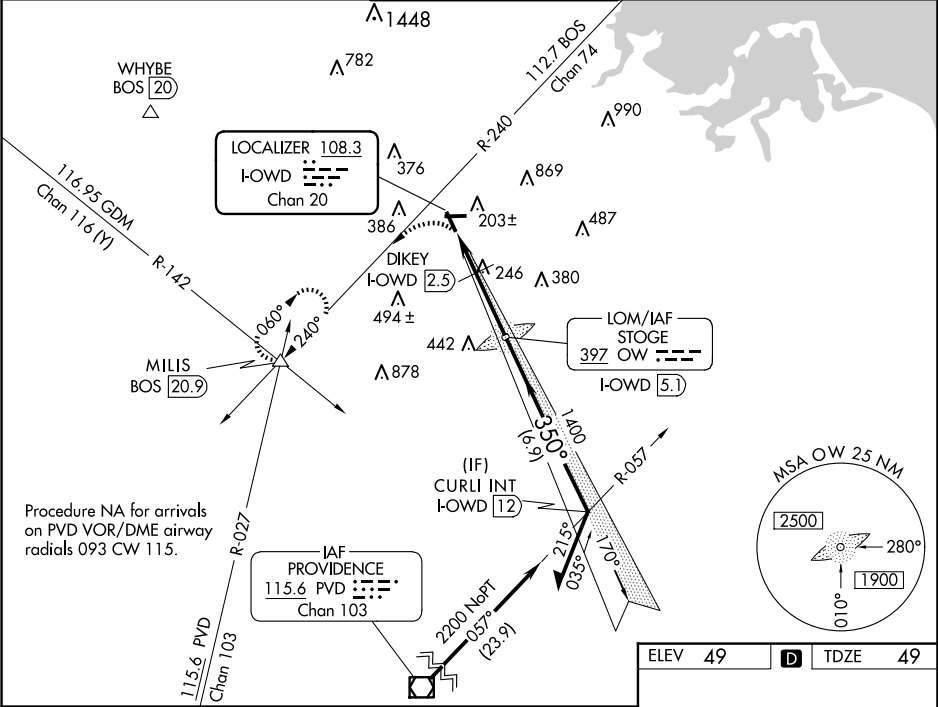

3000 MILIS Δ BOS R-240

DIKEY I-OWD [2.5]

I-OWD [0.8]

STOGI I-OWD [5.1]

Remain within 10 NM

170° 2100

350° 1400

580 $\leq 2.88^\circ$ TCH 40

1.7 NM 2.6 NM

CATEGORY	A	B	C	D
S-35	580-3/4	531 (600-3/4)	580-1 1/4	531 (600-1 1/4)
CIRCLING	600-1 551 (600-1)	700-1 651 (700-1)	1220-3	1171 (1200-3)
DIKEY FIX MINIMUMS				
S-35	500-3/4	451 (500-3/4)	500-1	451 (500-1)
CIRCLING	600-1 551 (600-1)	700-1 651 (700-1)	1220-3	1171 (1200-3)

ELEV 49 D TDZE 49

TWR 133

MIRL Rwy 17-35

FAF to MAP 4.3 NM

Knots	60	90	120	150	180
Min:Sec	4:18	2:52	2:09	1:43	1:26