

LOC I-TIX <u>108.7</u>	APP CRS 004°	Rwy Idg 7244 TDZE 34 Apt Elev 34
----------------------------------	------------------------	---

ILS or LOC RWY 36
SPACE COAST RGNL(TIX)

T For inop ALS, increase S-LOC 36 Cat C/D visibility to 1 $\frac{3}{8}$ SM.

MALSR



MISSED APPROACH: Climb to 500 then climbing left turn to 2000 on MLB VOR/DME R-348 to MALET INT/37.2 DME and hold.

ATIS 120.625	ORLANDO APP CON 134.95 281.425	SPACE COAST TOWER ★ 118.9 (CTAF) 0	GND CON 121.85	UNICOM 122.95
------------------------	--	--	--------------------------	-------------------------

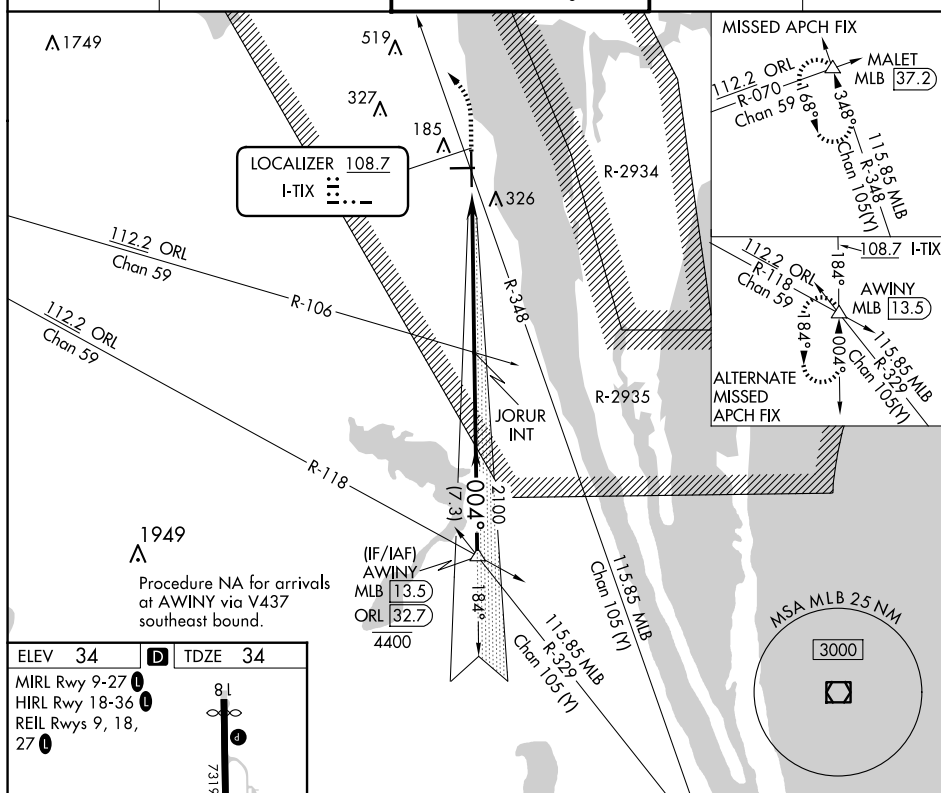


Diagram illustrating a 5000 X 100 approach procedure. The path starts from the left, turns right to a heading of 004° at 6 NM from the FAF, and then turns left to a heading of 031° at 1.50 NM from the MAP. The diagram includes various navigational aids like VORTAC (TW98), VORTOM (97), and a 36° heading marker.

Knots	60	90	120	150	180
Min:Sec	6:00	4:00	3:00	2:24	2:00

500 ↑	2000 MLB R-348	MALET △	JORUR INT 2100 004° 2100 3000 GS 3.00° TCH 58	
6 NM		7.3 NM		
CATEGORY	A	B	C	D
S-ILS 36	234-1½ 200 (200-½)			
S-LOC 36	500-½	466 (500-½)	500-1	466 (500-1)
CIRCLING	640-1	606 (700-1)	640-1¾ 606 (700-1¾)	640-2 606 (700-2)