
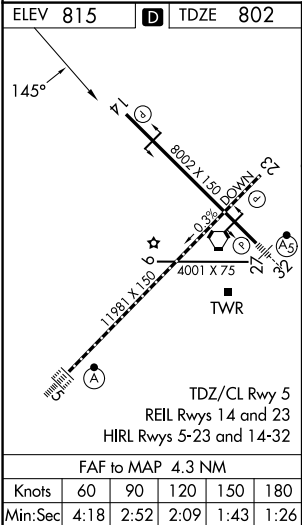


VORTAC FWA	APP CRS	Rwy Ldg	8001
117.8	145°	TDZE	802
Chan 125		Apt Elev	815

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS		FORT WAYNE APP CON		FORT WAYNE TOWER
121.25 360.825		127.2 284.6		119.1 269.325
				GND CON
				121.9 348.6
				CLNC DEL
				124.75

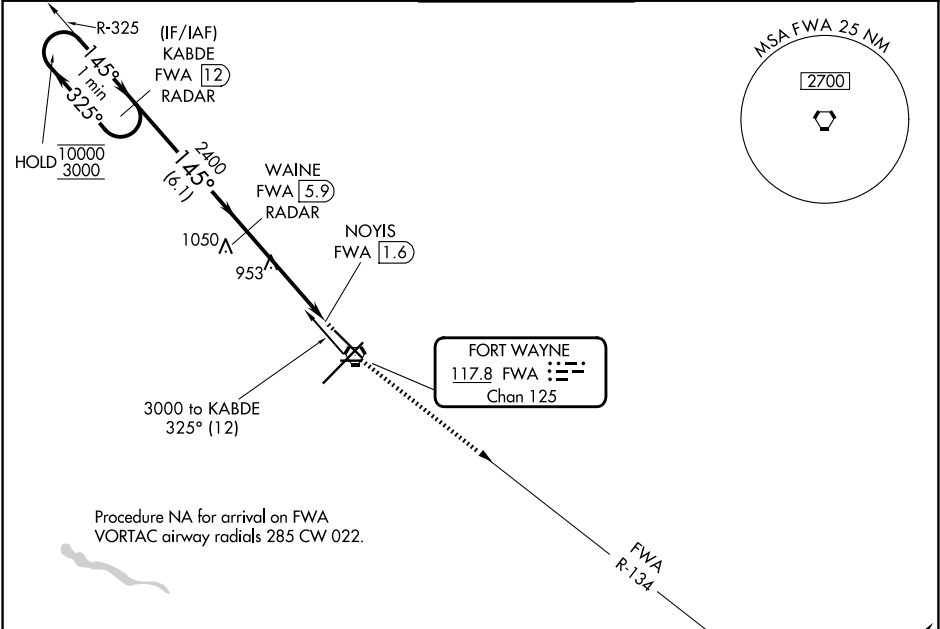

One Minute Holding Pattern		KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	FWA 2.5	NOYIS FWA 1.6
10000 3000		325° 145°	145°	2400	3.05° TCH 53
		6.1 NM	3.4 NM	0.9	0.5
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1 3/8 478 (500-1 3/8)	1280-1 1/2 478 (500-1 1/2)	1280-1 3/4 478 (500-1 3/4)
CIRCLING	1300-1	485 (500-1)	1360-1 1/2 545 (600-1 1/2)	1520-2 1/4 705 (800-2 1/4)	1520-2 1/2 705 (800-2 1/2)