



VORTAC FWA	APP CRS	Rwy Ldg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5

FORT WAYNE INTL (FWA)

DME or RADAR required.		ALSIF-2	MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.	
For inop ALS, increase S-5 Cat C/D/E visibility to 1½ SM. ASR			ATIS	CLNC DEL
121.25 360.825		FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON
127.2 284.6		119.1 269.325	121.9 348.6	124.75

Procedure NA for arrival on FWA VORTAC
 airway radials 198 CW 294.

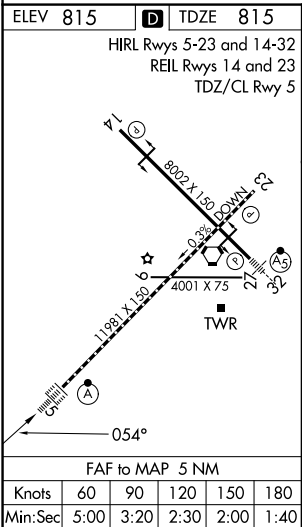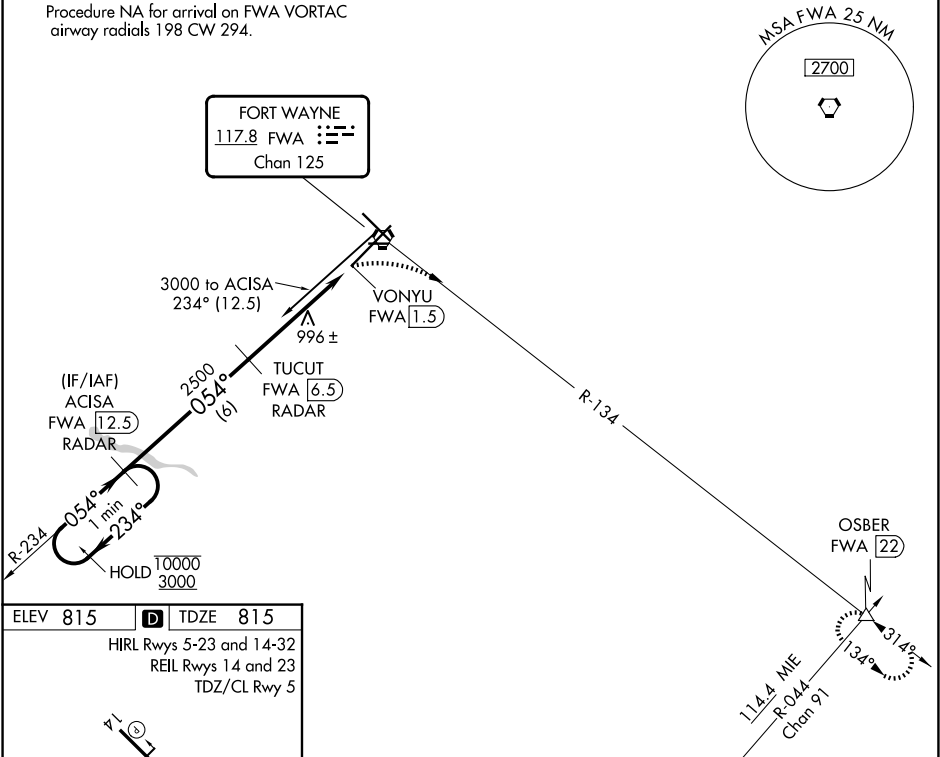

One Minute Holding Pattern		ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 FWA R-134	OSBER
10000 ← 234° 3000 → 054°		054°	2500	3.07° TCH 55	FWA 2.9 VONYU FWA 1.5
		6 NM	3.6 NM	1.4	
CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1¼)
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)