



VOR/DME	MLB	Rwy Ldg	9482
115.85	APP CRS	TDZE	26
Chan 105 (Y)	288°	Apt Elev	33

VOR RWY 27L
MELBOURNE ORLANDO INTL (MLB)

V A			MISSED APPROACH: Climb to 1000 then climbing left turn to 2100 direct MLB VOR/DME and hold.			
ATIS 132.55	ORLANDO APP CON 126.025 281.425	MELBOURNE TOWER ★ 118.2 (CTAF) 0 257.8	GND CON 121.9	CLNC DEL 121.9	CLNC DEL 126.025 (When twr closed)	UNICOM 122.95

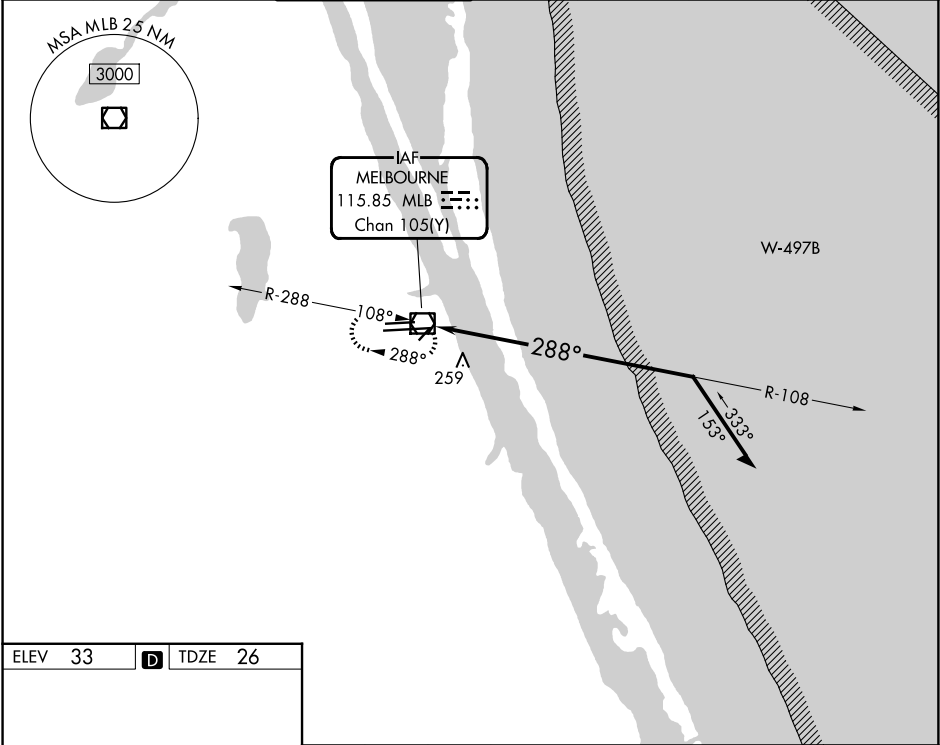

ELEV	33	D	TDZE	26
------	----	---	------	----

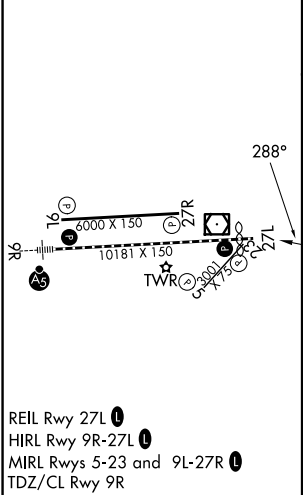

1000	2100	MLB
		

MLB
VOR/DME

Remain within 10 NM

108°

1600

288°

MLB
1.7

0.2 1.5 NM

CATEGORY	A	B	C	D
S-27L	560-1	534 (600-1)	560-1½	534 (600-1½)
CIRCLING	560-1	527 (600-1)	680-1¾ 647 (700-1¾)	880-2¾ 847 (900-2¾)