

VORTAC IRW 114.1 Chan 88	APP CRS 300°	Rwy Idg TDZE Apt Elev N/A N/A 1354
--	------------------------	--

VOR-B

CLARENCE E PAGE MUNI (R/C/E)


▼

▲

When local altimeter setting not received, use Wiley Post altimeter setting and increase all MDA 40 feet.

MISSED APPROACH: Climbing left turn to 3000 direct IRW VORTAC and hold.

AWOS-3 125.05	OKE CITY APP CON 124.6 266.8	UNICOM 123.0 (CTAF) 0
-------------------------	--	---------------------------------

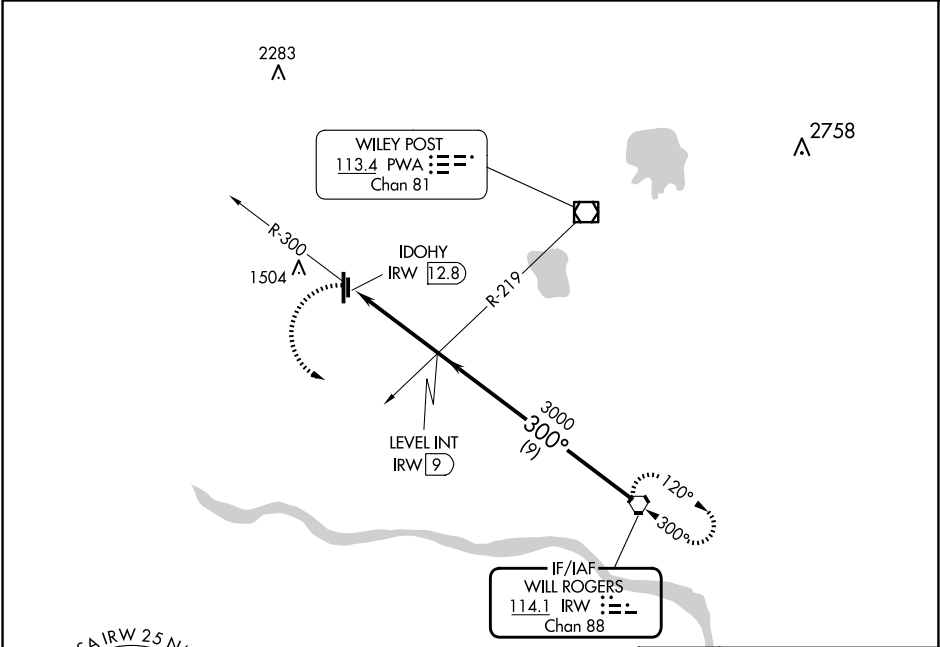

3000 IRW 3000				ELEV 1354 IRW VORTAC 3800 Procedure Turn NA													
IRW 12.8 LEVEL INT IRW 9 3000 300° 3.8 NM 9 NM				6014 X 100 3502 X 75 35R 35L 300° MIRL Rwy 17L-35R 0 HIRL Rwy 17R-35L 0													
CATEGORY	A	B	C	D	FAF to MAP 3.8 NM												
CIRCLING	1860-1	506 (600-1)	1860-1½ 506 (600-1½)	NA	<table><tr><td>Knots</td><td>60</td><td>90</td><td>120</td><td>150</td><td>180</td></tr><tr><td>Min:Sec</td><td>3:48</td><td>2:32</td><td>1:54</td><td>1:31</td><td>1:16</td></tr></table>	Knots	60	90	120	150	180	Min:Sec	3:48	2:32	1:54	1:31	1:16
Knots	60	90	120	150	180												
Min:Sec	3:48	2:32	1:54	1:31	1:16												