

LOC I-SNS <u>108.5</u>	APP CRS 315°	Rwy Idg 4825 TDZE 82 Apt Elev 84
----------------------------------	------------------------	---

ILS RWY 31
SALINAS MUNI (SNS)

DME required.



T
A DME from SNS VORTAC. DME use requires simultaneous reception of I-SNS and SNS DME.

MALSR



MISSED APPROACH: Climb to 800, then climbing left turn to 3000 on SNS VORTAC R-275 to MARN/SNS 10.9 DME and hold, continue climb-in-hold to 3000.

ATIS 124.85	NORCAL APP CON 133.0 251.15	SALINAS TOWER ★ 119.525 (CTAF) 0 239.3	GND CON 121.7	UNICOM 123.0
-----------------------	---------------------------------------	--	-------------------------	------------------------

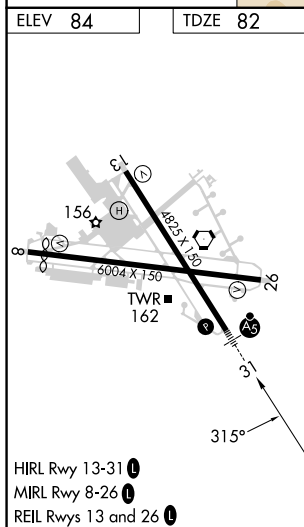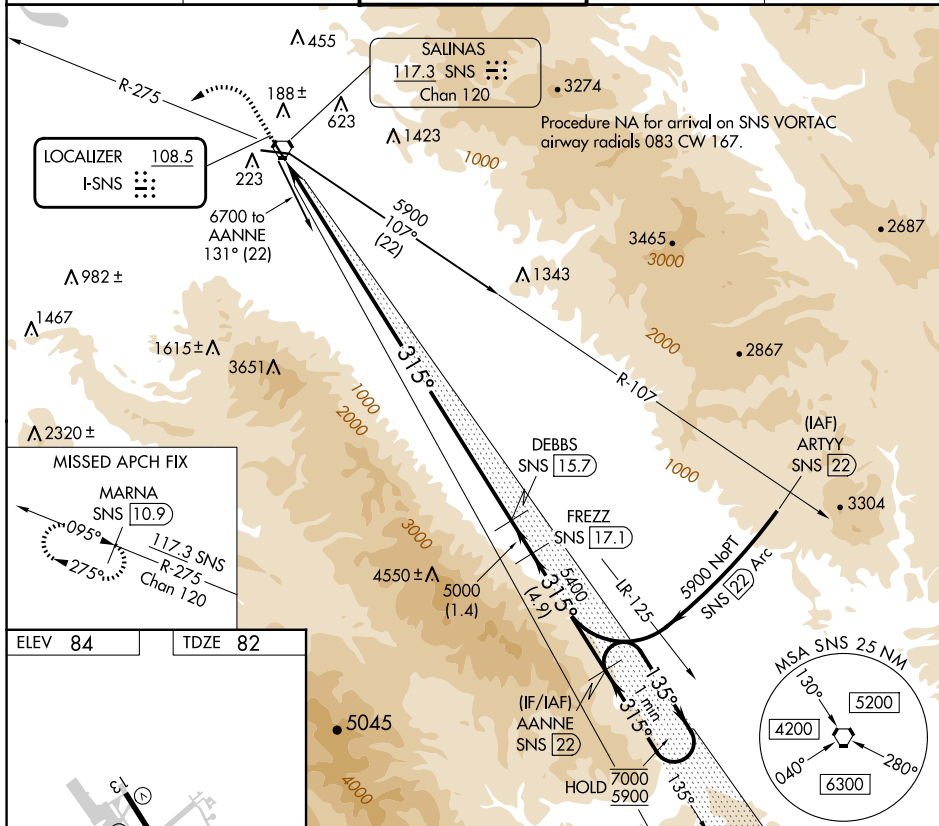

800 ↑	3000 SNS R-275	MARNA SNS 10.9	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 59).			
			DEBBS SNS 15.7	FREZZ SNS 17.1	AANNE SNS 22	One Minute Holding Pattern
			5000	315° 5400	135° 7000 ← 315° 5900	GS 3.00° TCH 50
			5000			
			15.3 NM	1.4 NM	4.9 NM	
CATEGORY	A		B		C	D
S-ILS 31		302/24 220 (300-½)				