


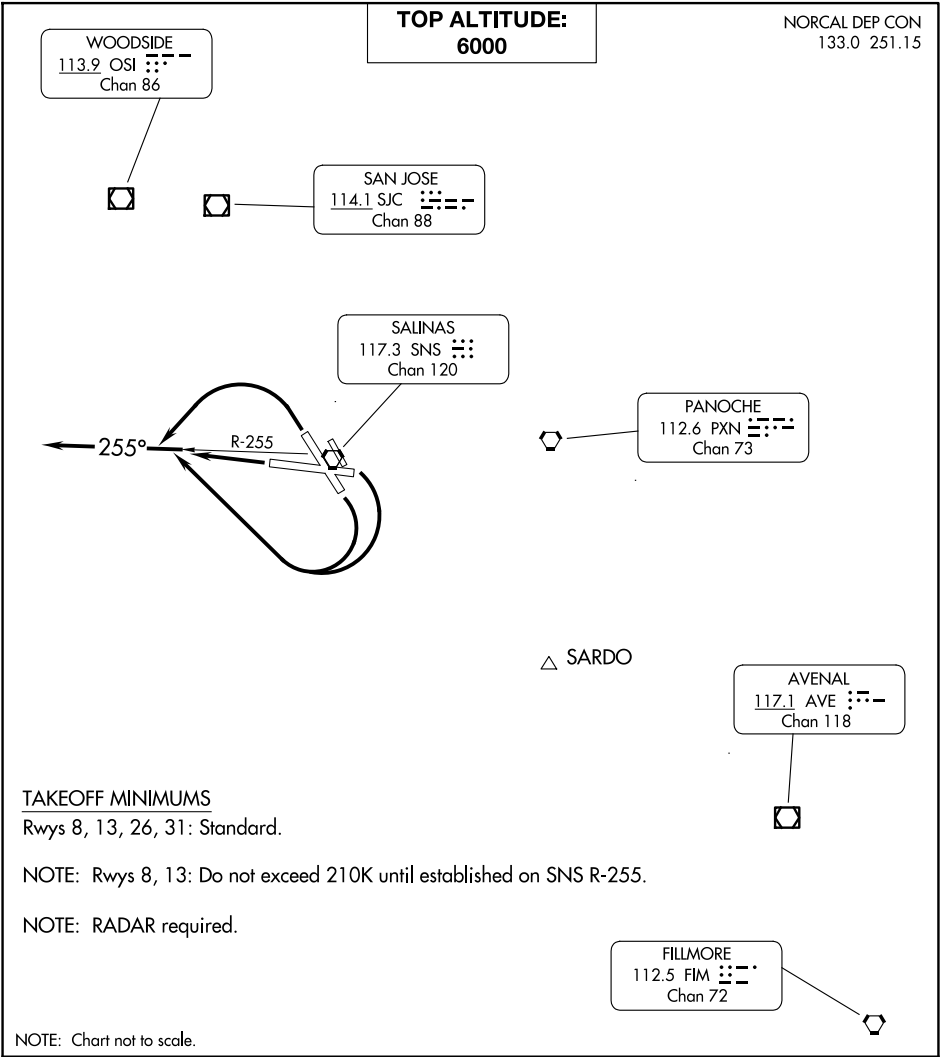

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 8, 13: Climbing right turn to 6000 to intercept SNS R-255 thence . . . .

TAKEOFF RUNWAY 26: Climb to 6000 to intercept SNS R-255 thence . . . .

TAKEOFF RUNWAY 31: Climbing left turn to 6000 to intercept SNS R-255 thence . . . .

. . . . Expect RADAR vectors to assigned route. Expect clearance to filed altitude/flight level within five (5) minutes after departure.