


LOC/DME I-OJW 108.3 Chan 20	APP CRS 183°	Rwy Idg 5700 TDZE 54 Apt Elev 56
---	------------------------	---

LDA RWY 20R
JOHN WAYNE/ORANGE COUNTY (SNA)

DME required.			MALSR 	MISSED APPROACH: Climb to 1000 then climbing right turn to 3000 direct SJ VORTAC and hold.		
T A	Circling Rwy 20L NA at night. For inop ALS, increase S-LDA 20R Cat C/D visibility to RVR 6000.					
D-ATIS 126.0	SOCAL APP CON 121.3 263.1	JOHN WAYNE TOWER ★ 126.8 (CTAF) 0 343.625	GND CON 120.8	CLNC DEL 118.0	CPDLC	UNICOM 122.95

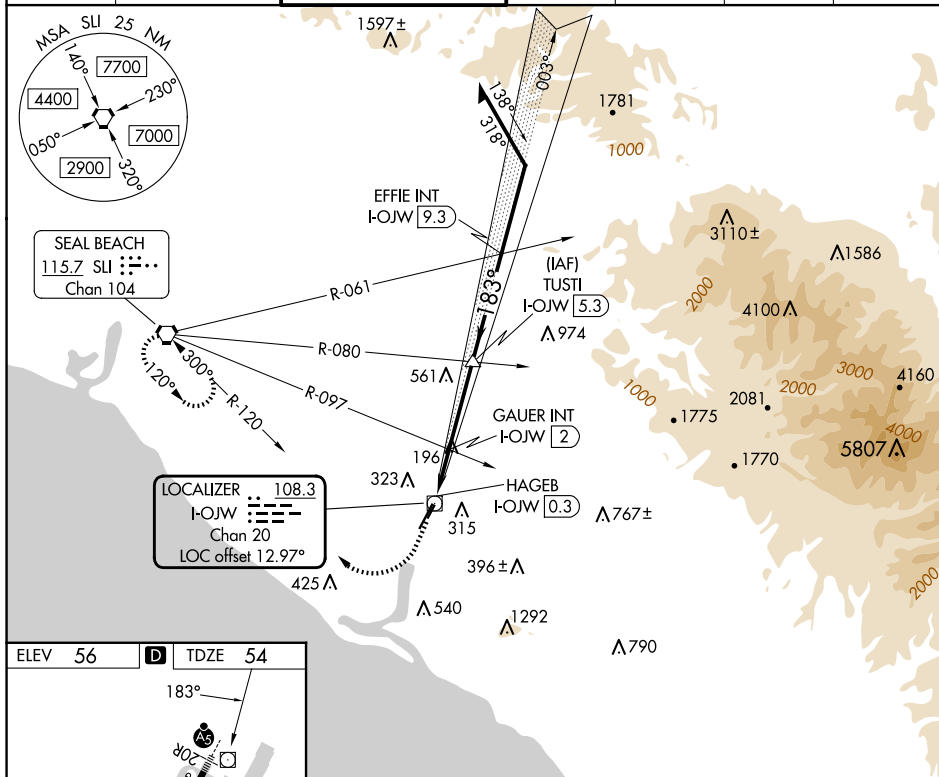

REIL Rwy 20L
MIRL Rwy 2R-20L
HIRL Rwy 2L-20R