

(STOOP.STOOP3) 24081
STOOP THREE ARRIVAL

AL-449 (FAA)


WEST PALM BEACH, FLORIDA

PALM BEACH APP CON
124.6 317.4
BCT AWOS-3
121.125
PBI D-ATIS
123.75

MELBOURNE
115.85 MLB
Chan 105 (Y)

1600
1580
1560
1540
1520
1500
1480
1460
1440
1420
1400
1380
1360
1340
1320
1300
1280
1260
1240
1220
1200
1180
1160
1140
1120
1100
1080
1060
1040
1020
1000
980
960
940
920
900
880
860
840
820
800
780
760
740
720
700
680
660
640
620
600
580
560
540
520
500
480
460
440
420
400
380
360
340
320
300
280
260
240
220
200
180
160
140
120
100
80
60
40
20
0

NOTE: Jet aircraft only.
NOTE: DME required.
NOTE: RADAR required.

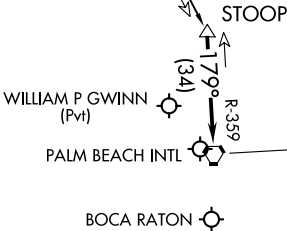

PALM BEACH
115.7 PBI
Chan 104

6000

Ldg KPBI/KBCT/06FA

NOTE: Chart not to scale.

ARRIVAL ROUTE DESCRIPTION

MELBOURNE TRANSITION (MLB.STOOP3): From over MLB VOR/DME on MLB R-159 to STOOP.

LANDING ALL AIRPORTS: From STOOP on PALM BEACH VORTAC (PBI) R-359 to cross PBI VORTAC at 6000. Expect RADAR vectors.