
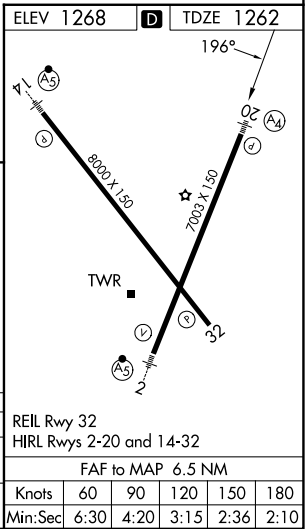
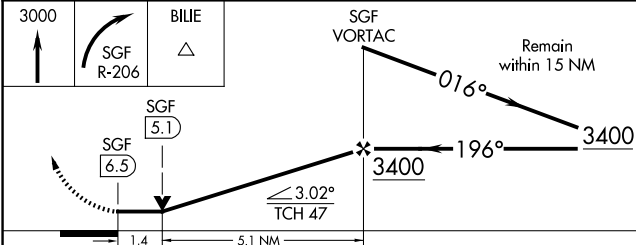
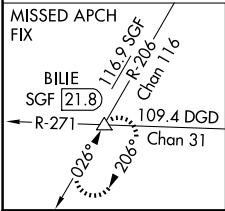


VORTAC SGF	APP CRS	Rwy Ldg	7003
116.9	196°	TDZE	1262
Chan 116		Apt Elev	1268

VOR or TACAN RWY 20
SPRINGFIELD-BRANSON NTL (SGF')

DME required.	MALS	MISSED APPROACH: Climb to 3000 then right turn to intercept SGF R-206 to BLUE INT/SGF 21.8 DME and hold.
NA Rwy 20 helicopter visibility reduction below 3/4 SM NA. For inop ALS, increase S-20 Cat E to 1 3/4 SM. VDP NA when using HFJ altimeter setting. When local altimeter setting not received, use HFJ altimeter setting: increase all MDAs 100 feet; increase S-20 visibility Cats C, D and E 1/4 SM, and Circling visibility Cat C and D 1/2 SM. For inop ALS, use HFJ altimeter setting: increase S-20 visibility Cats C, D and E to 1 3/4 SM.	(A4)	

ATIS 135.125	SPRINGFIELD APP CON 124.95 290.5	SPRINGFIELD TOWER 119.9 257.8	GND CON 121.9 251.15	CLNC DEL 123.675
-----------------	-------------------------------------	----------------------------------	-------------------------	---------------------

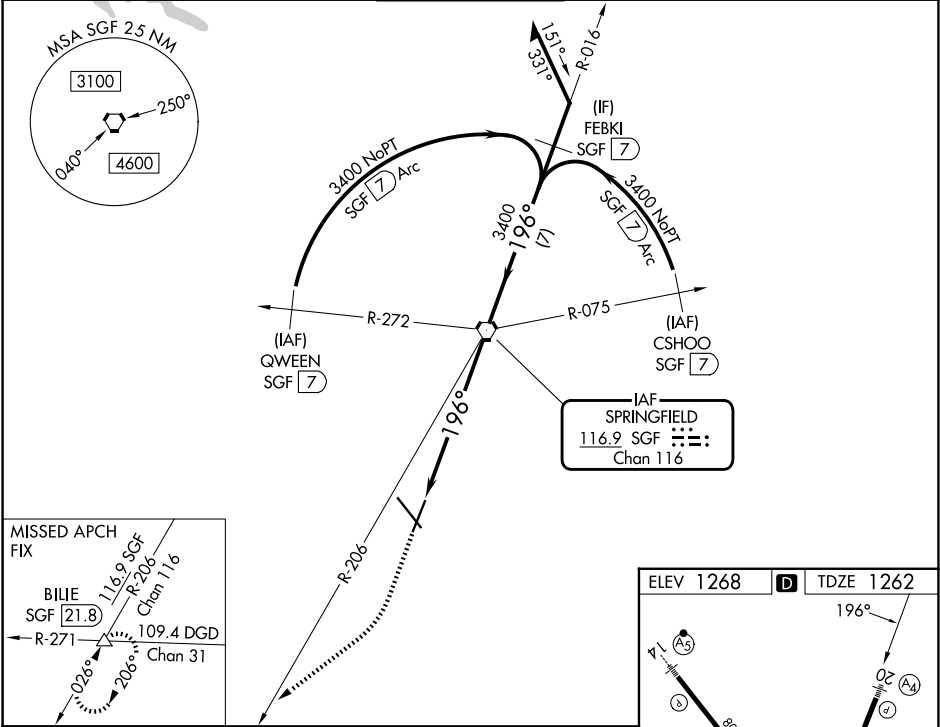

NC-3, 04 SEP 2025 to 02 OCT 2025

NC-3, 04 SEP 2025 to 02 OCT 2025