

LOC/DME I-ACY	APP CRS	Rwy Ldg
109.10	308°	10001
Chan 28		TDZE 64
		Apt Elev 75

ILS or LOC/DME RWY 31


ATLANTIC CITY INTL (ACY)

⚠


⚠

MISSED APPROACH: Climb to 500 then climbing right turn to 2000 via heading 130° and via ACY R-090 to SMITS INT/ ACY 11 DME and hold.

ATIS	ATLANTIC CITY APP CON	ATLANTIC CITY TOWER	GND CON	CLNC DEL
125.725 316.15	124.6 327.125	120.3 239.0	121.9 284.6	127.85 353.775

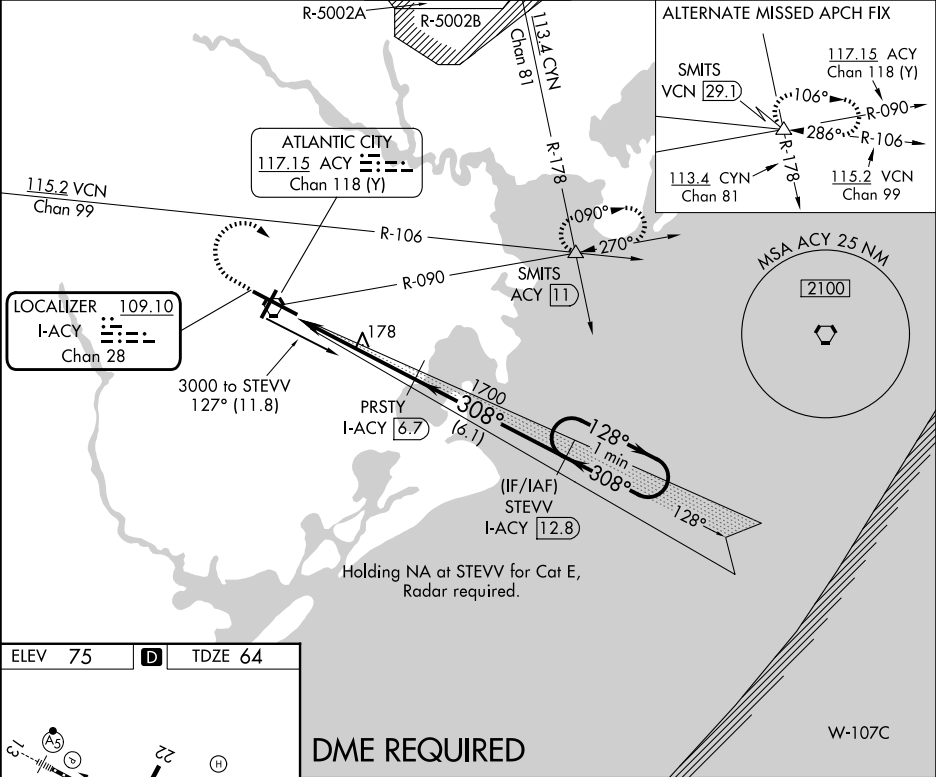

ELEV 75	D	TDZE 64
---------	----------	---------

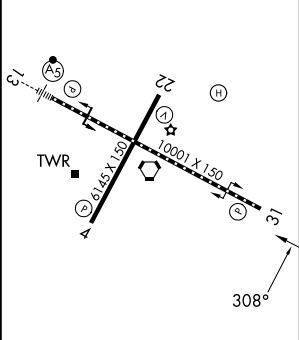

TDZ/CL Rwy 13
HIRL Rwy 4-22 and 13-31
REIL Rwy 31

DME REQUIRED					
500	2000	ACY R-090	SMITS	Use I-ACY DME when on localizer course. VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 69).	
↑	hdg 130°			One Minute Holding Pattern	
		PRSTY I-ACY [6.7]	STEVEV I-ACY [12.8]		
		I-ACY [1.8]	I-ACY [3]		
		1700	1700		
		308°	128°		
		1.2	3.7 NM	6.1 NM	
CATEGORY	A	B	C	D	E
S-ILS 31	264/40 200 (200-¾)				
S-LOC 31	520/55	456 (500-1)	520-1½ 456 (500-1½)	520-1½	456 (500-1½)
CIRCLING	540-1 465 (500-1)	600-1 525 (600-1)	620-1½ 545 (600-1½)	640-2 565 (600-2)	760-2½ 685 (700-2½)