


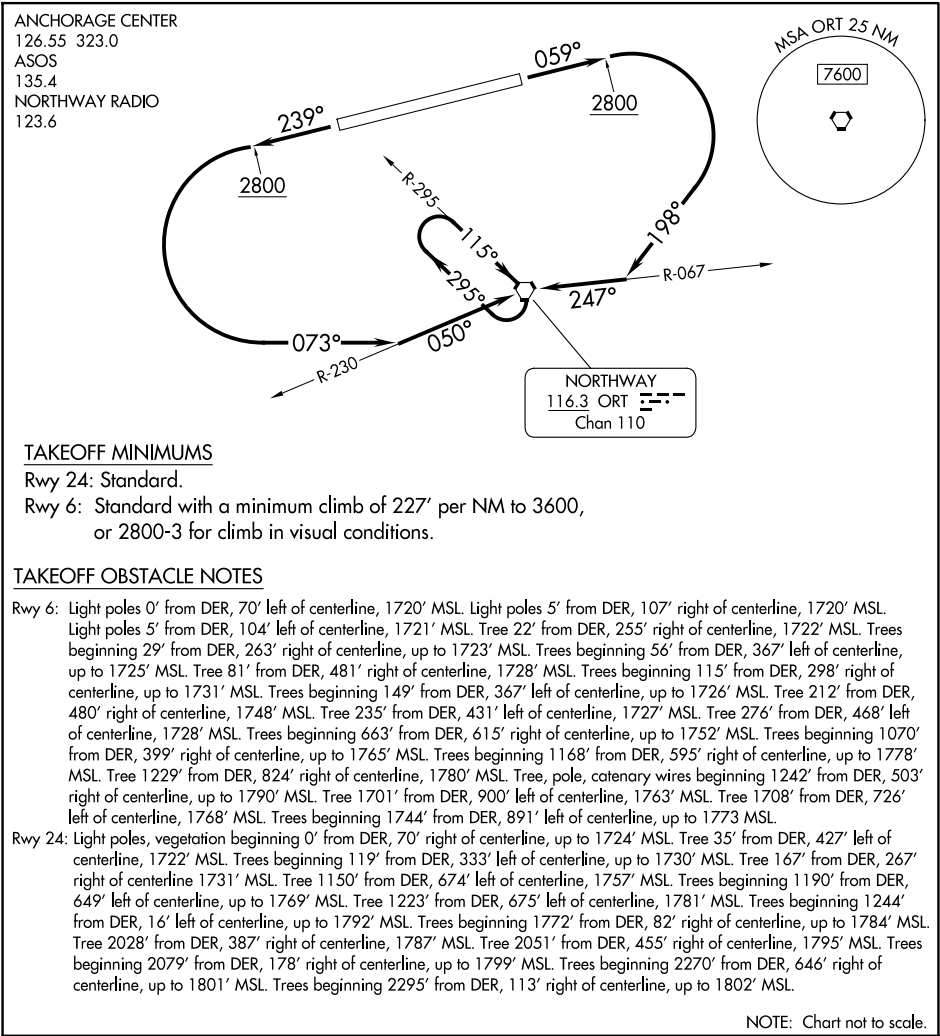

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 6: Climb on heading 059° to 2800, then climbing right turn heading 198° to intercept ORT VORTAC R-067 to ORT and hold, thence

TAKEOFF RUNWAY 24: Climb on heading 239° to 2800, then climbing left turn heading 073° to intercept ORT VORTAC R-230 to ORT and hold, thence

. . . continue climb in ORT holding pattern to cross ORT at or above MEA for route of flight.

VCOA RUNWAY 6: Obtain ATC approval for VCOA when requesting IFR clearance.
Climb in visual conditions to cross Northway Airport at or above 4400 before proceeding on course.