

VOR/DME SPW <u>115.15</u> Chan 98 (Y)	APP CRS 292°	Rwy Idg 5511 TDZE 1338 Apt Elev 1339
---	------------------------	---


VOR RWY 30
SPENCER MUNI (SPW)

DME required.


T VDP NA when using Estherville altimeter setting.
A When local altimeter setting not received, use Estherville altimeter setting and increase all MDA 60 feet and increase S-30 Cat C/D visibility $\frac{1}{2}$ SM and Circling Cat C/D visibility $\frac{1}{4}$ SM.

MISSED APPROACH: Climb to 3000, then left turn direct SPW VOR/DME, then on SPW VOR/DME R-112 to ZUNMU/SPW 5.3 DME and hold.

ASOS 126.625	MINNEAPOLIS CENTER 127.75 257.7	UNICOM 123.0 (CTAF) 0
------------------------	---	---------------------------------

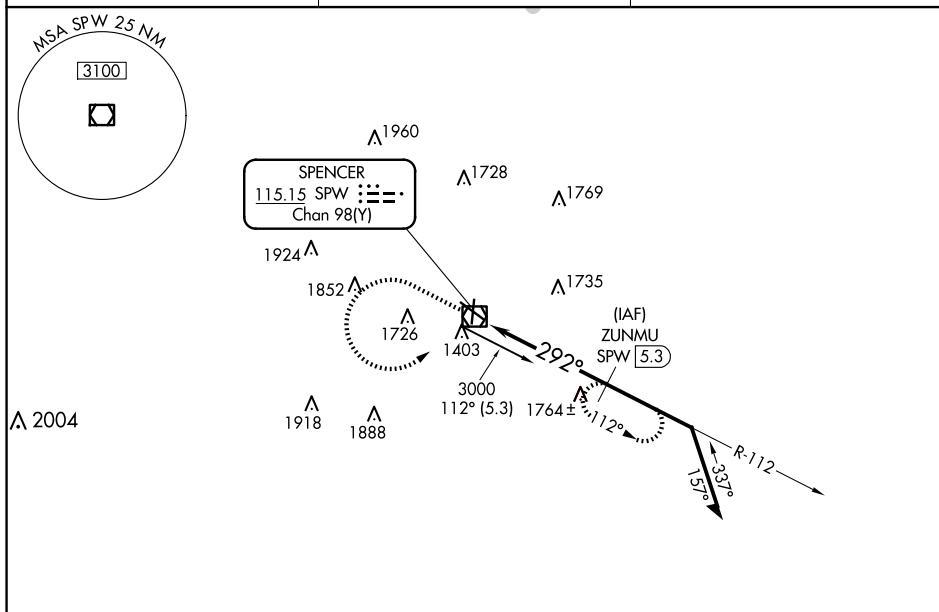

ELEV 1339		TDZE 1338
-----------	--	-----------

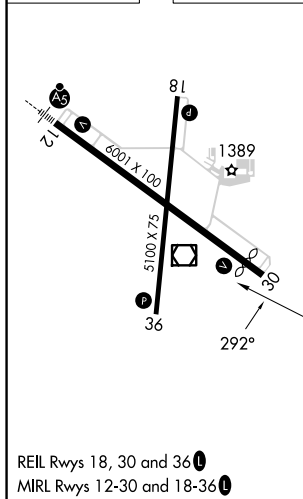

3000	SPW	SPW R-112	ZUNMU SPW 5.3	ZUNMU SPW 5.3	Remain within 10 NM
CATEGORY	A	B	C	D	
S-30	2080-1 742 (800-1)	2080-1¼ 742 (800-1¼)	2080-2	742 (800-2)	
C CIRCLING	2080-1 741 (800-1)	2080-1¼ 741 (800-1¼)	2100-2¼ 761 (800-2¼)	2100-2½ 761 (800-2½)	