


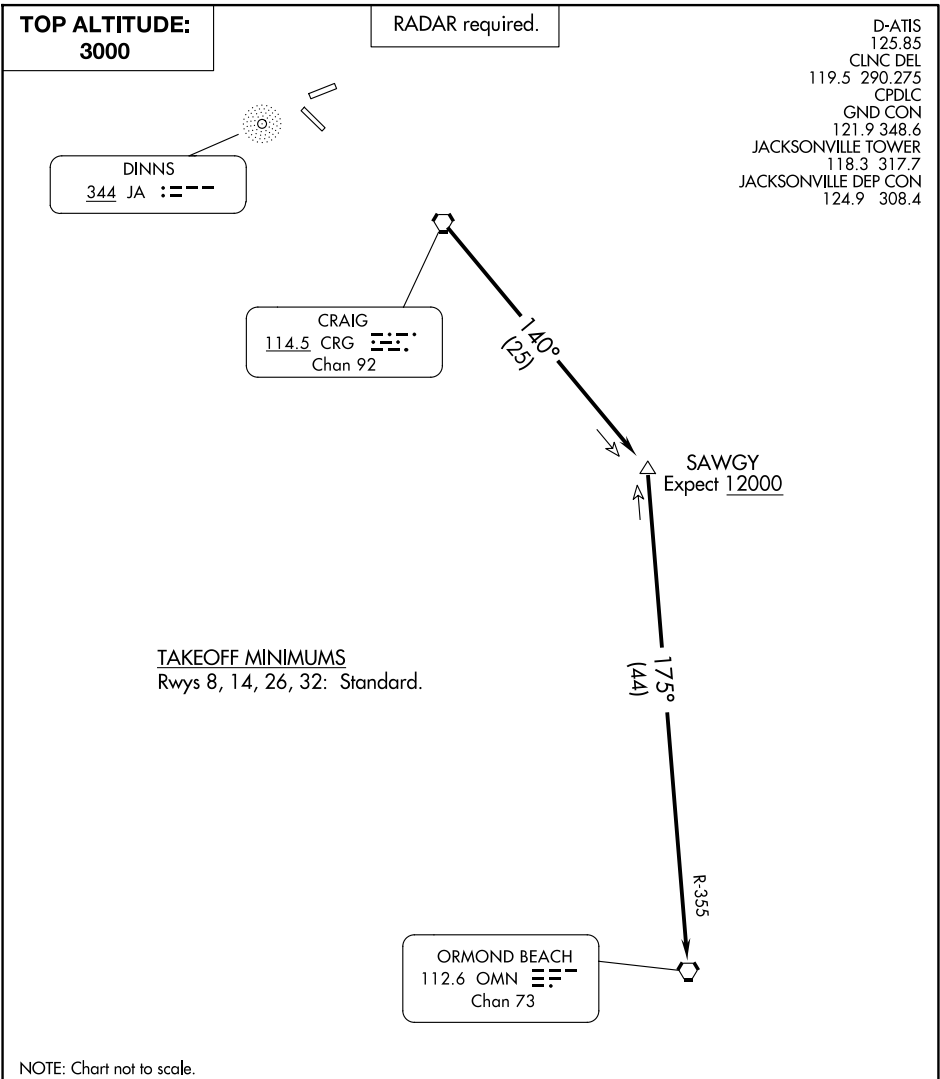

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF ALL RUNWAYS: Climb on assigned heading for RADAR vectors to join CRG R-140 to SAWGY INT, then on OMN R-355 to OMN VORTAC, thence

. . . .on RADAR vectors to appropriate route. Maintain 3000, expect filed altitude 10 minutes after departure.