

|                                               |                        |                                                             |
|-----------------------------------------------|------------------------|-------------------------------------------------------------|
| VOR/DME SCC<br><b>113.9</b><br>Chan <b>86</b> | APP CRS<br><b>238°</b> | Rwy Ldg <b>6500</b><br>TDZE <b>66</b><br>Apt Elev <b>67</b> |
|-----------------------------------------------|------------------------|-------------------------------------------------------------|

VOR Z RWY 24  
DEADHORSE (SCC) (PASC)

**T** DME required.  
For inop ALS, increase Cats C/D/E visibility to RVR 6000.


MALSR

**MISSED APPROACH:** Climb to 1500 then climbing right turn to 2000 direct SCC VOR/DME and hold, continue climb-in-hold to 2000.



AFIS★  
118.4

ANCHORAGE CENTER  
134.4 370.9

DEADHORSE RADIO  
123.6 (CTAF) **L**

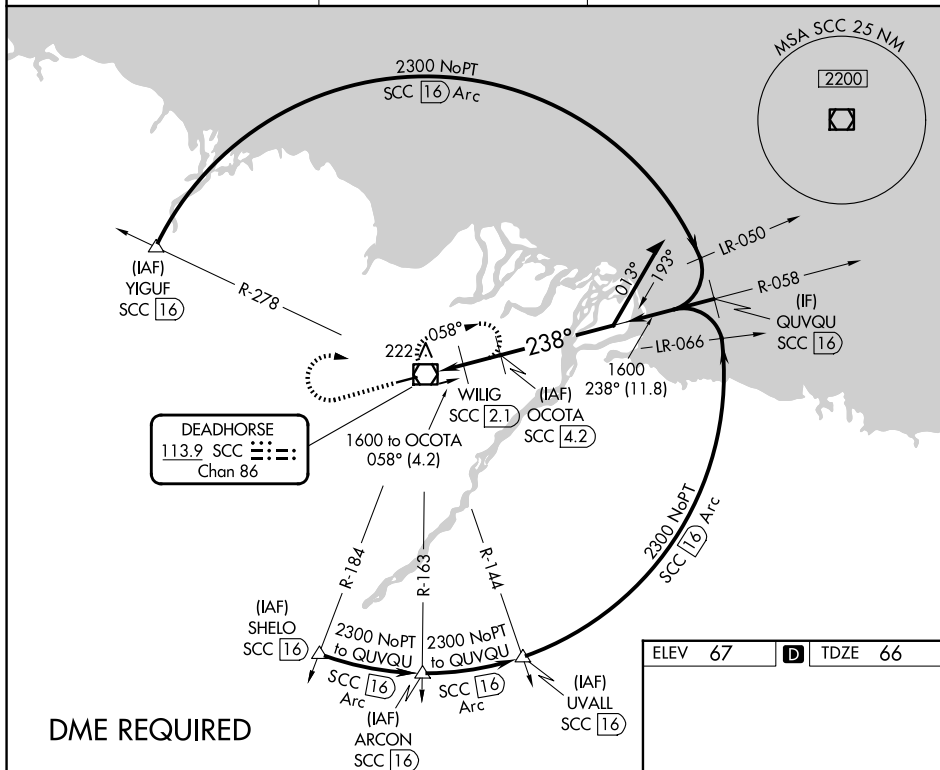

## DME REQUIRED

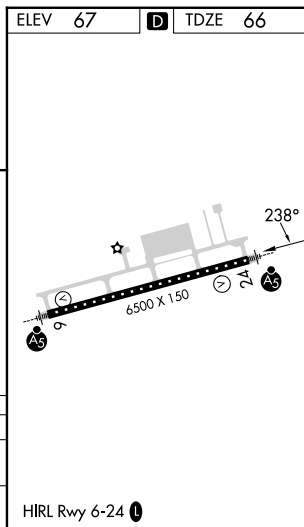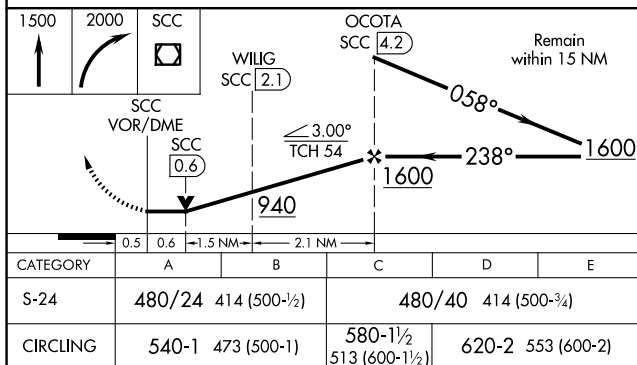

DEADHORSE (SCC) (PASC)  
VOR Z RWY 24