


VOR XUB <u>112.5</u>	APP CRS 204°	Rwy Idg 5405 TDZE 716 Apt Elev 725
--------------------------------	------------------------	---

VOR RWY 23
ROSS COUNTY (RZT)


T When local altimeter setting not received, use Rickenbacker Intl
A altimeter setting. When VGSI is inop, Straight-in and Circling
NA Rwy 23 procedures NA at night.

MISSED APPROACH: Climb to 3000 then right turn direct XUB VOR and hold.

AWOS-3 119.225	COLUMBUS APP CON 134.0 279.6	UNICOM 122.8 (CTAF)	123.0 0
--------------------------	--	-------------------------------	----------------

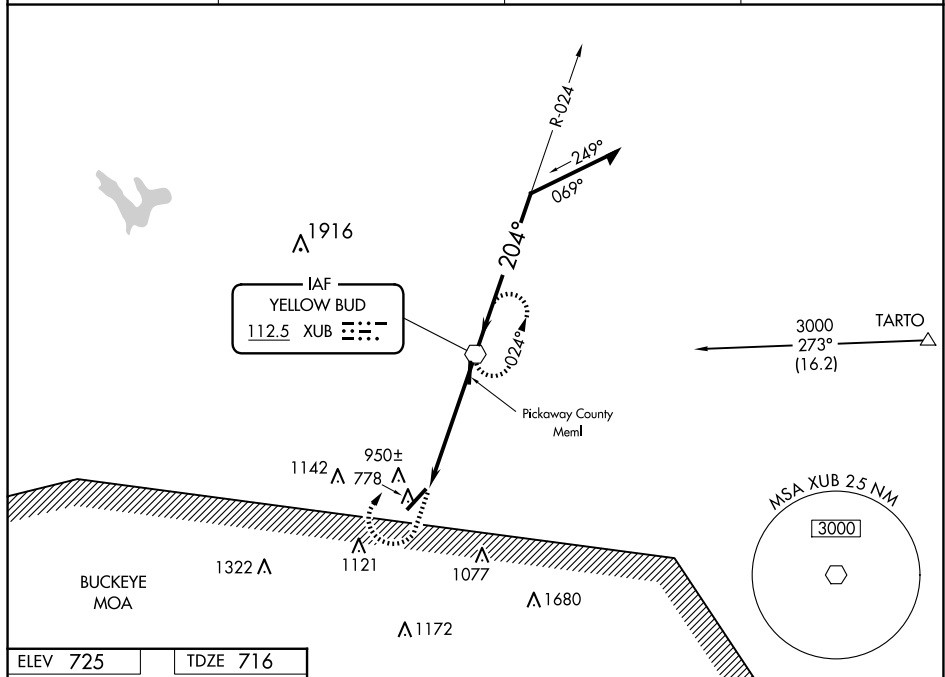

ELEV 725	TDZE 716
----------	----------

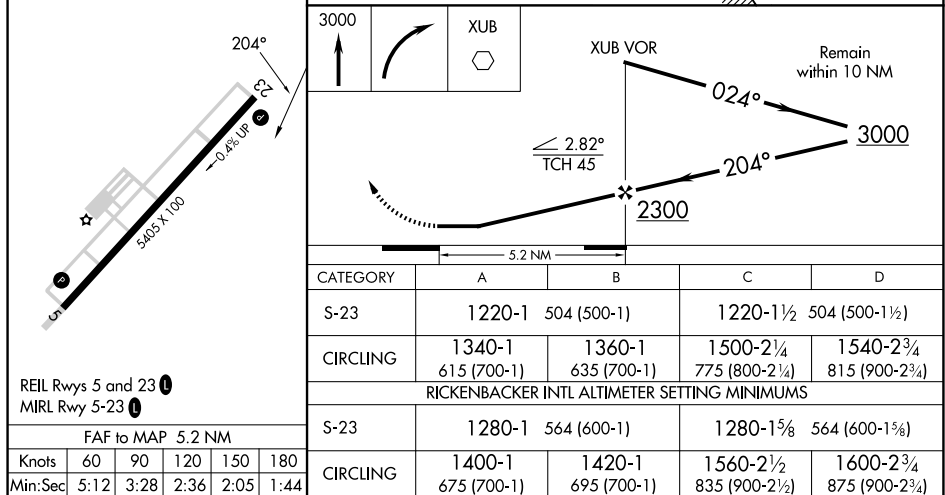

CATEGORY	A	B	C	D
S-23	1220-1 504 (500-1)		1220-1½ 504 (500-1½)	
CIRCLING	1340-1 615 (700-1)	1360-1 635 (700-1)	1500-2¼ 775 (800-2¼)	1540-2¾ 815 (900-2¾)
RICKENBACKER INTL ALTIMETER SETTING MINIMUMS				
S-23	1280-1 564 (600-1)		1280-1⅝ 564 (600-1⅝)	
CIRCLING	1400-1 675 (700-1)	1420-1 695 (700-1)	1560-2½ 835 (900-2½)	1600-2¾ 875 (900-2¾)