

APP CRS
004°

Rwy Idg
TDZE
Apt Elev

3244
125
125

RNAV (GPS) RWY 36
WATTS-WOODLAND (O41)

▼


NA

DME/DME RNP- 0.3 NA.
Procedure NA at night.
Use Sacramento Intl altimeter setting; when not received,
use Sacramento Exec altimeter setting and increase all
MDA 20 feet.

MISSED APPROACH: Climbing left turn to 3000 direct CEVIT
and hold.

TRAVIS APP CON
126.6 281.45

UNICOM
122.8 (CTAF) 0

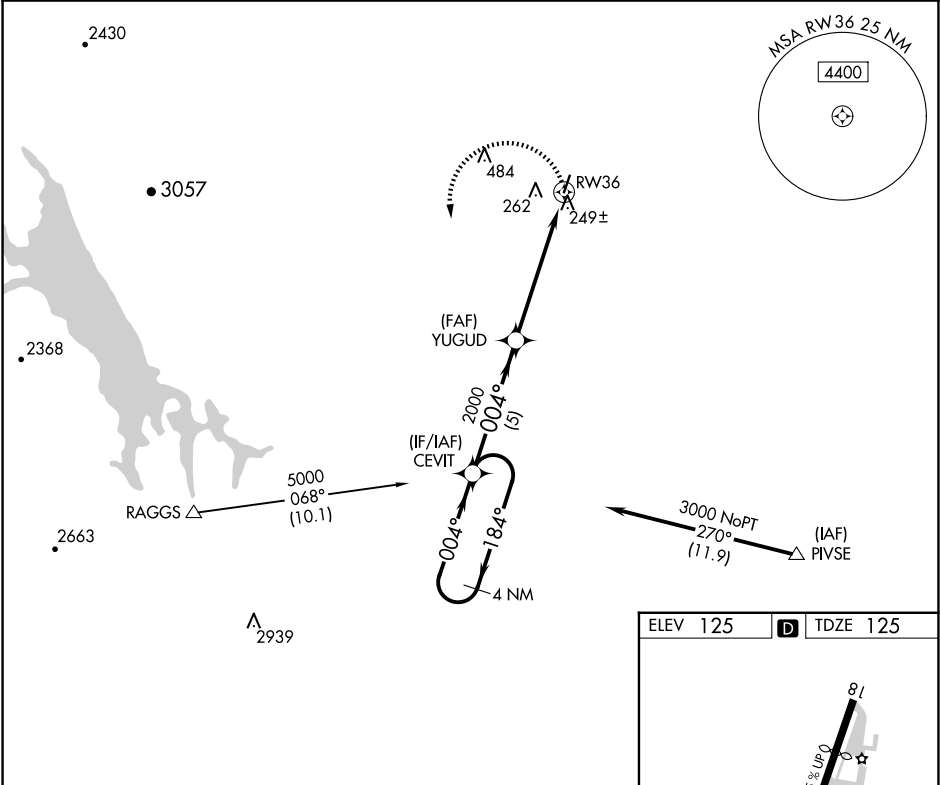

4 NM Holding Pattern

CEVIT

3000

184°

004°

004°

YUGUD

3.05° TCH 40

2000

RW36

5 NM

5.7 NM

3000

CEVIT

CATEGORY	A	B	C	D
RNAV MDA	560-1	435 (500-1)	NA	
CIRCLING	620-1	495 (500-1)	NA	

ELEV 125

TDZE 125

81

0.5% UP 0

3759 X 60

36

004°

MIRL Rwy 18-36 0