

VORTAC PER 113.2 Chan 79	APP CRS 189°	Rwy Idg 5103 TDZE 994 Apt Elev 1003
--	------------------------	--


VOR RWY 17
PERRY MUNI (F22)

T	Obtain local altimeter setting on CTAF; when not
NA	received, use Ponca City altimeter setting. DME required.

MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 direct PER VORTAC and hold.

KANSAS CITY CENTER
127.8 319.1

UNICOM
122.8 (CTAF) **L**

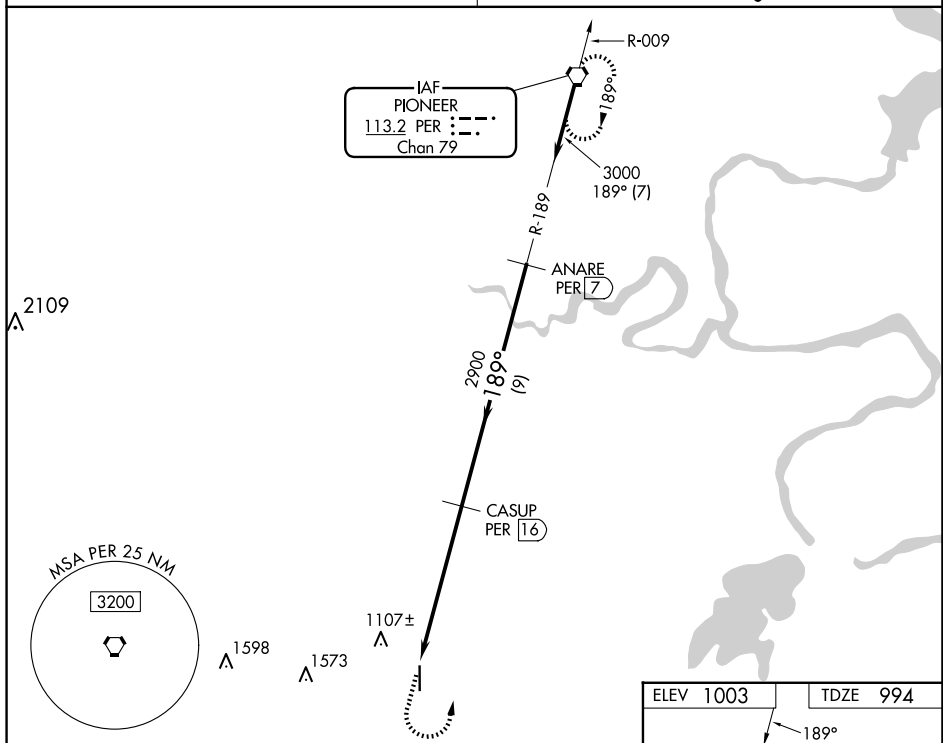

2000	3000	PER

PER 22

CASUP
PER 16

ANARE
PER 7

2900

3000


189°

2.99°

TCH 40

Procedure
Turn
NA

	6 NM		9 NM	
CATEGORY	A	B	C	D
S-17	1500-1 506 (500-1)	1500-1¼ 506 (500-1¼)	1500-1½ 506 (500-1½)	NA
C CIRCLING	1500-1 497 (500-1)	1500-1¼ 497 (500-1¼)	1620-1¾ 617 (700-1¾)	NA
PONCA CITY ALTIMETER SETTING MINIMUMS				
S-17	1560-1 566 (600-1)	1560-1¼ 566 (600-1¼)	1560-1⅝ 566 (600-1⅝)	NA
C CIRCLING	1560-1 557 (600-1)	1560-1¼ 557 (600-1¼)	1680-2 677 (700-2)	NA

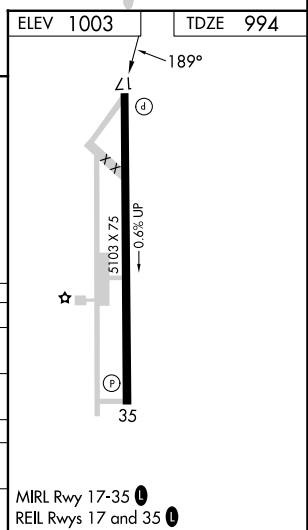

PERRY MUNI (F22)
VOR RWY 17