



VOR/DME VNY	APP CRS	Rwy Ldg TDZE	N/A
113.1	046°	Apt Elev	N/A
Chan 78			1003


VOR-A

WHITEMAN (WHP)

⚠ When local altimeter setting not received, use Burbank altimeter setting. Procedure NA at night.	MISSED APPROACH: Climbing left turn to 3900 direct VNY VOR/DME then on VNY VOR/DME R-255 to CANOG INT/ 5.1 DME and hold.
--	---

ATIS	SOCAL APP CON	WHITEMAN TOWER ★	GND CON	UNICOM
132.1	120.4 360.6 (NORTH) 134.2 338.2 (WEST)	135.0 (CTAF)	125.0	122.95

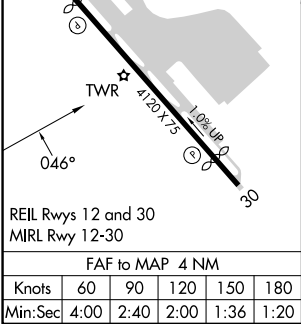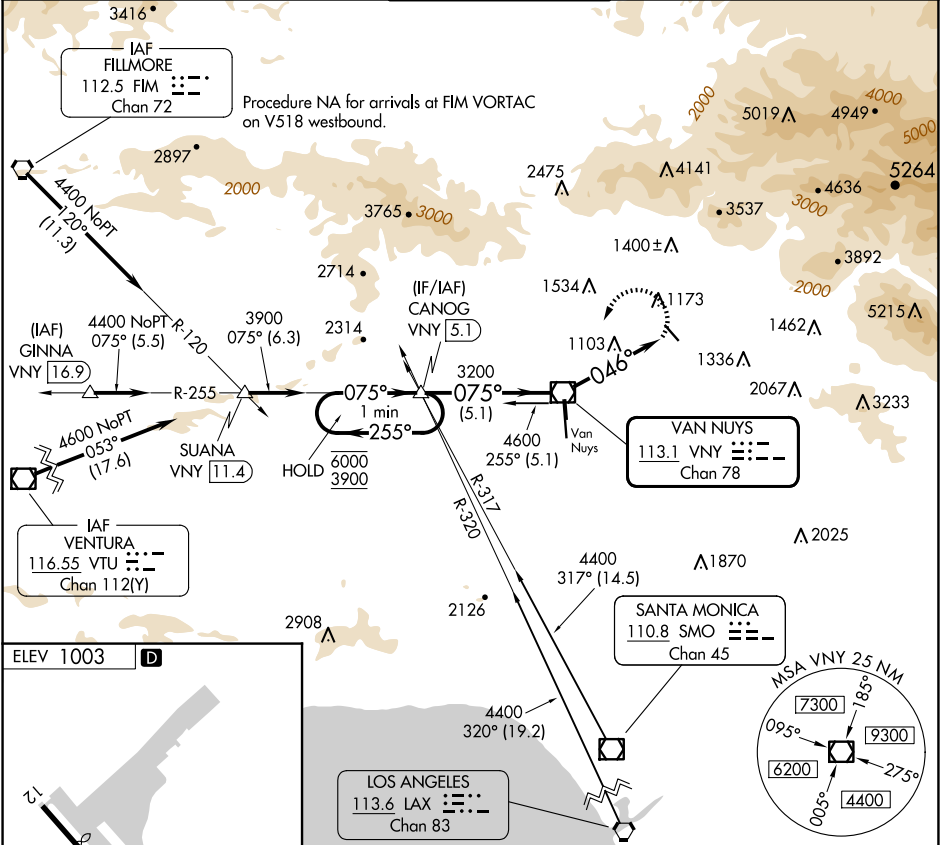

CANOG INT VNY <u>5.1</u>		3900 	VNY 	VNY R-255	CANOG 
One Minute Holding Pattern					
<u>6000</u> ← 255° <u>3900</u> → 075°					
CATEGORY	A	B	C	D	
 CIRCLING	1760-1 757 (800-1)	1860-1¼ 857 (900-1¼)	2200-3 1197 (1200-3)	NA	