

WAAS
CH **72726**
W03A

APP CRS
034°

Rwy Idg
TDZE **1308**
Apt Elev **1348**

RNAV (GPS) RWY 3

BRANSON WEST MUNI/EMERSON FLD (F'WB)


▼

⚠ NA

DME/DME RNP-0.3 NA. When local altimeter setting not received, use Branson altimeter setting; increase all DA 39 feet and all MDA 40 feet; increase LNAV/VNAV Cat A/B visibility to 1½ mile. For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -17°C (2°F) or above 54°C (130°F). Baro-VNAV NA when using Branson altimeter setting.

MISSED APPROACH: Climb to 3000 direct ENDRS and hold.

AWOS-3PT 119.725	SPRINGFIELD APP CON 126.35	UNICOM 123.0 (CTAF) 0
----------------------------	--------------------------------------	---------------------------------

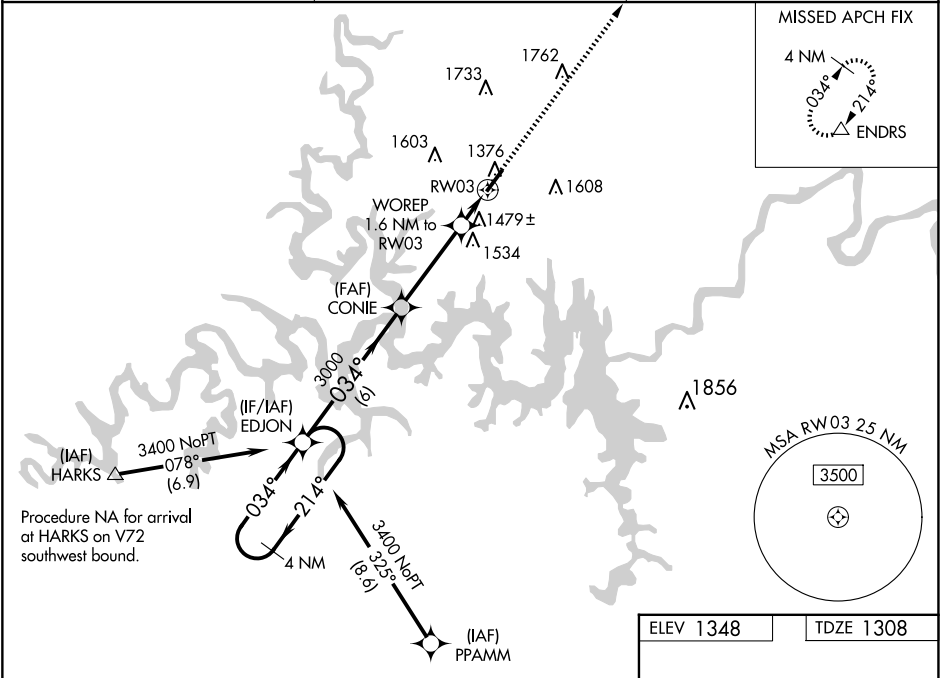

4 NM Holding Pattern		EDJON		CONIE		3000	ENDRS
3400		214°		034°		034°	
GP 3.00°		TCH 40		3000		*1840	
		6 NM		3.6 NM		1.6 NM	
CATEGORY		A	B	C	D		
LPV DA		1508-1	200 (200-1)	NA			
LNAV/VNAV DA		1813-1¾	505 (500-1¾)	NA			
LNAV MDA		1740-1	432 (400-1)	NA			
CIRCLING		1900-1	552 (600-1)	NA			

