

# HI-VOR or TACAN RWY 22

|                                               |                         |                                                                    |
|-----------------------------------------------|-------------------------|--------------------------------------------------------------------|
| VORTAC PNH<br><b>116.6</b><br>Chan <b>113</b> | APCH CRS<br><b>235°</b> | Rwy Idg <b>13,502</b><br>TDZE <b>3606</b><br>Arpt Elev <b>3607</b> |
|-----------------------------------------------|-------------------------|--------------------------------------------------------------------|

[USAF]

RICK HUSBAND AMARILLO INTL (KAMA)

DME required



- ★ When ALS inop, increase CAT CDE vis to 1½ SM.  
★★ When ALS inop, increase CAT CDE vis to 1½ SM.  
ALT MINS N/A when local altimeter not available.




MISSED APPROACH: Climb to 4100 then climbing left turn to 5000 on heading 090° and PNH VORTAC R-118 to CAUDE and hold.

|                             |                                        |                                                |                               |                                   |     |
|-----------------------------|----------------------------------------|------------------------------------------------|-------------------------------|-----------------------------------|-----|
| ATIS<br><b>118.85 350.3</b> | AMARILLO APP CON<br><b>119.5 307.0</b> | AMARILLO TOWER★<br><b>118.3 (CTAF) 0 257.9</b> | GND CON<br><b>121.9 348.6</b> | CLNC DEL<br><b>121.65 239.275</b> | ASR |
|-----------------------------|----------------------------------------|------------------------------------------------|-------------------------------|-----------------------------------|-----|

When local altimeter setting not received, use Borger altimeter setting.

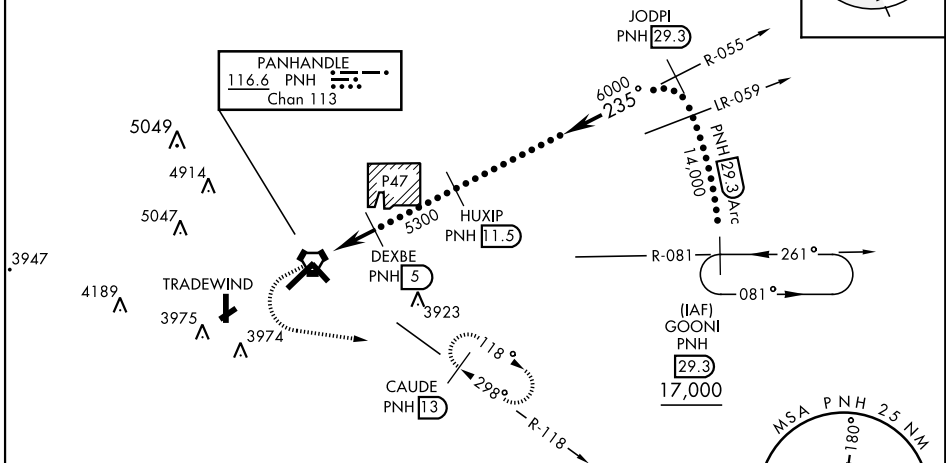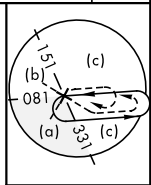


EMERG SAFE ALT 100 NM 7500

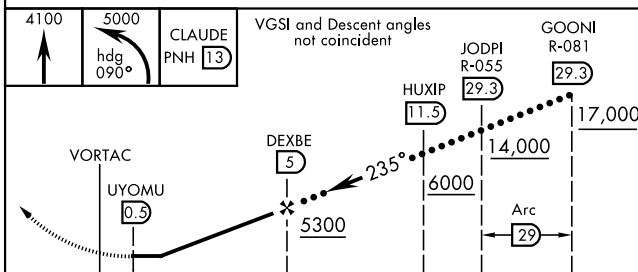

| CATEGORY                 | C                             | D                             | E                       |
|--------------------------|-------------------------------|-------------------------------|-------------------------|
| S-22 *                   | 4000-5/8 394 (400-5/8)        |                               |                         |
| CIRCLING                 | 4240-1 3/4<br>633 (700-1 3/4) | 4280-2 1/4<br>673 (700-2 1/4) | 4460-3<br>853 (900-3)   |
| BORGER ALTIMETER SETTING |                               |                               |                         |
| S-22 **                  | 4160-1 1/8 554 (600-1 1/8)    |                               |                         |
| CIRCLING                 | 4400-2 1/4<br>793 (800-2 1/4) | 4420-2 3/4<br>813 (900-2 3/4) | 4620-3<br>1013 (1100-3) |

|           |           |
|-----------|-----------|
| ELEV 3607 | TDZE 3606 |
|-----------|-----------|

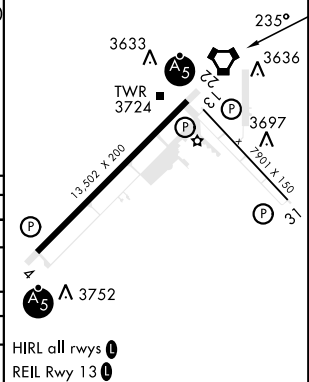

# HI-VOR or TACAN RWY 22