


See following
page for
arrival routes.

RNAV 1 - DME/DME/IRU or GPS.
RADAR required.

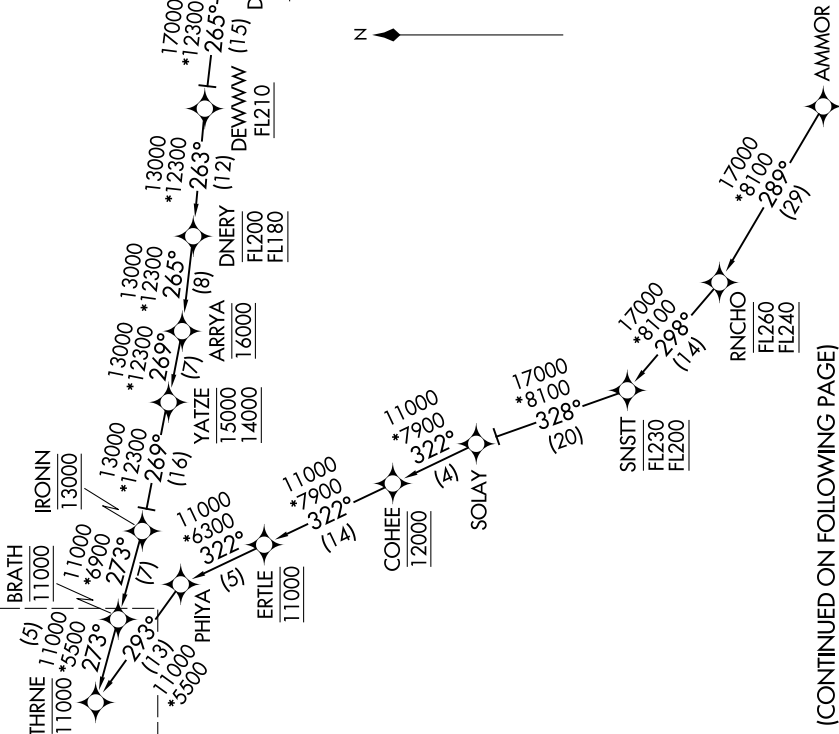

(CONTINUED ON FOLLOWING PAGE)

SOCAL APP CON
126.7 370.95
BUR D-ATIS
134.5
VNY ATIS
127.55
BURBANK TOWER
118.7 254.3
VAN NUYS TOWER ★
119.3 239.0

LITNG
264°
084°
17000 10 NM
*12300
*12300
265°
FOILD (53)
PHRED
QUITIP (12)
FL290
VLLMA (10)
DROGO (11)
FL240
DEWWW (12)
FL210
DNERV (8)
ARRVA (7)
YATZE (16)
PHIVA (5)
ERTLE (14)
COHEE (14)
SOLAY (20)
SNSTT (14)
RNCHO (14)
AMMOR (29)



NOTE: Jet and turboprop aircraft only.
NOTE: Expect local area altimeter setting reaching FL200.

NOTE: Chart not to scale.

AMMOR TRANSITION (AMMOR.THRNE4)
PHRED TRANSITION (PHRED.THRNE4)

THRNE FOUR ARRIVAL (RNAV) Transition Routes

BURBANK, CALIFORNIA