


VOR/DME FBR 114.45 Chan 91 (Y)	APP CRS 215°	Rwy Ldg 6404 TDZE 7018 Apt Elev 7038
--	------------------------	---

VOR RWY 22
FORT BRIDGER (FBR)

NA Circling NA to Rwy's 7 and 25. When local altimeter setting not received, use Evanston altimeter setting and increase all MDAs 100 feet, increase S-22 Cats C and D and Circling Cat C visibility $\frac{1}{2}$ SM, and Circling Cat D visibility $\frac{1}{2}$ SM.

MISSED APPROACH:
Climbing right turn to
9000 in FBR VOR/DME
holding pattern.

AWOS-3PT 118.8	SALT LAKE CENTER 124.35 353.5	UNICOM 122.8 (CTAF) 0
--------------------------	---	---------------------------------

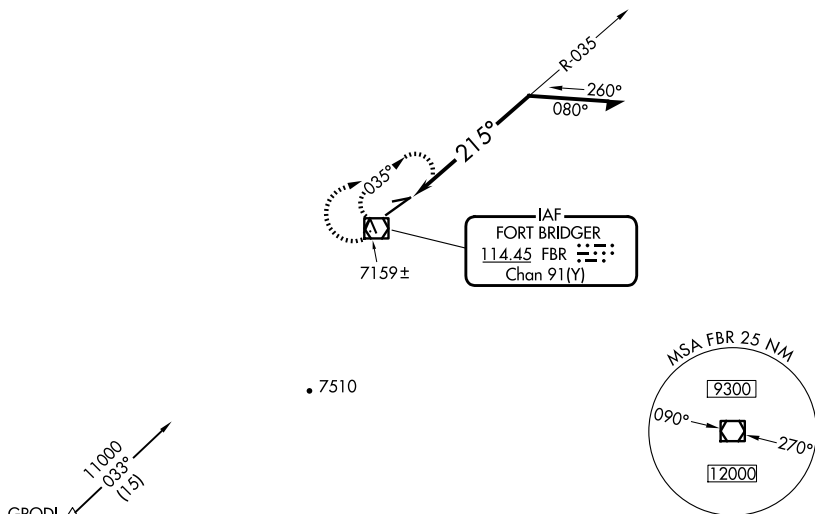

9000

FBR

FBR VOR/DME

8900

035°

215°

8500

Remain within 10 NM

