


LOC I-SJU 110.3	APP CRS 078°	Rwy Ldg 9384 TDZE 9 Apt Elev 10
---------------------------	------------------------	--

ILS or LOC RWY 8

LUIS MUNOZ MARIN INTL (SJU)(TJSJ)

DME required. ▼ For inop ALS, increase S-ILS 8 all Cats visibility to 1 SM. ▲		MALSR 	MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 on heading 320° and SJU VORTAC R-004 to DEEDY Int/SJU 15 DME and hold.		
D-ATIS 125.8	SAN JUAN APP CON 119.4 269.2 (WEST & SW) 120.9 290.2 (NORTH & EAST)	SAN JUAN TOWER 132.05 257.8	GND CON 121.9 348.6	CLNC DEL 126.4 284.6	CPDLC

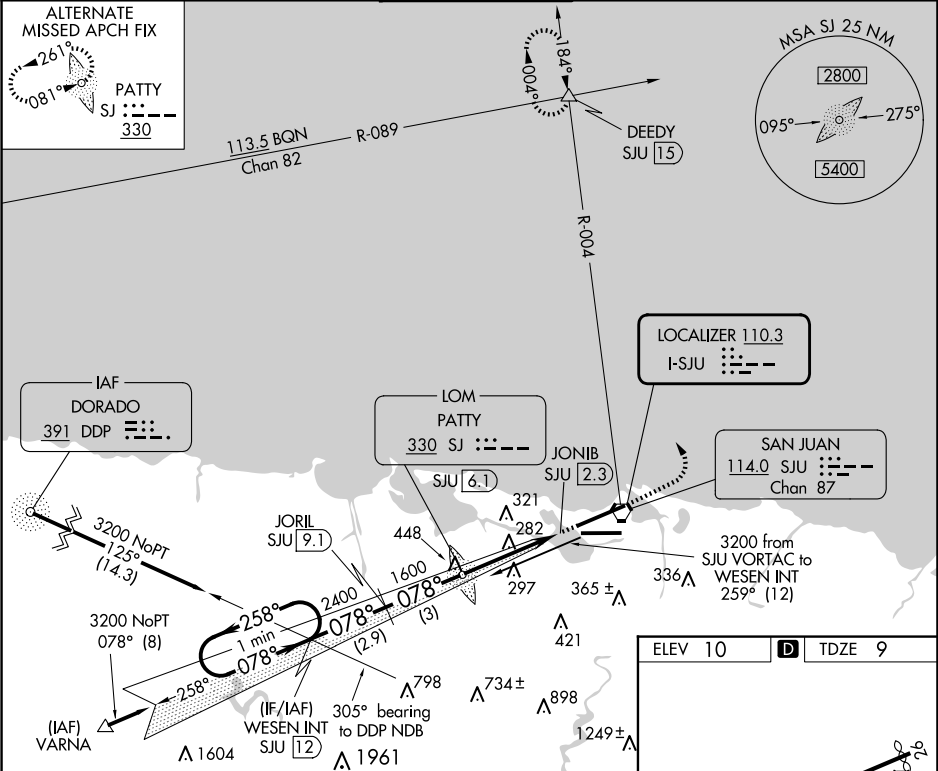

One Minute Holding Pattern

WESEN INT

SJU [12]

JORIL

SJU [9.1]

PATTY LOM

1541

2000

3000

hdg 320°

SJU R-004

DEEDY

△

3200

←258°

078°→

078°

2400

1600

ILS unusable 0.8 NM from threshold inbound.

JONIB

SJU [2.3]

GS 3.00°

TCH 46

VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 70).

2.9 NM

3 NM

3.8 NM

0.8

CATEGORY	A	B	C	D
S- ILS-8	311-½		302 (400-½)	
S- LOC-8	560-½	551 (600-½)	560-1 551 (600-1)	560-1¼ 551 (600-1¼)
CIRCLING	600-1	590 (600-1)	740-2 730 (800-2)	920-3 910 (1000-3)

