
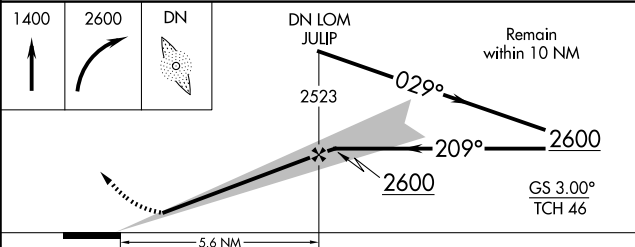


LOC	I-DNV	APP CRS	Rwy Idg	6006
	108.5	209°	TDZE	697
			Apt Elev	697

ILS or LOC RWY 21
VERMILION RGNL (DNV)

ADF required.	MALSR	MISSED APPROACH: Climb to 1400 then climbing right turn to 2600 direct JULIP LOM and hold, continue climb-in-hold to 2600.
NA Circling NA to Rwy 12 and 30.		

AWOS-3 119.275	CHAMPAIGN APP CON ★ 121.35 285.65	CLNC DEL 121.7	UNICOM 122.7 (CTAF) 0
-------------------	--------------------------------------	-------------------	--------------------------

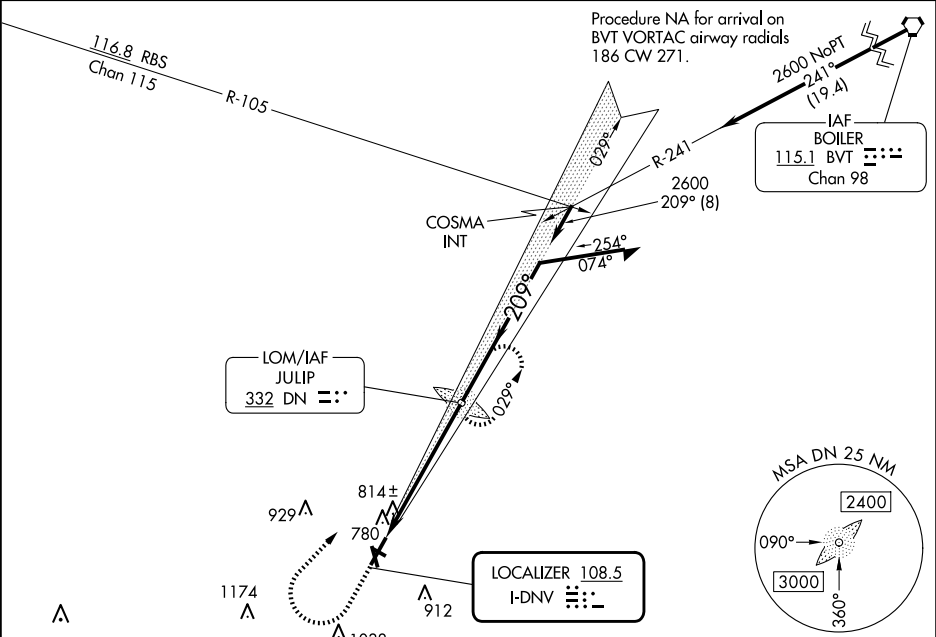

CATEGORY	A	B	C	D
S-ILS 21	897-1/2 200 (200-1/2)			
S-LOC 21	1080-1/2	383 (400-1/2)	1080-5/8	383 (400-5/8)
CIRCLING	1160-1	463 (500-1)	1240-1 1/2	1340-2
			543 (600-1 1/2)	643 (700-2)

