

VOR/DME SCB	APP CRS	Rwy Idg	4650
111.0	147°	TDZE	1204
Chan 47		Apt Elev	1204


VOR RWY 14
FREMONT MUNI (F'ET)

V VDP NA with Blair altimeter setting. Rwy 14 helicopter visibility reduction below 1 SM NA. When local altimeter setting not received, use Blair altimeter setting and increase all MDA 60 feet; increase S-14 Cat C visibility 1/8 mile. DME required.

NA

MISSED APPROACH: Climb to 3000 then left turn direct SCB VOR/DME and hold.

AWOS-3 121.275	OMAHA APP CON 135.875 354.05	UNICOM 122.8 (CTAF) 0
-------------------	---------------------------------	---------------------------------

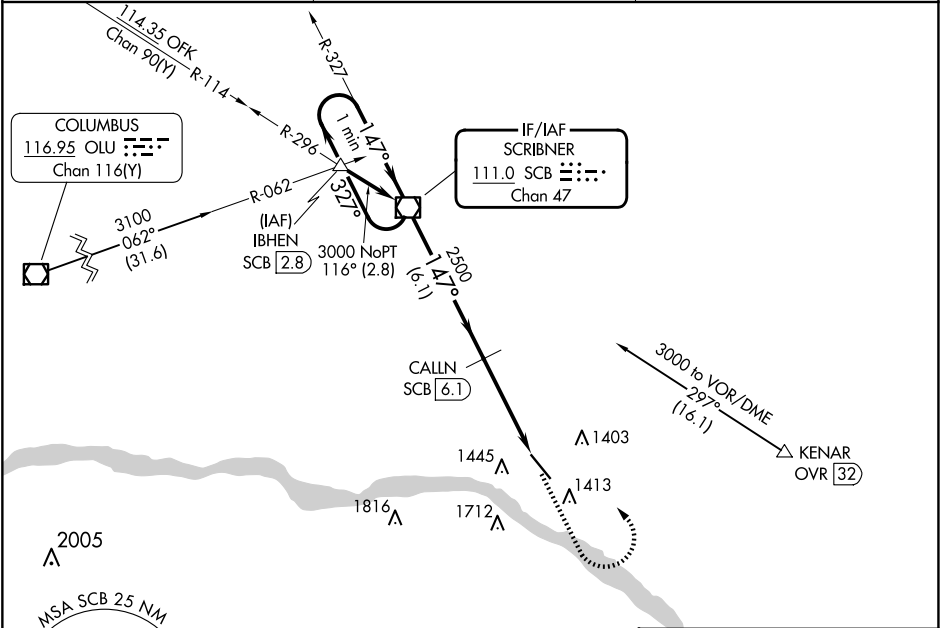

ELEV 1204 **D** TDZE 1204

147°
32°
6355x100
1260

One Minute Holding Pattern

SCB VOR/DME

CALLN SCB 6.1

3000

327°

147°

147°

2500

3.00° TCH 40

SCB 8.2

SCB 10

6.1 NM

2.1 NM

1.8 NM

CATEGORY	A	B	C	D
S-14	1820-1	616 (700-1)	1820-1 3/4 616 (700-1 3/4)	NA
C CIRCLING	1820-1	616 (700-1)	2020-2 1/2 816 (900-2 1/2)	NA

REIL Rwy 14 **0**

MRL Rwy 14-32

NC-2, 02 OCT 2025 to 30 OCT 2025

NC-2, 02 OCT 2025 to 30 OCT 2025